



PIE Tech

POLLACHI INSTITUTE OF ENGINEERING AND TECHNOLOGY

(Approved by **AICTE** and Affiliated to **Anna University**)

sky is the limit

Department of Mechanical Engineering

Regulation 2021
III Year – V Semester
CME 380- AUTOMOBILE ENGINEERING

CME 380 AUTOMOBILEENGINEERING

Objectives:

- The objective of this subject is to provide knowledge about various systems involved in automobile engine.
- Able to learn about different components of IC Engines.
- Different automobile engine systems line diagrams.

UNIT –I VEHICLE STRUCTURE AND ENGINES

Types of automobiles vehicle construction and different layouts, chassis, frame and body, Vehicle aerodynamics (various resistances and moments involved), IC engines components- functions and materials, variable valve timing (VVT).

UNIT –II ENGINE AUXILIARY SYSTEMS

Electronically controlled gasoline injection system for S I engines, Electronically controlled diesel injection system (Unit injector system, Rotary distributor type and common rail direct injection system), Electronic ignition system (Transistorized coil ignition system, capacitive discharge ignition system), Turbo chargers (WGT, VGT), Engine emission control by three way catalytic converter system, Emission norms (Euro and BS).

UNIT –III TRANSMISSION SYSTEMS

Clutch-types and construction, gear boxes- manual and automatic, gear shift mechanisms, Over drive, transfer box, fluid flywheel, torque converter, propellershaft, slip joints, universal joints, Differential and rear axle, Hotchkiss Drive and Torque Tube Drive.

UNIT –IV STEERING, BRAKES AND SUSPENSION SYSTEMS

Steering geometry and types of steering gear box- Power Steering, Types of Front Axle, Types of Suspension Systems, Pneumatic and Hydraulic Braking Systems, Antilock Braking System (ABS), electronic brake force distribution (EBD) and Traction Control.

UNIT –V ALTERNATIVE ENERGY SOURCES

Use of Natural Gas, Liquefied Petroleum Gas, Bio-diesel, Bio-ethanol, Gasohol and Hydrogen in Automobiles- Engine modifications required Performance, Combustion and Emission Characteristics of SI and CI engines with these alternate fuels- Electric and Hybrid Vehicles, Fuel Cells.

TEXTBOOKS:

1. Jain K. K. and Asthana R. B., Automobile Engineering Tata McGraw Hill Publishers, New Delhi, 2002.
2. Kirpal Singh, Automobile Engineering, Vol 1 & 2, Seventh Edition, Standard Publishers, New Delhi, 13th Edition 2014.

REFERENCEBOOKS:

1. Ganesan V. Internal Combustion Engines, Third Edition, Tata McGraw-Hill, 2012.
2. Heinz Heisler, Advanced Engine Technology, SAE International Publications USA, 1998.
3. Joseph Heitner, Automotive Mechanics, Second Edition, East-West Press, 1999.
4. Martin W, Stockel and Martin T Stockle, Automotive Mechanics Fundamentals, The Goodheart - Will Cox Company Inc, USA, 1978.
5. Newton, Steeds and Garet, Motor Vehicles, Butterworth Publishers, 1989.

OUTCOMES:

- The Automotive Engineering program aims to provide practice-oriented education based on the latest scientific results and methods.
- Which enable students to work independently as automotive engineers.
- Enable to face increasing challenges and standards of global markets.

UNITI
VEHICLE STRUCTURE AND
ENGINES

Introduction of Automobile or Vehicle:

An Automobile is a self-propelled vehicle which contains the power source for its propulsion and is used for carrying passengers and goods on the ground, such as car, bus, trucks, etc., **Types of**

Automobile:

The automobiles are classified by the following ways,

1. On the Basis of Load:

- Heavy transport vehicle (HTV) or heavy motor vehicle (HMV),
- Light transport vehicle (LTV), Light motor vehicle (LMV),

2. On the Basis of Wheels:

- Two wheel vehicle, for example: Scooter, motorcycle, scooty, etc.
- Three wheel vehicle, for example: Autorickshaw,
- Three wheel scooter for handicaps and tempo, etc.
- Four wheel vehicle, for example: Car, jeep, trucks, buses, etc.
- Six wheel vehicle, for example: Big trucks with two gear axles.

3. On the basis of Fuel Used:

- Petrol vehicle, e.g. motorcycle, scooter, cars, etc.
- Diesel vehicle, e.g. trucks, buses, etc.
- Electric vehicle which uses battery to drive.
- Steam vehicle, e.g. an engine which uses steam engine.
- Gas vehicle, e.g. LPG and CNG vehicles, where LPG is liquefied

4. On the basis of body style:

- Sedan Hatchback car.
- Coupe car Station wagon Convertible.
- Van Special purpose vehicle, e.g. ambulance, milk van, etc.

5. On the basis of Transmission:

- Conventional vehicles with manual transmission, e.g. car with 5 gears.

- Semi-automatic
- Automatic: In automatic transmission, gears are not required to be changed manually.

6. On the basis of Drive:

- Left hand drive
- Right hand drive

7. On the basis of Driving Axle

- Front wheel drive
- Rear wheel drive
- All wheel drive


8. Position of Engine:

- Engine in Front- Most of the vehicles have engine in the front. Example: most of the cars,
- Engine in the Rear Side Very few vehicles have engine Located in the rear.
Example: Nanocar.

Vehicle construction and Components;

The main components of an auto mobile refer to the following components;

- Frame,
- Chassis,
- Body,
- Power unit,
- Transmission system.

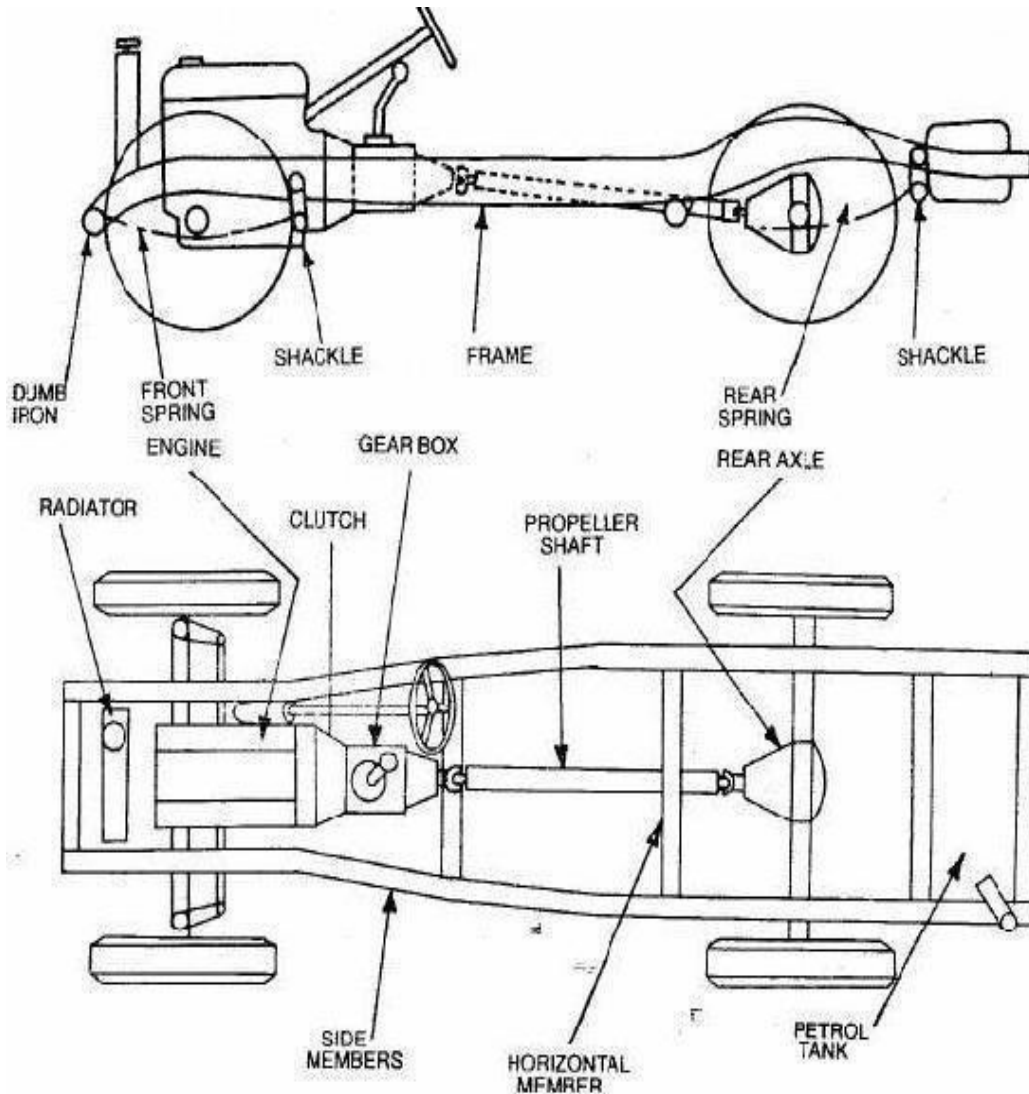

An automobile is made up of mainly two units, these are Chassis and Body.

—Frame+—Base components=—Chassis

—Chassis+—Body=Vehicle

- Chassis includes the following
 - Springs and Shock absorbers
 - Steering System
 - Brakes
 - Frame
 - Tyres and Wheels
- Transmission Units includes
 - Clutches
 - Gearbox
 - Universal Joint
 - Final Drive
 - Axle and Differential
- Engine Units Includes
 - Full System
 - Ignition System
 - Lubricating System
 - Cooling system
- Electrical System Includes
 - Battery
 - Dynamometre
 - Alternators
 - Ignition Starting and Lighting

Frame:

The frame is the skeleton of the vehicle. It serves as a main foundation and base for alignment for the chassis.

Types;

- Conventional frame,
- Semi-integral frame;
- Integral or unitized frame.

Conventional Frame

- Most of the heavy vehicles.
- Made up of steel section.
- 2 long side members & 5 to 6 cross members joined rivets or bolts.
- Cross members increased strength.
- Front – inswept (narrow): Steering lock, pivoting & swinging of the front wheels.
- Rear – upswept (Board): vertical movement of the rear axles, road bumps & inequalities.



Fig.1 Crosssection of ladder chassis

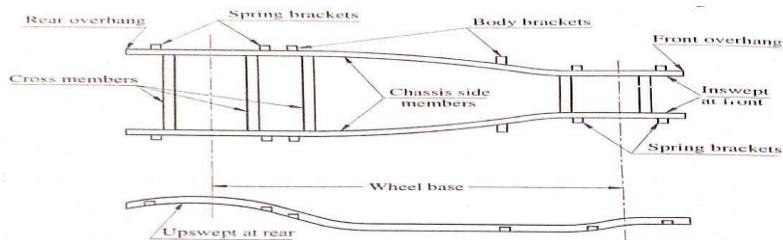


Fig.1(a) Ladder Chassis

Integral Frame

- In this type of construction, there is no frame. It is also called unitized frame-body construction.
- All the assembly units are attached to the body and all the functions of the frame are carried out by the body itself.
- Here the body shell and underbody are welded into a single unit. The underbody is made of floor plates and channel and box sections welded into a single unit. This assembly replaces the frame.
- This frame is used nowadays in most of the cars. Due to the elimination of a long frame, it is cheaper and due to less weight, it is most economical also.
- The main disadvantage is repairing.



Fig.2 Integral Frame

Semi Integral Frame

- In some vehicles half frame is fixed in the front end on which engine gear box and front suspension is mounted.
- In this case the rubber mountings used in conventional frame between frame and suspension are replaced by more stiff mountings.
- Because of this some of the vehicle load is shared by the frame also. This type of frame is heavier in construction.
- It has the advantage when the vehicle is met with accident the front frame can be taken easily to replace the damaged chassis frame.
- This type of frame is used in some of the European and American cars.



Fig.3 Semi Integral Frame

Chassis;

If the frame contains the base components its called as chassis. The components are like Engine, radiator, clutch, gearbox, silencer, road wheels, fuel tank, wirings, differential units, etc.,

FUNCTIONS OF A CHASSIS

1. Supports or bears the load of the vehicle body.
2. Provides the space and mounting location for various aggregates of vehicle.
3. Supports the weight of various systems of the vehicle such as engine, transmission etc.
4. Supports a load of passengers as well as the luggage.
5. Withstands the stresses arising due to bad road conditions.
6. Withstands stresses during braking and acceleration of the vehicle.

Types of Chassis

- i. Ladder Chassis
- ii. Tubular Chassis
- iii. Monocoque Chassis

Ladder Chassis

The ladder-frame chassis is one of the oldest chassis types. This chassis is characterised by two long heavy beams that are supported by two smaller ones. Its quality of being easily manufactured not only made it temporarily popular but also eased the way for its mass production. Since ladder frame chassis is significantly heavy it's usually used for vehicles that transport heavy material.

Benefits

- Easy to manufacture and easy assembling of the car over it.
- Heavy and strong tensile strength.

Drawbacks

- Poor cornering ability due to weak torsional rigidity
- Its heaviness doesn't make it suitable for performance cars and hatchbacks.

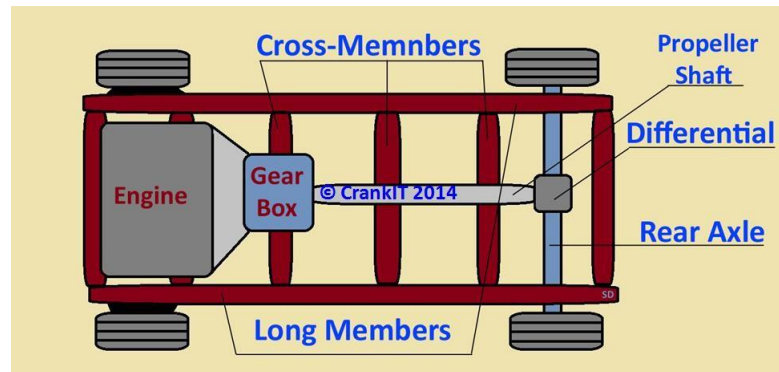


Fig.4 Ladder chassis frame layout

Tubular Chassis

- Tubular space frame chassis employs dozens of circular-section tubes (some may use square-section tubes for easier connection to the body panels, though circular section provides the maximum strength), positioned in different directions to provide mechanical strength against forces from anywhere.
- This type of chassis is mostly used while manufacturing racing cars due to the enhanced safety they offer.

Benefits

- Its crafting allows better contact between the half axle and ground making it preferable for off-roading.
- A cylindrical tube covering the driveshaft saves it from many damages while off-roading.
- The structure's torsional toughness is relatively more supple than ladder chassis.

Drawbacks

- In case the driveshaft fails, the whole chassis needs to be dismantled as the driveshaft is covered with the cylindrical tube of the chassis.
- The manufacture of backbone chassis is costly and increases the overall cost of the car.

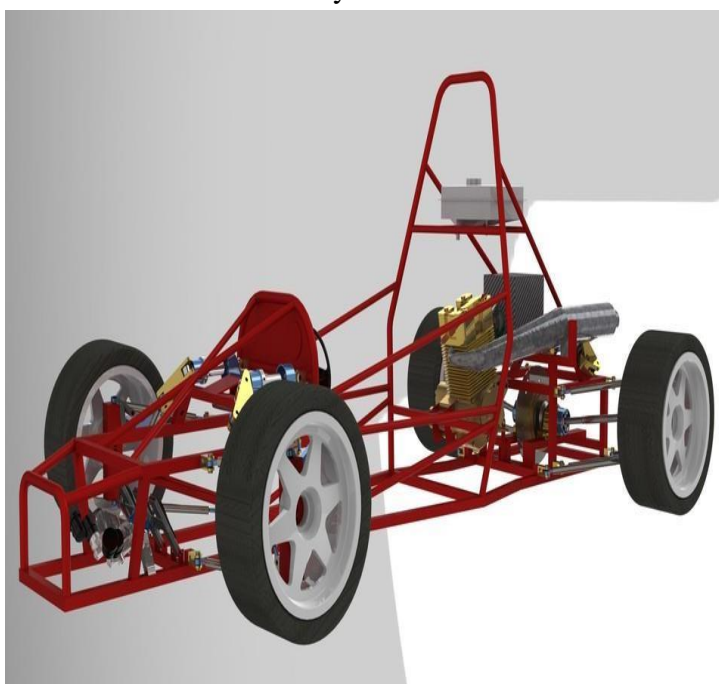


Fig.5 Tubular Chassis

Mono coque Chassis

- The construction of a monocoque chassis is quite simple in the sense that the entire structure is one big construction.
- All components or mechanical parts constitute the frame, foundation and body of the car.
- The engine, gearbox, suspension, seats and exterior body panels are simply attached to the construction. This means that the overall construction is very lightweight and compact. There is quite a lot of safety element to it.
- The applications include all sorts of everyday vehicles ranging from small and compact hatchbacks to large and heavy SUVs. It must be noted that modern SUVs are using monocoque construction quite a bit which was not always the case in the past

Benefits

- It's safer than both the other chassis due to its cage-like construction.
- The chassis is easy to repair as well.
- It has superior torsional rigidity.

Drawbacks

- The chassis is obviously heavy as it's both the frame and chassis as one single entity.
- Producing it in small quantities is not financially feasible and thus it cannot be used for cars that are not mass-produced.

Body:

- Body is the super-structure for all vehicles. It may either be constructed separately and bolted to the chassis or manufactured integral with the chassis (i.e. Frameless construction).
- The chassis and the body make the complete vehicle.
- A body consists of windows and doors, engine cover, roof, luggage cover etc. The electrical system in the body is connected to the chassis electrical units so that the battery and the generator/alternator can furnish the required electrical energy to the system.

Types;

- Car, Truck, Tractor, Delivery Van, Ambulance, jeep, Bus, etc.,

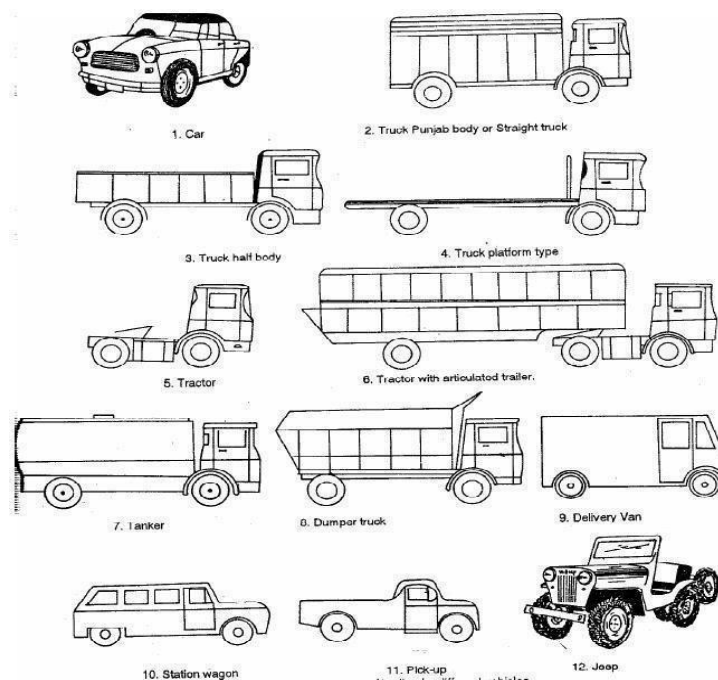


Fig.6. Body of various vehicles

Description of an Automobile

- **Type:** Motor Cycle, Car, Bus, truck, etc.,
- **Capacity:** Tonnage and no. of seats
- **Make:** Manufacturer of the vehicle and Engine Capacity
- **Drive:** Left hand Drive or Right hand Drive, 2, 4, 6 wheel drive
- **Model:** Year of Manufacturing

Layout of an Automobile

The different layout of an automobile are as follows

- Front Engine Rear Wheel Drive
- Front Engine Front Wheel Drive
- Rear Engine Rear Wheel Drive
- Four Wheel Drive (All Wheel Drive)

1. Front Engine Rear Wheel Drive

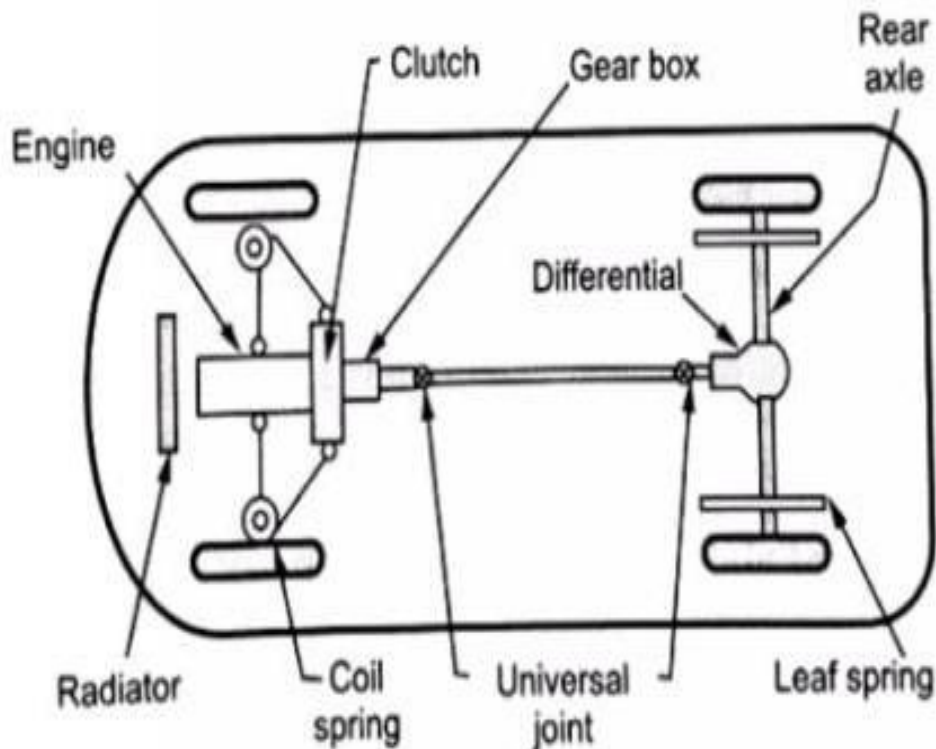


Fig.7 layout of Front engine rear wheel drive In this chassis layout, the engine is fitted at the front.

- The engine, clutch and gear box are fitted at front while drive to the rear axle is given with the help of propeller shaft
- This chassis layout is one of the oldest and still remain popular for heavy commercial vehicle

Advantages

1. The weight distribution is reasonably balanced between the front and rear wheels, which gives good handling characteristics.
2. Due to engine and radiator are at front, the forward facing radiator takes full benefit of the natural air stream, created by vehicle's movement. Hence reduce the power losses for a large fan.
3. The weight of vehicle is shifted to rear driving wheels during acceleration and on steep slopes resulting in better road grip, hence, there are less chances of wheel slipping.
4. Since the front wheel are used only to steer the vehicle, hence steering mechanism becomes simple in design and easy to operate.

5. Accessibility to various components like engine, gearbox and rear axle is better in comparison to other layout
6. Large luggage space is available at back of vehicle which providing increased carrying capacity as well as space for easy body extension.

Dis Advantages

1. During the breaking, weight of vehicle is fitted to front wheels and weight on rear wheels decreased, results in decreased breaking effort developed
2. It required long propeller shaft and differential at rear, therefore height of floor area is increased. Also, due to long propeller shaft transmission problems and weight are increased.
3. Due to less weight on driving rear wheels, there is less adhesion on road and result in less holding capacity. therefore there is less chance of skidding on slippery surface.

2. Front Engine Front Wheel Drive

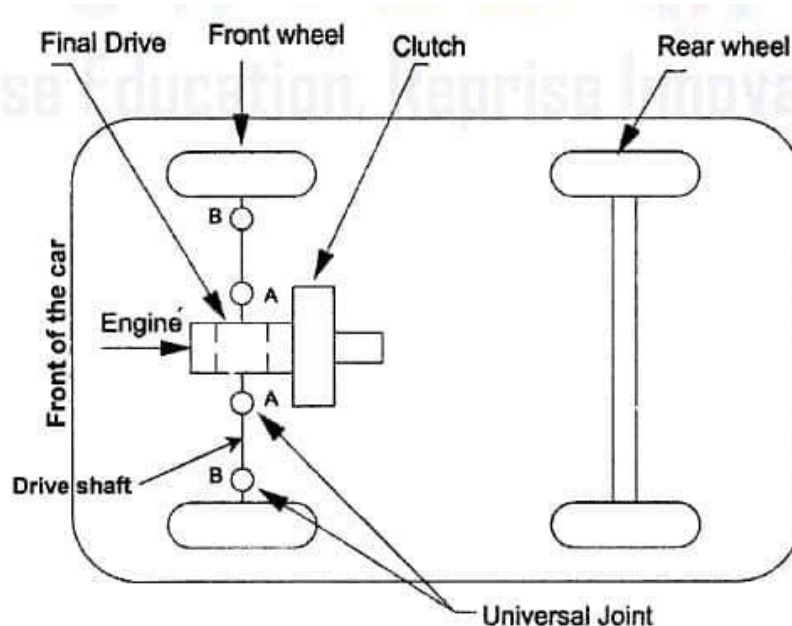


Fig.8 layout of Front engine Front wheel drive

1. In this type of chassis layout the engine is fitted at front and drive is also given to the front wheel. No propeller shaft is used in this layout and differential are included in the same assembly.
2. This layout provides optimum body luggage space and flat floor line. However, due to all assemblies at front, it makes very difficult to accommodate the steering mechanism.

Advantages

1. Due to more weight placed on driving front wheel, the vehicle has more adhesion on road. Hence good road holding capacity even on the curves and slippery roads.
2. This layout provides low floor, since no propeller shaft and the differential placed at front instead of rear.
3. The clutch, gearbox, and final drive usually made as one unit thereby cost of vehicle are reducing.
4. The wheel does not take to sharply turn into the curve due to tendency of understeering. The understeer conditions generally preferred by many drivers are promoted by this type of chassis.
5. Either a transverse or longitudinal engine position can be used. In case of transverse mounted engine, as the engine crankshaft and wheels already rotate in the parallel planes, therefore, they do not require their drive to be turned through 90° as in case of conventional longitudinally mounted engines.

Dis Advantages

1. The weight on the driving front wheels is reduced during acceleration and climbing of steep gradient due to weight of the vehicle shifting to the rear wheels. Hence, result in decreased tractive effort which makes slippery gradient

2. The steering mechanism becomes more complicated due to accommodation of engine, clutch, gearbox & final drive all at front of vehicle.

3. Rear Engine Rear Wheel Drive

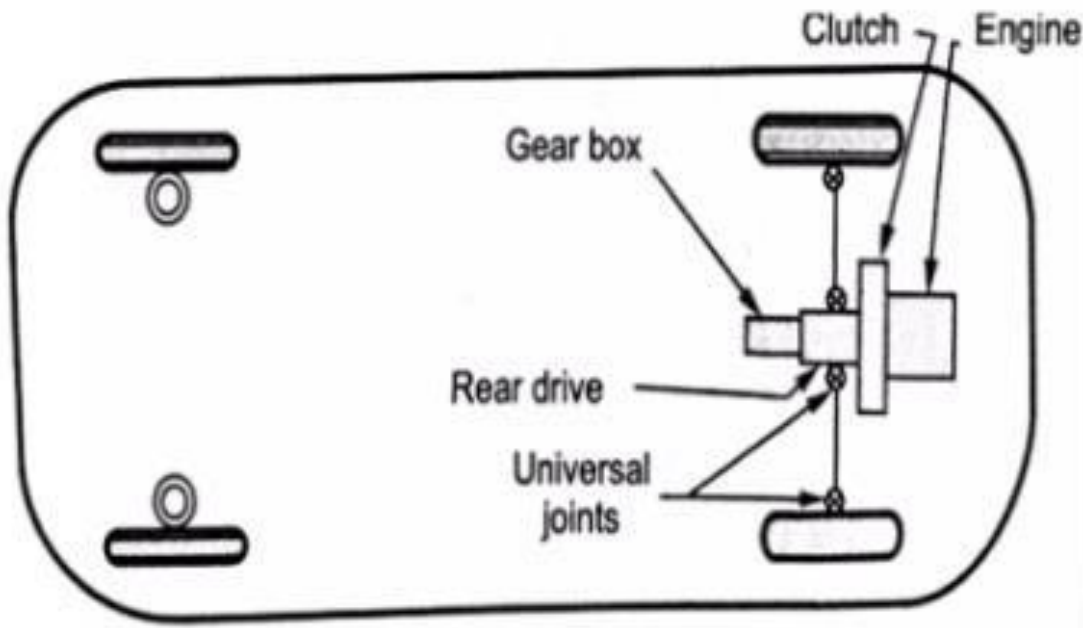


Fig.9 layout of Rear engine rear wheel drive

In this chassis layout engine is fitted at the back and drive is also given to rear wheel

- This arrangement eliminates the necessity for a propeller shaft because engine is mounted near the driven wheel.
- The passengers are kept away from inconveniences like noise, heat and fumes because engine is at the back of the vehicle

Advantages

1. Because of high weight on driving axle, it provides excellent traction and grip on steep hills
2. The rear floor can be made flat because of absence of propeller shaft.
3. The clutch, gearbox, and final drive usually made as one unit thereby cost of vehicle is reduced.
4. The driver's cabin is well isolated from noise
5. The front body can be designed with streamlining and stylish.

Dis Advantages

1. Natural air cooling of the engine is not possible, hence it requires a powerful radiator fan at the rear.
2. The clutch and gear system mechanism is long and complex
3. Because of high weight concentration at rear, the vehicle has a tendency to oversteer while taking sharp turns

4. Four Wheel Drive (All wheel Drive)

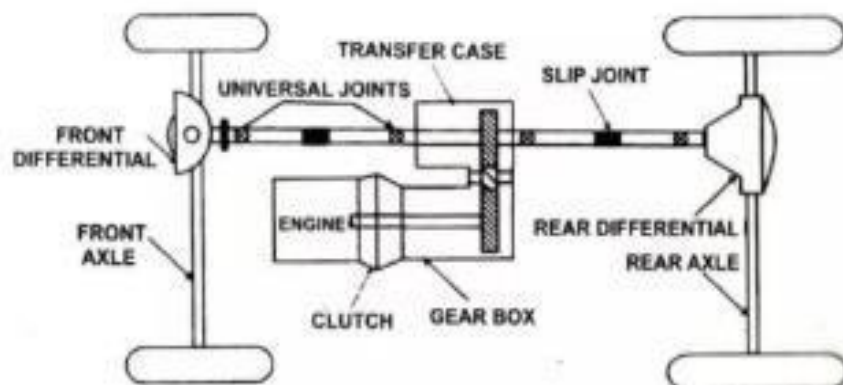


Fig.10 layout of All wheel drive

- 4X2=4Wheelvehicleand2Wheelscanreceivetorque.
- 4X4=4Wheelvehicleandall4Wheelscanreceivetorque.
- E.g. areJeeps,SUVs(SportsUtilityVehicle),etc.
- Gamesderiveditsnamefrom4WD only.
- Usedmostlyindefenseservicesorwheregraveledorslickroadsarepresent.
- Togetenough“TRACTION”betweenwheelsandroadsurfaces.
- Tomovevehicleonslicksurfaces,dirt,slipperyroads,sandroadsandsnowy, muddy roads etc.

Advantages

- IncreasedTractionisobtained inslippery surfaces.
- Morebalancedaxleloaddistribution.
- Eventirewear

DisAdvantages

- Weightofvehicleis increased.
- Costofthevehicleisincreased.
- Maximumspeedofvehicleis reduced.
- Lessfueleconomythan2WD

VehicleAero Dynamics

The term—Aero means air,—Dynamic means motion. Therefore, aerodynamic is the study of effects of the wind on the vehicle in motion.

When the vehicle is moving the airflow is dependent on the two factors.

- Vehicle speed.
- Ambient wind.

Advantages of Aerodynamics

- More Fuel Efficiency
- Higher Speeds
- Good Aesthetic and Stylish Appearance
- More Stability of car at high Speed
- Reduce Noise Level

Resistance of an Automobile

- ✓ A moving vehicle is opposed by various forces, known as resistance
- ✓ For moving the vehicle, the driving force (F) should be equal to the sum of all resistance forces applied on it.

$$F = R_a + R_r + R_g$$

- ✓ When $F >$ the sum of all resistance forces, vehicle accelerates
- ✓ When $F <$ the sum of all resistance forces, vehicle decelerates

Air Resistance (R_a): This is the resistance offered by air to the movement of a vehicle. The air resistance has an influence on the performance, ride and stability of the vehicle and depends upon the size and shape of the body of the vehicle, its speed and the wind velocity. The last term should be taken into account when indicated, otherwise it can be neglected. Hence in general, air resistance,

- It increases as the square of the vehicle speed owing to which much importance is given to streamlining and frontal area of modern automobiles. In calculating air resistance, air velocity is usually neglected.

Air resistance, $R_a = k_a AV^2$

where, k_a = Coefficient of air resistance,
 A = Projected frontal area, m^2 , and
 V = Vehicle speed, km/h.

Rolling Resistance (R_r): The magnitude of rolling resistance depends mainly on

- the nature of road surface,
- the type of tyre viz. pneumatic or solid rubber type,
- the weight of the vehicle, and
- the speed of the vehicle

- It is measured in kg or N and is expressed as kg/tonne or N/tonne of vehicle weight or as a percentage of the vehicle weight. Rolling resistance on average type of road surface is between 1 to 2% of vehicle weight.

Rolling resistance, $R_r = k_r W$

where, k_r = Constant of rolling resistance, and
 W = Total weight of vehicle.

Gradient Resistance (R_g): The resistance due to steepness of the road gradient. It depends upon the weight of the vehicle and road gradient. It does not depend upon vehicle speed.

- Gradient resistance, $R_g = \frac{W}{G}$, or, $W \sin \theta$

(if gradient is expressed in angular dimensions)

where, W = Total weight of vehicle,

G = Gradient, and

θ = Inclination. (For small values, $\tan \theta = \sin \theta$)

MOMENTS DUE TO FORCES: Moments created by forces acting on the vehicle

Rolling Moment – Created by crosswind about x-axis

Pitching moment – Created by drag or lift force about y-axis and reduces the traction in the wheels

Yawing moment – Created by crosswind about z-axis

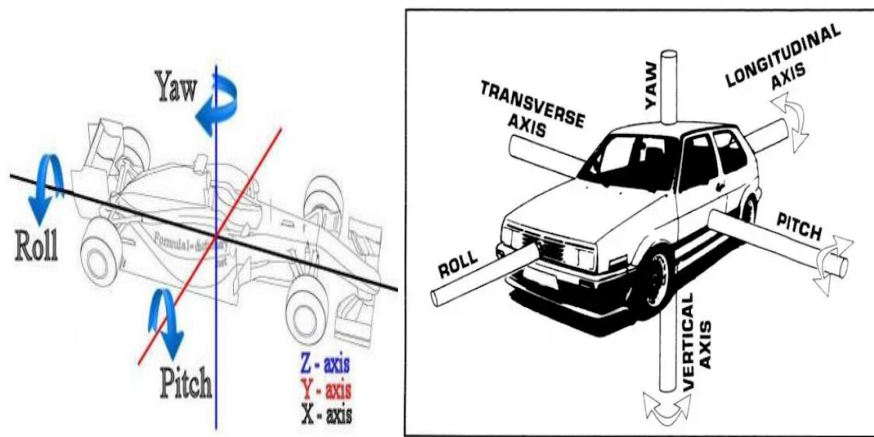


Fig.11 Moments of Forces acting on the Body

Components of an Engine:

Even though reciprocating internal combustion engines look quite simple, there are hundreds of components that have to perform their functions satisfactorily to produce output power. There are two types of engines, viz., spark ignition (SI) and compression-ignition (CI) engine. Let us now go through the important engine components and the nomenclature associated with an engine.

Terms connected with I.C. engines;

Bore: The inside diameter of the cylinder is called bore

Stroke: The linear distance along the cylinder axis between two limiting positions is called stroke.

Top Dead Center (T.D.C.): the top most position of the piston towards cover end side of the cylinder is called T.D.C.

Bottom dead Center (B.D.C.): The lowest position of the piston towards the crank end side of the cylinder is called B.D.C.

Clearance Volume: The volume contained in the cylinder above the top of the piston, when the piston is at top dead center, is called the clearance volume.

Swept Volume: The volume swept through by the piston in moving between T.D.C. and B.D.C. is called swept volume or piston displacement.

Compression Ratio: It is the ratio of Total cylinder volume to clearance volume.

Definition of 'Engine'

An engine is a device, which transforms one form of energy into another form. Normally, most of the engines convert thermal energy into mechanical work and therefore they are called 'heat engines'.

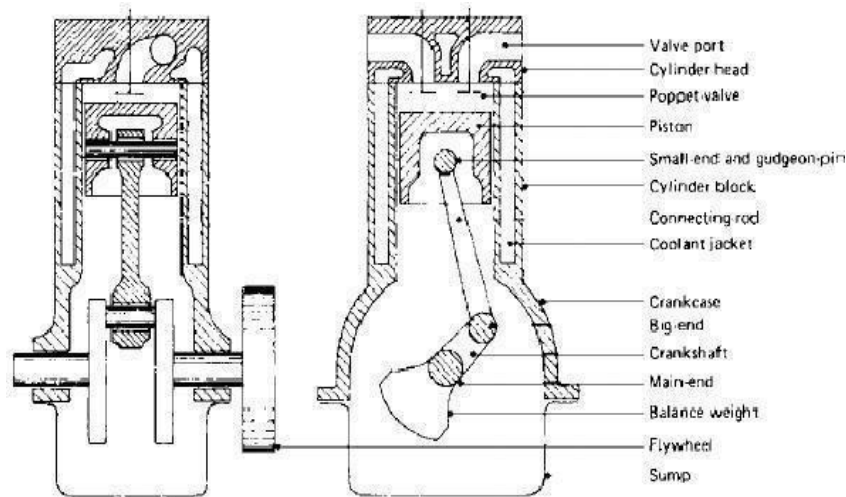


Fig.12 parts of an I.C. Engine

Engine Components

The major components of the engine and their functions are briefly described below.

Cylinder Block:

The cylinder block is the main supporting structure for the various components. The cylinder of a multi cylinder engine is cast as a single unit, called cylinder block. The cylinder head is mounted on the cylinder block.

The cylinder head and cylinder block are provided with water jackets in the case of water-cooling with cooling fins in the case of air-cooling. Cylinder head gasket is incorporated between the cylinder block and cylinder head. The cylinder head is held tight to the cylinder block by number of bolts or studs. The bottom portion of the cylinder block is called crankcase. A cover called crankcase, which becomes a sump for lubricating oil is fastened to the bottom of the crankcase. The inner surface of the cylinder block, which is machined and finished accurately to cylindrical shape, is called bore or face.

Cylinder

As the name implies it is a cylindrical vessel or space in which the piston makes a reciprocating motion. The varying volume created in the cylinder during the operation of the engine is filled with the working fluid and subjected to different thermodynamic processes. The cylinder is supported in the cylinder block.

Piston

It is a cylindrical component fitted into the cylinder forming the moving boundary of the combustion system. It fits perfectly (snugly) into the cylinder providing a gas-tight space with the piston rings and the lubricant. It forms the first link in transmitting the gas forces to the output shaft.

Combustion Chamber

The space enclosed in the upper part of the cylinder, by the cylinder head and the piston top during the combustion process, is called the combustion chamber. The combustion of fuel and the consequent release of thermal energy results in the building up of pressure in this part of the cylinder.

Inlet Manifold

The pipe which connects the intake system to the inlet valve of the engine and through which air or air-fuel mixture is drawn into the cylinder is called the inlet manifold.

Gudgeon Pin

It forms the link between the small end of the connecting rod and the piston.

Exhaust Manifold

The pipe that connects the exhaust system to the exhaust valve of the engine and through which the products of combustion escape into the atmosphere is called the exhaust manifold.

Inlet and Exhaust Valves

Valves are commonly mushroom shaped poppet type. They are provided either on the cylinder

head or on the side of the cylinder for regulating the charge coming into the cylinder (inlet valve) and for discharging the products of combustion (exhaust valve) from the cylinder.

Connecting Rod

It interconnects the piston and the crankshaft and transmits the gas forces from the piston to the crankshaft. The two ends of the connecting rod are called as small end and the big end. Small end is connected to the piston by gudgeon pin and the big end is connected to the crankshaft by crank pin.

Crankshaft

It converts the reciprocating motion of the piston into useful rotary motion of the output shaft. In the crankshaft of a single cylinder engine there is pair of crank arms and balance weights. The balance weights are provided for static and dynamic balancing of the rotating system. The crankshaft is enclosed in a crankcase.

Piston Rings

Piston rings, fitted into the slots around the piston, provide a tight seal between the piston and the cylinder wall thus preventing leakage of combustion gases.

Camshaft

The camshaft and its associated parts control the opening and closing of the two valves. The associated parts are push rods, rocker arms, valve springs and tappets. This shaft also provides the drive to the ignition system. The camshaft is driven by the crankshaft through timing gears.

Cams

These are made as integral parts of the camshaft and are designed in such a way to open the valves at the correct timing and to keep them open for the necessary duration.

Flywheel

The net torque imparted to the crankshaft during one complete cycle of operation of the engine fluctuates causing a change in the angular velocity of the shaft. In order to achieve a uniform torque an inertia *mass* in the form of a wheel is attached to the output shaft and this wheel is called the flywheel.

Basic Parts of the Gasoline Engine:

Basic Parts of the Gasoline Engine are listed below;

- Cylinder block
- Piston
- Piston rings
- Piston pin
- Connecting rod
- Crankshaft
- Cylinder head
- Intake valve
- Exhaust valve
- Camshaft
- Timing gears
- Spark plug

Cylinder Block:

Cylinder Block Basic frame of gasoline engine. Contains the cylinder.

Piston:

Piston A sliding plug that harnesses the force of the burning gases in the cylinder.

Piston Rings:

Piston rings seal the compression gases above the piston and keep the oil below the piston rings.

Piston Pins:

Piston Pins Also known as the wrist pin, it connects the piston to the small end of the connecting rod.

It transfers the force and allows the rod to swing back and forth.

Connecting Rod:

Connecting Rod Connects the piston and piston pin to the crankshaft.

Crankshaft:

Crankshaft Along the piston pin and connecting rod it converts the up and down motion (reciprocating) of the engine to spinning (rotary) motion.

Flywheel:

Flywheel Carries the inertia when there is no power stroke.

Cylinder Head:

Cylinder Head Forms the top of the combustion chamber. Contains the valves, the passageways for the fuel mixture to move in and out of the engine.

Intake and Exhaust Valves:

Intake and Exhaust Valves Doorway that lets the gases in and out of the engine.

Camshaft:

Camshaft Through the use of an eccentric cam lobe it pushes the valves open. The valve springs close them.

Timing Gears:

Timing Gears These gears drive the camshaft from the crankshaft.

Variable Valve Timing

It is inherent to the operation of internal combustion engines to possess inlet and exhaust valves (4-stroke) or ports (2-stroke) for proper functioning. The idea here is to entrap the incoming fresh charge in a well-designed combustion chamber and then initiate ignition in order to release and convert the stored fuel chemical energy into the thermal energy. Subsequent to this release of energy, a mechanical system, such as piston-connecting-rod-crankshaft, is needed for conversion of the thermal energy into the mechanical energy of the crankshaft. The incoming fresh charge usually consists of fuel, air, and possibly exhaust gas recirculated (EGR) chemical species. EGR is used for nitric oxide (NO_x) emission control purposes. In this scenario, the roles that valves, particularly the intake valves, play are critical for the engine's efficient operation, optimum performance, and minimization of pollutants emission. In this tutorial, these aspects are addressed in a concise manner.

Historically speaking, many different types of valves and valve actuation mechanisms have

been tried in the past. Most have disappeared to the point that at present time nearly all 4-stroke engines use poppet valves opened by a cam and closed by a spring. A typical valve timing for a 4-stroke engine is shown in Fig. 1. At wide open throttle operation of an SI engine, the exhaust gases rushing out of the exhaust valve can assist pulling fresh charge into the cylinder (moving the intake manifold fresh charge even before the piston has moved appreciably), therefore justifying opening of the intake valve (IVO) even before TDC, see Fig. 1. At part load operation, however, situation is a bit more complex and the below-atmospheric pressure recreated by the partially open throttle valve can become less than the chamber pressure at the time when intake valve is opened. This causes backflow of burned gases from the cylinder into the intake system during the valve overlap period. The overlap period is the time during which both intake and exhaust valves are open (intake is being opened and exhaust being closed). Too early IVO will also cause fresh charge to be lost out of the exhaust, for example, NASCAR engines.

At the closing, it is customary to delay the IVC beyond the BDC to take advantage of the inertia of the fresh charge rushing into the engine, see Fig. 1. This will increase what is referred to as the —volumetric efficiency‖ of the engine. The volumetric efficiency indicates the breathing ability of the engine and is defined as the actual mass of the fresh air trapped in the cylinder (after valves are closed) divided by the theoretical mass of air calculated based on the piston displacement volume. The higher the volumetric efficiency, the higher the engine ability to trap fresh air, providing opportunity for combustion of a more mass of fuel on account of a more entrapped oxygen, thereby producing higher power for the same piston displacement. Furthermore, the engine brake power rises and then falls off with speed for a number of reasons: mainly the fall in volumetric efficiency, and the fall in mechanical efficiency. The delayed closure of the intake valve for achieving higher volumetric efficiency usually works best at higher engine speeds due to sufficiently high inertia of the incoming fresh charge. Note that the IVO does also affect the volumetric efficiency through the magnitude of the backflow into the intake system mentioned earlier.

In engines, even though attempts are made to thoroughly scavenge the chamber from burned gases, there is always a certain amount of burned gases left to be mixed with the incoming fresh charge. As far as the combustion (really, flame burning rate) is concerned, the amount of this residual burned gases left from the previous cycle combustion is not desirable. The higher the quantity of residual burned gases, the slower the flame mass burning rate. It is known that increases in the valve overlap period will elevate the fraction of the residual gases in the entrapped charge. Also, past research indicates that the amount of the residual gases correlates inversely with the engine load (i.e. throttle valve position in SI engines), being maximum at idle condition. This is the primary reason for engine stability problems at idle condition. It should therefore be clear that the valve overlap period can affect engine stability and hence

efficiency. On the positive side, this residual gases is useful to lower the burned gases temperature after combustion is complete, reducing the NO_x emissions. Figure 2 shows effects of the valve overlap period on emissions of NO_x and hydrocarbon (HC) at two different engine loads.

In summary, adjustments in valve timing (usually achieved by camshaft phasing) affect the raw emissions, engine torque/power, and idle stability. However, researchers have shown benefits in tailoring valve lift profile, primarily to achieve higher efficiency and power, although emission benefits were also seen. Combination of adjustments in valve timing and changes in valve lift are being used to influence both emission levels and engine efficiency and, hence, fuel economy. Finally, potential of SI engine load control is being considered through variable lift designs. Research has shown that improvements in fuel economy and emission can be achieved through an optimized combination of variable valve timing and lift, see Fig. 3. To conclude, the adjustment of the valve timing in spark-ignited (SI) engines is dictated by a set of conflicting targets and goals. These goals cannot be achieved with fixed valve timing. Systems that provide variable timing and lift have recently found widespread use in engine design.

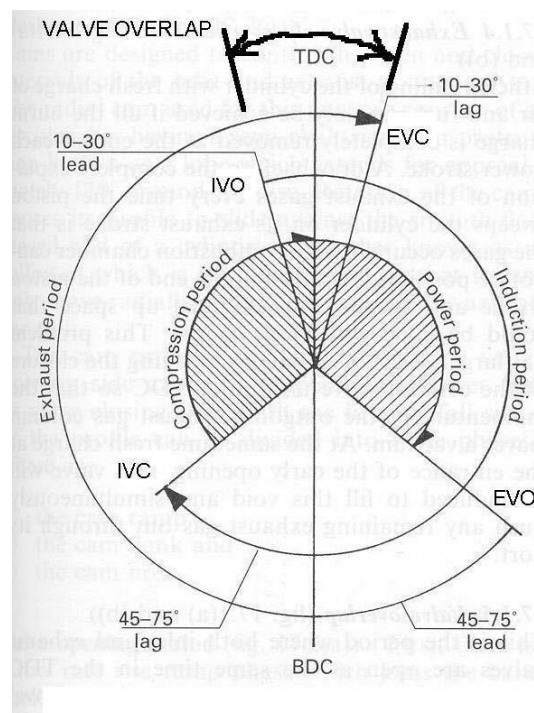


Figure 13. Indicates positions of intake and exhaust valves openings and closures with respect to the top-dead and bottom-dead centers, TDC and BDC respectively. TDC and BDC indicate the uppermost and lowermost positions of the piston on the diagram. The angles shown are crankshaft angles. EVO and EVC are exhaust valve opening and closures angles.

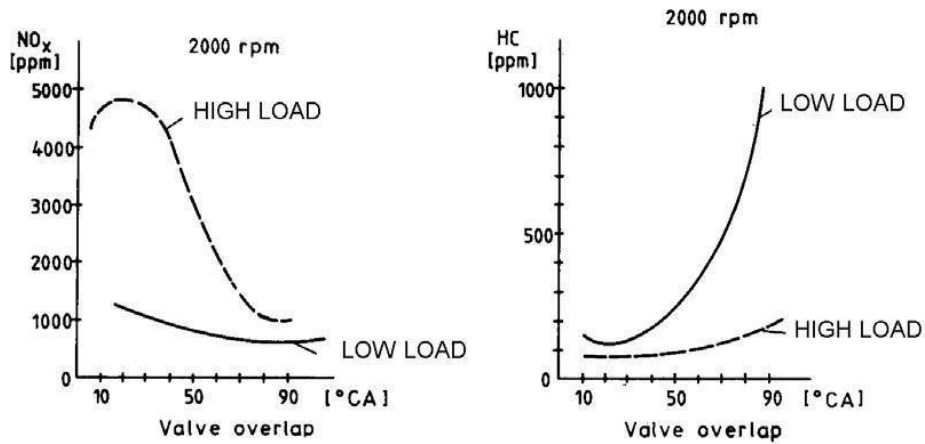


Figure 14. Effects of valve overlap on emission of pollutants at 2000 rpm and two different engine loads. HC and NO_x are hydrocarbon and nitric oxides emissions.

UNITII

ENGINE AUXILIARY SYSTEMS

UNIT-II

ENGINE AUXILIARY SYSTEMS

Electronic Controlled Gasoline (Petrol) Injection System (ECGIS)

The electronic fuel injector system consists of three different systems for the basic operation of ECGIS

1. Fuel Delivery System
2. Air Induction system
3. Electronic Control System

Fuel delivery system:

- The Fuel delivery system consists of Fuel tank, fuel pump, fuel filter, Fuel delivery pipe, fuel injector, fuel pressure regulator and fuel return pipe
- Fuel is delivered from the tank to the injector by means of an electric fuel pump. The pump is typically located in or near to the tank. Contaminants are filtered out by a high capacity in line fuel filter.
- Fuel is maintained at a constant pressure by means of a fuel pressure regulator. Any fuel which is not delivered to the intake manifold by the injector is returned to the tank through a fuel return pipe.

Air induction system:

- The air induction system consists of the air cleaner, air flow metre, throttle valve, air intake chamber, intake manifold runner and intake valve.
- When the throttle valve is opened, air flows through the air cleaner, through the air flow meter (on L type system), past the throttle valve and through a well-tuned intake manifold runner to the intake valve.
- Air delivered to the engine is a function of driver demand. As the throttle valve is opened further, more air is allowed to enter the engine cylinders.

Electronic control system (ECS):

- The ECS consists of various engine sensors, Electronic control unit, Fuel injector assemblies and related wiring.
- The ECS determines precisely how much fuel needs to be delivered by the injector by monitoring the engine sensors.
- The ECS turns the injector for a precise amount of time, referred to as injection pulse width or injection duration, to deliver fuel so that proper air/fuel ratio is delivered to the engine.

Basic Operation of ECGIS

- Air enters the engine through the air induction system where it is measured by the air flow meter. As the air flows into the cylinder, fuel is mixed into the air by the fuel injector.
- Fuel injector is arranged in the intake manifold behind each intake valve. The injector is electrical solenoids which are operated by the ECU.
- The ECU pulses the injector by switching the injector ground circuit on and off.

- When the injector is turned on, it opens, spraying atomized fuel at the back side of the intake valve.
- As the Fuel is sprayed into the intake air stream, it mixes with the incoming air and vaporizes due to the low pressures in the intake manifold. The ECU signals the injector to deliver just enough fuel to achieve an ideal air/fuel ratio of 14.7:1, often referred to as stoichiometric ratio.
- The precise amount of fuel delivered to the engine is a function of ECU control. The ECU determines the basic injection quantity based upon measured intake air volume and engine rpm.
- Depending on engine operating conditions, injection quantity will vary. The ECU monitors variables such as coolant temperature, engine speed, throttle angle and exhaust oxygen content and makes injection corrections which determine final injection quantity.

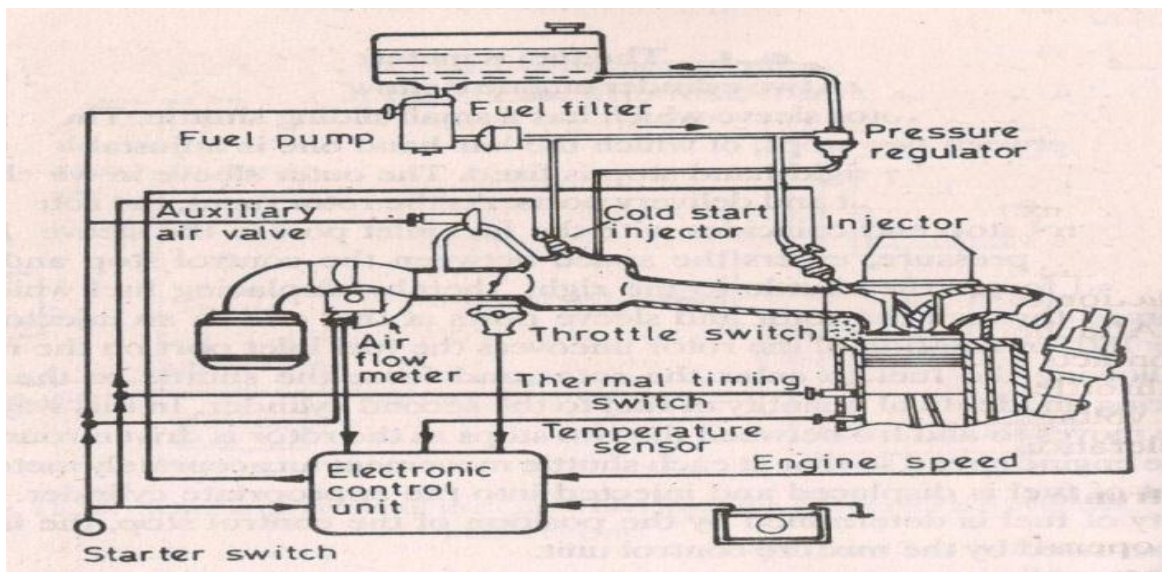


Fig.1 Electronic control gasoline injection system-L-Jetronic with air flow meter

Advantages of Electronic Controlled Gasoline (Petrol) Injection System

- Uniform Fuel/Air mixture distribution
- High Accurate Fuel/Air Ration Control
- Superior Throttle Response and Control
- Excellent Fuel Economy
- Improved Cold engine Startability
- Simple Mechanics and Reduced Adjustment Sensitivity.

Single Point Injector System

- It has only one injector that injects the fuel before entering into the intake manifold.
- In this system, the fuel is mixed with fuel before the throttle valve. The single-point fuel injection system is also known as throttle body injection.
- The amount of fuel to be injected is decided by the engine control unit. The engine control unit takes the input from different sensors and decides the amount of fuel to be supplied for the injection.
- The fuel injector sprays the fuel for mixing with the flow of air and this air-fuel mixture enters the intake manifold.

The intake manifold further distributes the mixture to all cylinders.

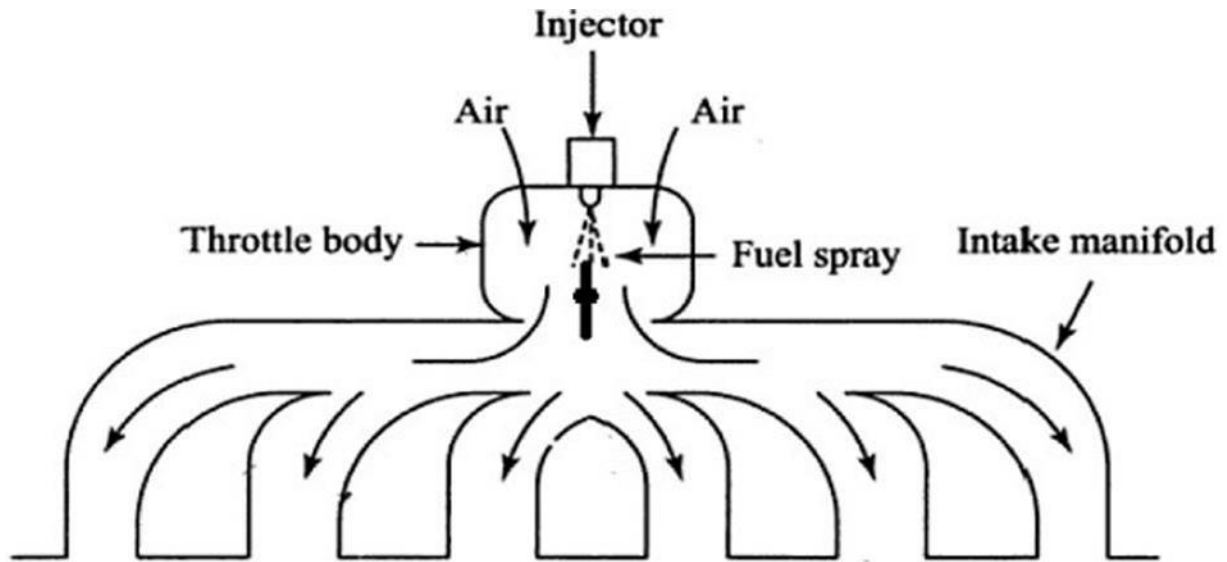


Fig. Throttle body injection (Single point)

Advantages


- Simple construction.
- Accurate fuel supply (in comparison with carburetor).
- Easy maintenance.
- It uses only a single injector.
- Reliable operation

Dis Advantages


- Ununiform fuel supply to all cylinders.
- Less efficient.
- It wets the intake manifold by forming a layer of fuel on the intake manifold.
- Lower fuel economy.

Multi Point Fuel Injection System

- In multi-point fuel injection (MPFI) technology, every cylinder in the combustion chamber of the engine is given an injector at the front of their inlet valves (outside the intake port), which is why it's also called 'Port Injection'.
- Every injector sprays fuel at the same time and each cylinder gets a more precise volume of fuel, with less possibility of fuel condensation outside the intake manifold. While MPFI has the advantage of lower fuel wastage as compared to TBI, since the fuel is sprayed at the same time in all the cylinders, it doesn't get properly synced with the rotation of all the pistons. This results in the fuel idling in the engine and port for as long as 150 milliseconds. All the same, from the performance point of view, the MPFIs function much better as compared to TBIs.

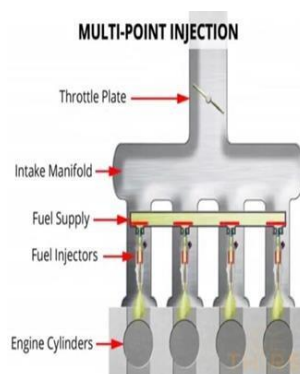

Multiple point injection with plenum

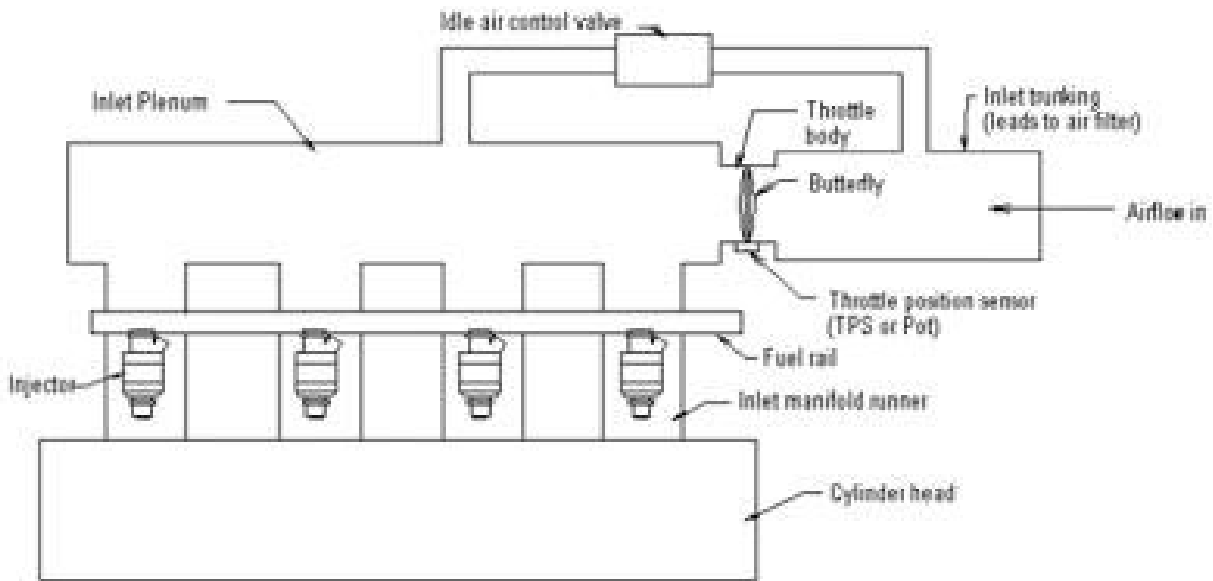


Advantages

- The system is reliable
- It reduces the difference in power that each cylinder creates.
- It increases the fuel efficiency of an engine
- Better atomization of fuel
- MPFI systems have fewer emissions
- Better utilization and distribution of fuel within an engine.
- Better acceleration and deceleration of engine
- It improves the cold start properties of the engine
- Vibrations are reduced in the engine
- Improves durability and functionality of an engine

Dis Advantages

- Misfiring might occur sometimes
- It requires regular inspection of fuel injectors
- The system is expensive compared to conventional systems.
- Repairing fuel injectors can be tedious compared to carburetors
- The system usually has a shorter life.
- ECU failure could occur suddenly.
- A hot engine might be difficult to start due to possible vapor lock in the steel fuel lines above the engine.

Electronically Controlled Diesel Injection System

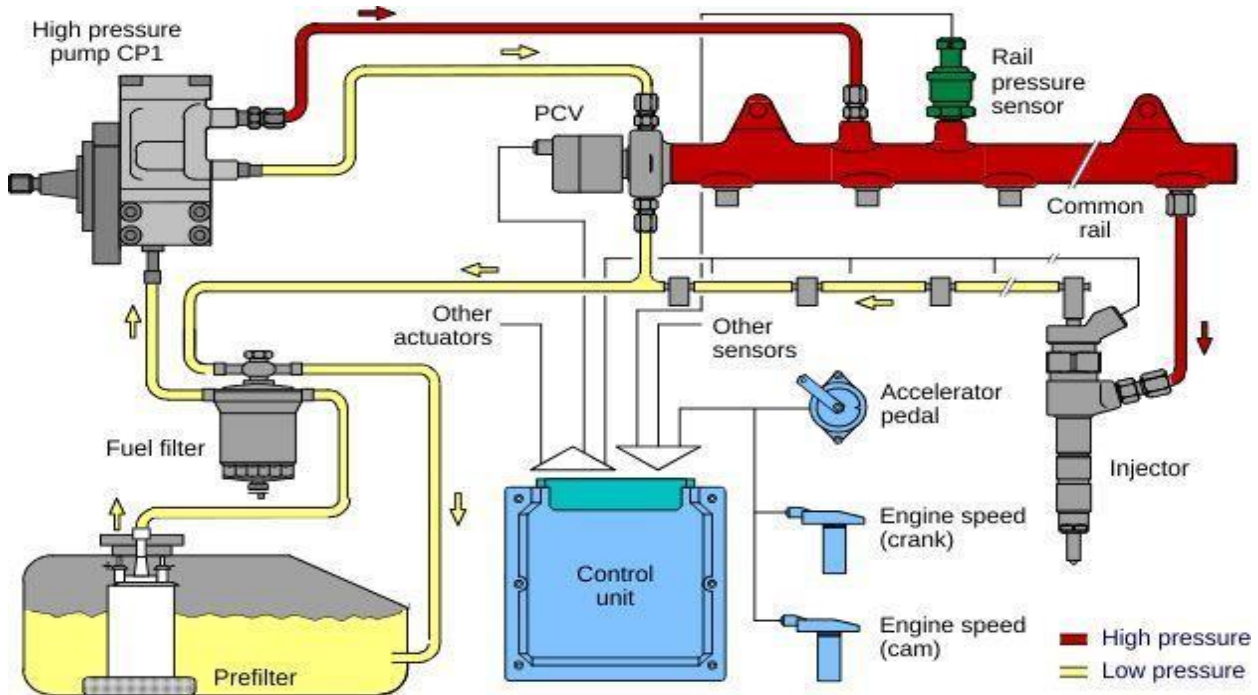

The function of the diesel fuel system is to inject a precise amount of atomized and pressurized fuel into each engine cylinder at the proper time. Combustion in a diesel engine occurs when this rush of fuel is mixed with hot compressed air.


Parts of Diesel Injection System

- **Fuel Tank:** There are many different types and shapes of fuel tanks. Each size and shape is designed for a specific purpose. The fuel tank must be capable of storing enough fuel to operate the engine for a reasonable length of time. The tank must be closed to prevent contamination by foreign objects. It must also be vented to allow air to enter, replacing any fuel demanded by the engine. Three other tank openings are required--one to fill, one to discharge, and one to drain.
- **Fuel Lines:** There are three types of diesel fuel lines. These include heavyweight lines for the high pressures found between the injection pump and the injectors, medium weight lines for the light or medium fuel pressures found between the fuel tank and injection pump, and lightweight lines where there is little or no pressure.
- **Fuel Filters:** Diesel fuel must be filtered not once, but several times in most systems. A typical system might have three stages of progressive filters--a filter screen at the tank or transfer pump, a primary fuel filter, and a secondary fuel filter. In series filters, all the fuel goes through one filter and then through the other. In parallel filters, part of the fuel goes through each filter.
- **Fuel Transfer Pump:** Simple fuel systems use gravity or air pressure to get fuel from the tank to the injection pump. On modern high-speed diesel engines, a fuel transfer pump is normally used. This pump, driven by the engine, supplies fuel automatically to the diesel injection system. The pump often has a hand primer lever for bleeding air from the system. Modern injection pumps are almost all jerk pumps that use the plunger and cam method of fuel injection.
- **Fuel Injection Systems:** There are four primary systems for injecting fuel:
 1. Individual pump and injector for each cylinder
 2. Combined pump and injector for each cylinder (*unit injector type*)
 3. One pump serving injectors for several cylinders (*distributor type*)

4. Pumps in a common housing with injectors for each cylinder (*common rail system*)

- The common rail system is rapidly gaining popularity for on-road applications. The in-line and distributor types are used on off-road vehicles and industrial machines.
- **Fuel Injector:** Diesel fuel injectors are arguably the most important fuel system component. The job of the injectors is to deliver a precise amount of atomized and pressurized fuel into each cylinder. Highly atomized, pressurized fuel distributed evenly throughout the cylinder results in increased power and fuel economy, decreased engine noise, and smoother operation.

Classification of Diesel Injector System

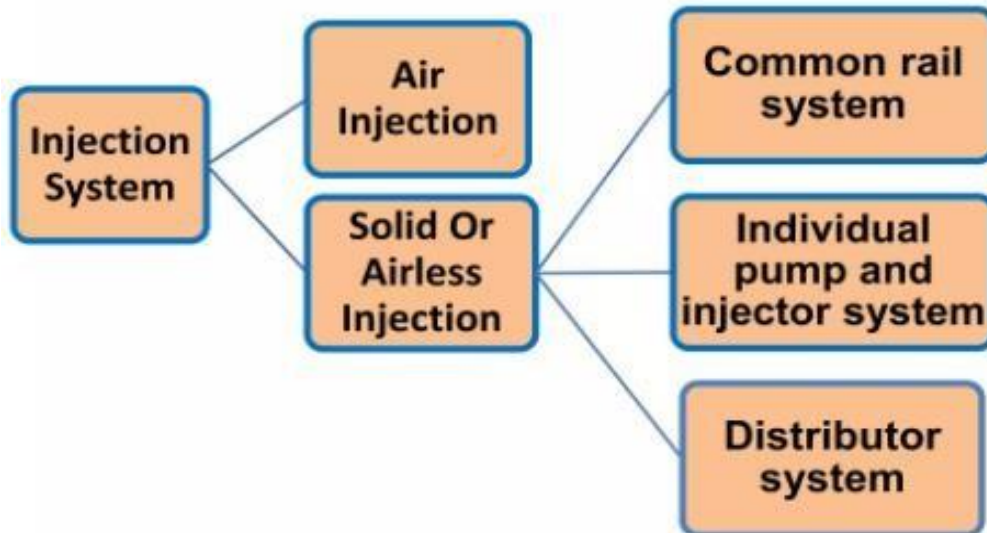

Air Injection system

➤ In this system fuel is injected along with high pressure air into combustion chamber. The pressure of this air is about 70 bar. A multistage air compressor is required to supply the blast of air at high pressures. A fuel pump draws fuel from fuel tank through a filter and discharge a definite quantity into an injector. The high pressure air from compressor is also led to the injector valve which force the fuel, through the nozzle, when it is opened mechanically.

➤ This type of system is not used now-a-days in diesel engines.

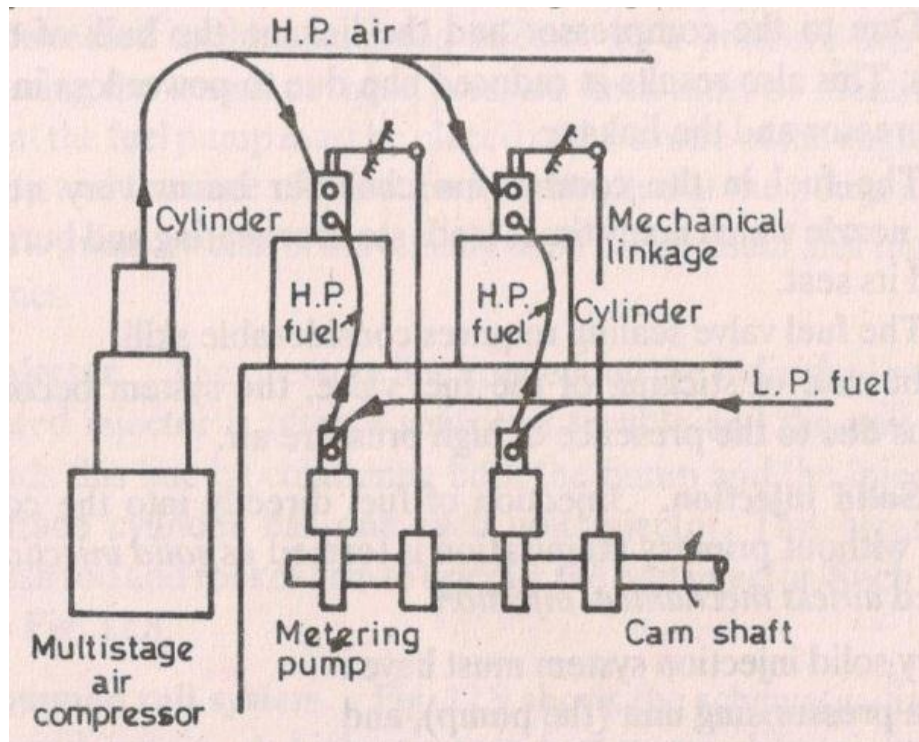


Figure: Air Injection system

Advantages:

1. It provides good atomization and distribution of fuel
2. Fuel pump needs to develop less pressure.

Dis Advantages:

1. It requires high multistage compressor.
2. Air compressor needs extra maintenance.

Solid or Airless Injection System

- In solid Injection system, fuel is directly injected into the cylinder without aid of compressed air. That's why this system is called solid or airless injection system.
- Fuel is supplied at very high pressure (about 200 bar) from fuel pump to fuel injector from where it is injected to the combustion chamber with the help of injector.
- There are three types as:
 1. Common rail system
 2. Individual pump and injector
 3. Distributor injection system

Unit Injector System

- Fill phase: The constant stroke pump element on the way up draws fuel from the supply duct in to the chamber, and as long as electric solenoid valve remains de-energized fuel line is open.

- Spill phase: The pump element is on the way down, and as long as solenoid valve remains de-energized the fuel line is open and fuel flows in through into the return duct.
- Injection phase: The pump element is still on the way down, the solenoid is now energized and fuel line is now closed. The fuel cannot pass back into return duct, and is now compressed by the plunger until pressure exceeds specific "opening" pressure, and the injector nozzle needle lifts, allowing fuel to be injected into the combustion chamber.
- Pressure reduction phase: The plunger is still on its way down, the engine ECU de-energizes the solenoid when required quantity of fuel is delivered, the fuel valve opens, fuel can flow back into return duct, causing pressure drop, which in turn causes the injector nozzle needle to shut, hence no more fuel is injected.

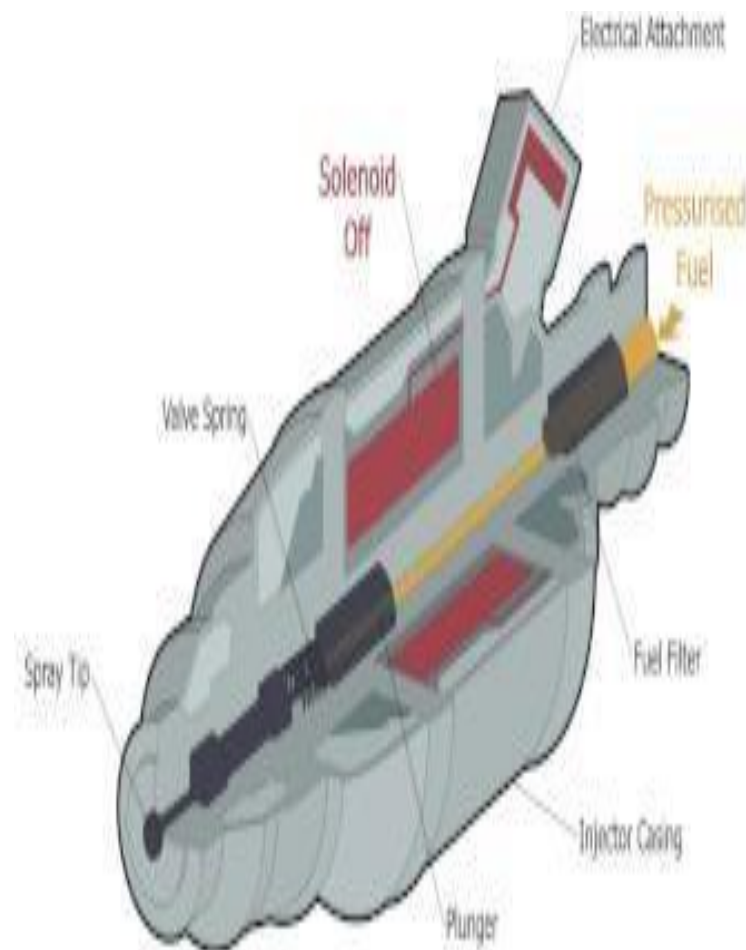


Figure: Unit Injector system

Individual Pump and injector (or) Jerk Pump System

- In this system, each cylinder is provided with one pump and one injector.
- Separate metering and compression pumps are provided for each cylinder.
- In high pressure pump, plunger is actuated by a cam & produces the fuel pressure necessary to open the injector valve at the correct time.
- The amount of fuel injected depends on the effective stroke of the plunger.

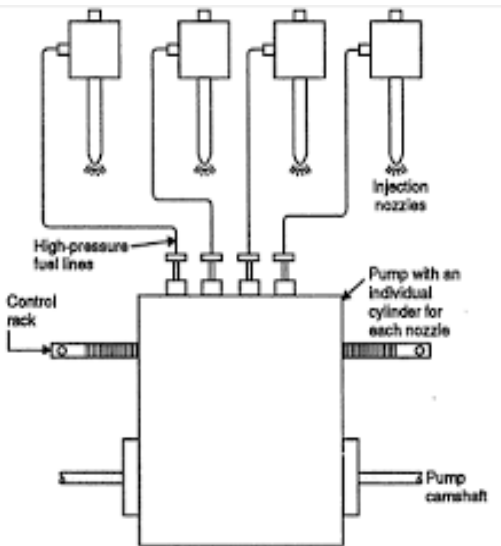


Figure: Individual pump and injector or Jerk Pump System

Distributor System

- In this system the pump which pressurizes the fuel also meters and times it.
- The fuel pump after metering the required amount of fuel supplies it to a rotating distributor at the correct time for supply to each cylinder.
- The number of injection strokes per cycle for the pump is equal to the number of cylinders used in this system.
- Since there is only one metering element, a uniform distribution is automatically ensured.

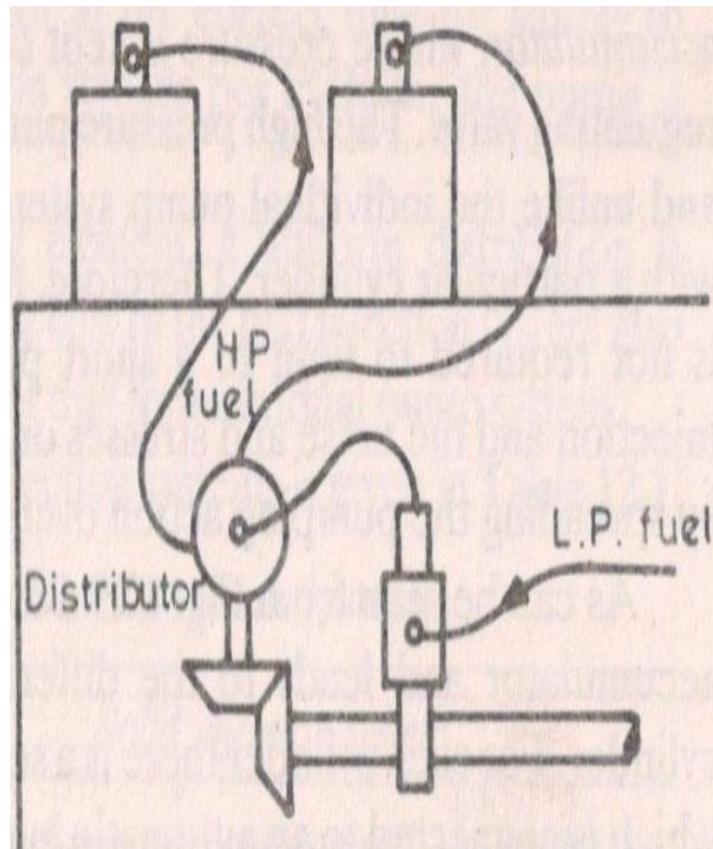


Figure: Distributor system

Common Rail Injector System

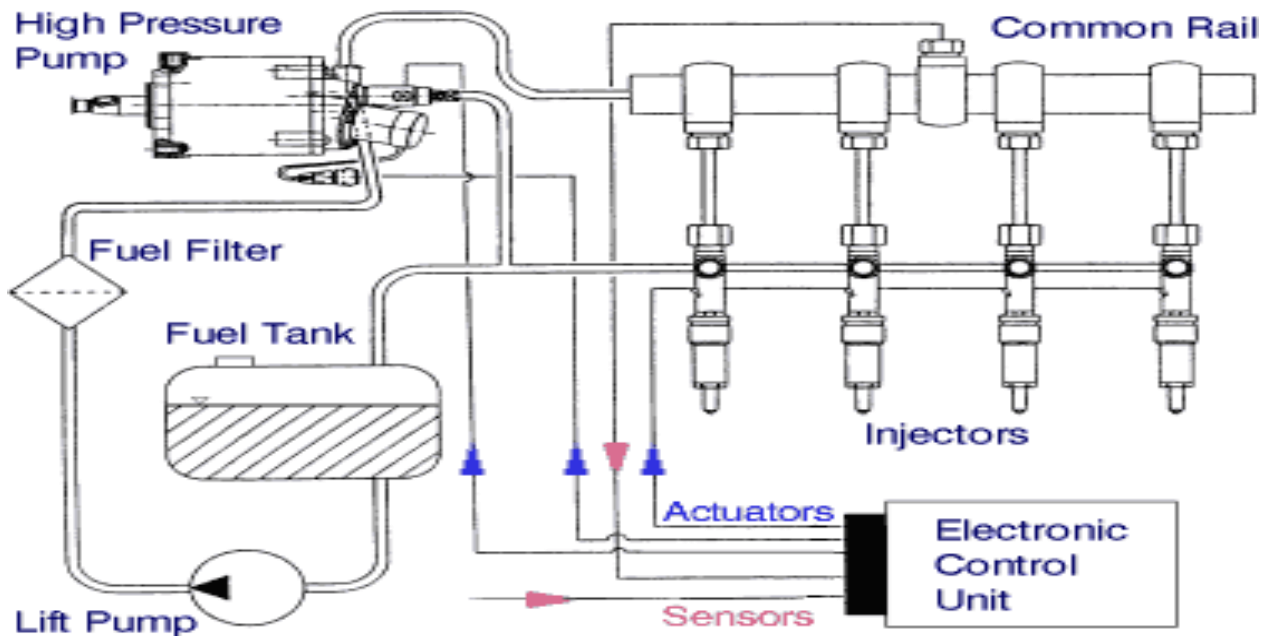


Figure: Common rail injector system

- In this system HP pumps supplies fuel, under high pressure, to a header. High pressure in the header forces the fuel to each nozzles located in the cylinders of this system.
- At that time, a mechanically operated valve allows the fuel to enter the proper cylinder through the nozzle.
- By varying the length of the pushrod stroke the amount of fuel entering the cylinder is regulated.

Advantages


- It delivers 25% more power and torque than the normal direct injection engine.
- Initial cost is low.
- Superior pickup is possible.
- It maintains lower levels of noise and vibration.
- Higher mileage is obtained.
- Emissions are low.
- Fuel consumption is less.
- Improved performance is obtained.

Dis Advantages

- Many parts involve the complicated design.
- Production cost is high.
- High degree of engine maintenance is required.

Electronic Ignition System

- An electronic ignition system is a type of ignition system that works with electronic circuits, usually by transistors. The transistors are controlled by sensors to generate electric pulses which then generate a high voltage spark that can burn the lean mixture and provide a better economy and lower emission.
- The electronic ignition system is vastly used in aircraft engines, bikes, motorcycles, and cars as it performs the same purpose as other types of ignition systems on them.
- The function of an electronic ignition system is remaining the same as it produces a high voltage spark to the spark plug so that the fuel-air mixture can be burn or ignite. Because sensors are used in the system, it improves reliability and mileage and decreases emission.

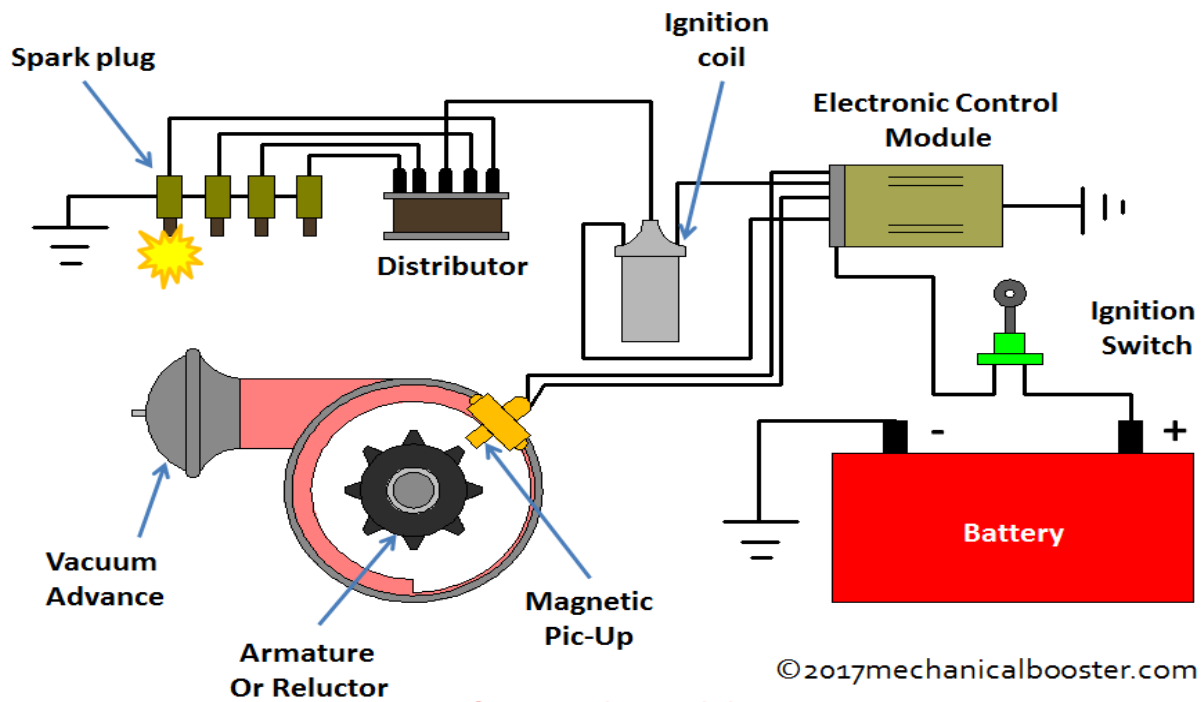

Electronic Ignition System

Components of Electronic Ignition System

- Battery
- Ignition Switch
- Electronic Control Module
- Armature
- Ignition Coil
- Distributor
- Spark Plug

Working Principle of Electronic Ignition system

- When switching on the ignition switch, just after that battery starts and it supplies current to the system.
- Current passes through the ignition switch and move toward the ignition coil on the system then, start passing through the primary winding of the coil.
- As the current passes through the primary coil, the pick-up coil got activated which is in the armature. It receives current as a voltage on the pick-up. Just after receiving voltage, the reluctor starts rotating which consists of the tooth.
- When the tooth comes in front of the pick-up coil exactly at the same time the pick-up coil starts sending a signal to the electronic control module.
- After receiving a voltage signal, it stops the current supply from the battery up to the primary coil. When the tooth deviates from the point, it senses the change in voltage, and then again it sends a signal of change in voltage to the electronic control module.
- We all know that the electronic control system is already a programmed system, so exactly after sending a signal of change in voltage it again starts supplying the current in the primary winding.
- Because of this continuous make and break of the current circuit, it creates a magnetic field inside

the ignition coil because of that; the secondary winding emf is induced.

- This emf increases voltage upto 50000V. The voltage is supplied to the distributor.
- It consists of a rotating rotor and distributor points, which is programmed as per the ignition. When there is a jump of voltage between the air gap of the rotator and the distributor of high voltage, after that it reaches to spark plug through high tension wire.
- Spark is generated because of the voltage difference between the central electrode and the ground electrode because the combustion is possible in air-fuel.

Application of Electronic Ignition System:

- The electronic ignition system has a lot of applications in the 21st century.
- It is mostly used in modern and hyper cars.
- It is mostly used in Audi, Mahindra XUV, KTM bikes, Ducati, and many more.
- It is also used in aircraft engines.

Advantages

- These are low maintenance systems as compared to others like Battery Ignition System, Glow plug ignition system, and Magneto Ignition System.
- It has no moving parts because it is controlled by the electronic control unit (ECU).
- Emission is less as compared to other means because this system is environmentally friendly.
- It increases the efficiency of the engine and also it is fuel-efficient.
- It is more accurate as compared to the magneto system.
- The vehicles having this system have a long life and also reliable.

Dis Advantages

- The cost of the system is very expensive

Transistorised Coil Ignition System

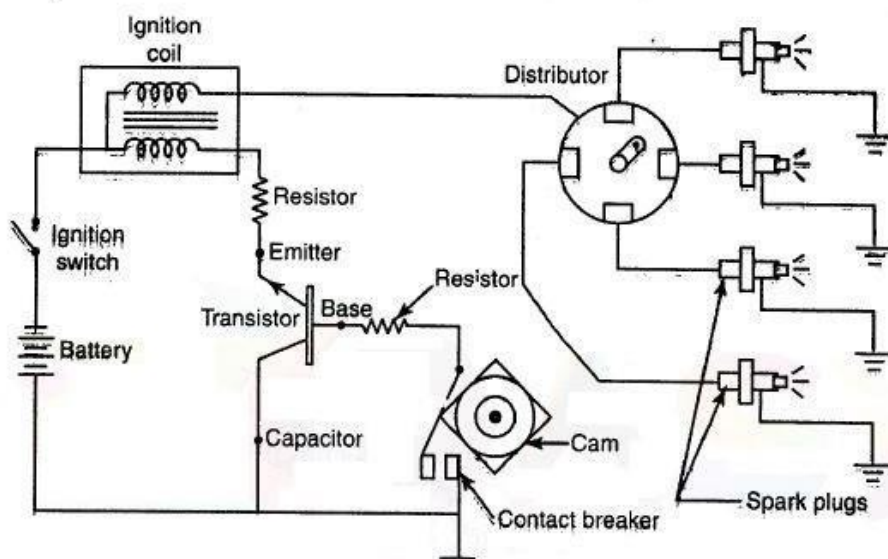


Figure: Transistorised Coil Ignition System

Components of Transistorised Coil Ignition System

- Battery
- Ignition Switch
- Ignition Coil
- Transistor
- Collector
- Emitter
- Blast resistor
- Contact breaker
- Distributor
- Spark Plug

Working Principle of Transistorised Coil Ignition System

• The cam in the distributor is rotated by the engine. It opens and closes the contact breaker points. When the contact breaker points are closed:

1. A small current flows in the base circuit of the transistor.
2. A large current flows in the emitter or collector circuit of the transistor and the primary winding of the Ignition coil due to the normal transistor action.
3. A magnetic field is set up in the primary winding of the coil. When the

contact breaker points are Open :

1. The current flow in the base circuit is stopped.
2. The primary current and the magnetic field in the coil collapses suddenly due to immediate reverting of the transistor to the non-conductive state.
3. It produces a high voltage in the secondary circuit.
4. This high voltage is directed to the respective spark plug through the rotor of the distributor.
5. This high voltage produces a spark when it is tried to jump the spark plug gap. It ignites air-fuel mixture in the cylinder.

Advantages

- It increases the life of contact breaker points.
- It gives high ignition voltages.
- It gives longer duration of spark.
- It has very accurate control of timing.
- It needs less maintenance.

Dis Advantages

- More mechanical points are needed similar to a conventional system.
- It has a tendency to sidetracking.

Capacitive Discharge Ignition System

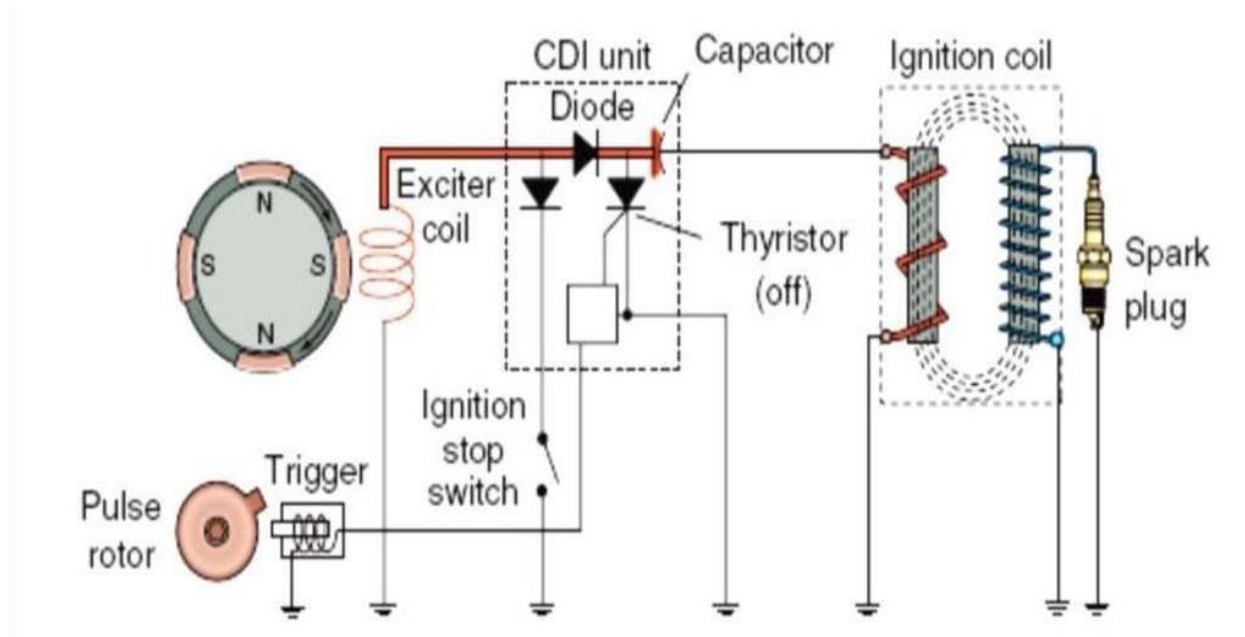


Figure: Capacitive Discharge Ignition System

Working principle

- The CDI system consists of two coils that are triggered by the magnets in the flywheel/rotor, the larger coil is called as charging or Exciter coil and the smaller coil is called as Trigger coil.
- As the flywheel rotates past the exciter coil, the AC produced by the exciter coil is changed to DC by the diode in the CDI unit.
- The capacitor in CDI unit stores the energy until it is needed to fire the spark plug.
- As the flywheel/rotor magnet rotates past the trigger coil, a low voltage in the trigger coil, which activates the electronic switch in CDI unit.
- The electronic switch acts as a power source to the primary side of the circuit, this completes the primary circuit which allows the energy stored by the capacitor to pass through the primary winding of the ignition coil.
- The transformer action of the ignition coil causes high voltage to be induced in the secondary winding of the ignition coil, which fires the spark plug.

Advantages of the CDI system:

- Insensitive to electrical shunts resulting from spark plug fouling.
- This system is suited to an application where insufficient dwell time is available because the capacitor can be fully charged in a very short time.
- Short transient response.
- A fast voltage rise and shorter spark duration.

Disadvantages of the CDI system:

- The spark is strong but short in order to 0.1 to 0.3 ms which leads to ignition failure during lean mixture operating conditions because of fast capacitive discharge.
- This system generates a huge electro-magnetic noise so CDI is rarely used by automobile manufacturers.

TurboChargers

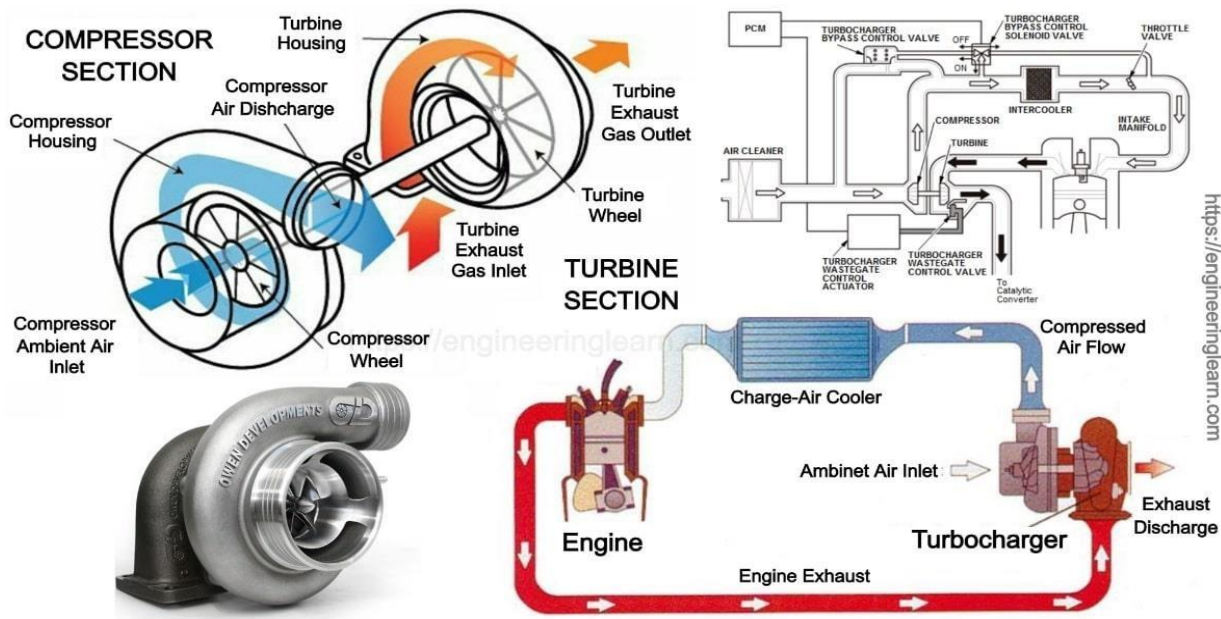


Figure: Working and Line diagram of turbo charger

- The turbo charger utilizes the wasted heat energy in the exhaust system, to run a compressor which compresses the intake air. Compressed intake air has more density and hence more fuel can be injected increasing the power of the engine. Turbo charging is an ideal way to increase the engine power without increasing the engine size.
- It is a turbine-driven forced induction device that increases an engine's efficiency and power by forcing extra air into the combustion chamber. This improvement over a naturally aspirated engine's output results because the turbine can force more air, and proportionately more fuel, into the combustion chamber than atmospheric pressure alone.
- Turbochargers are commonly used on truck, car, train, aircraft, and construction equipment engines. They are most often used with Otto cycle and Diesel cycle internal combustion engines. They have also been found useful in automotive fuel cells.

Waste Gate Turbo Charger (WGT)

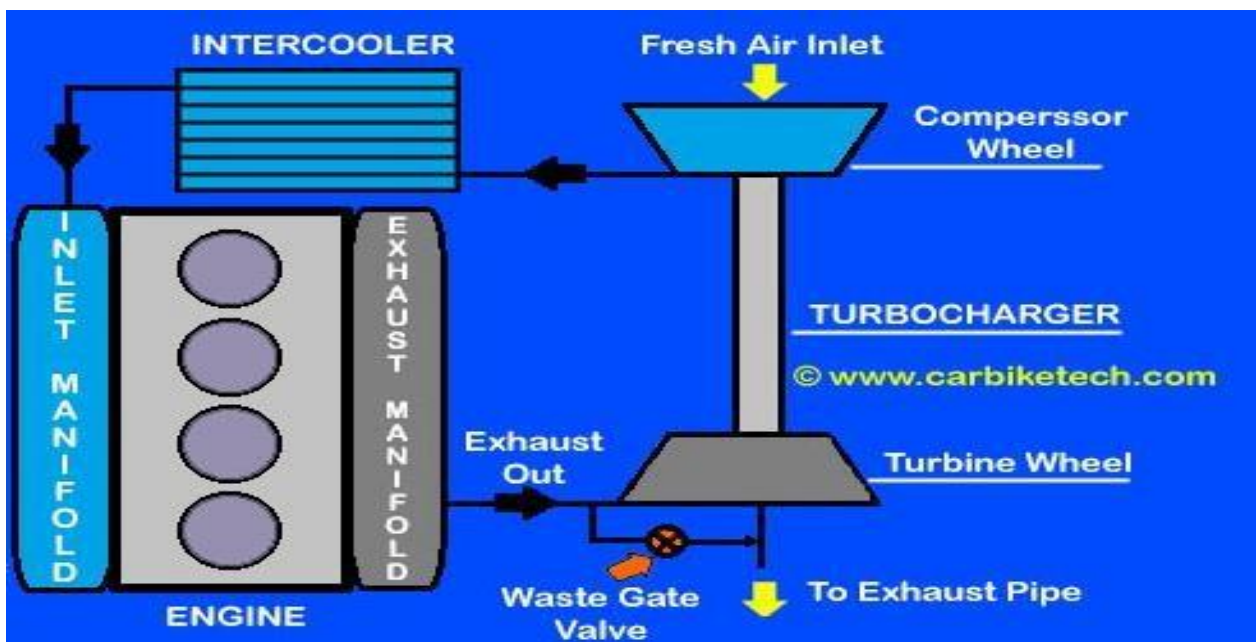


Figure: Waste Gate Turbo Charger

The waste-gate regulates the pressure of the relief valve. It, in turn, limits the boost pressure in the turbocharger system. This is helpful in preventing the engine from potential mechanical damages caused by the high pressure. Furthermore, the system automatically opens the waste-gate valve when the pressure reaches the pre-set levels. Then, it allows all the high-pressure exhaust gases to escape the turbine wheel and enter into the downstream/outlet. Thus, it prevents the exhaust gas pressure from rising more than required.

Advantages

- Needs a smaller space to fit.
- Reduces turbo lag to some extent.
- Installation of compact and simple external exhaust pipe system. Thus, reducing the engine weight.
- Delivers optimum engine performance at all times.
- Avoids mechanical damage to engine parts

Variable Geometry Turbocharger (VGT)

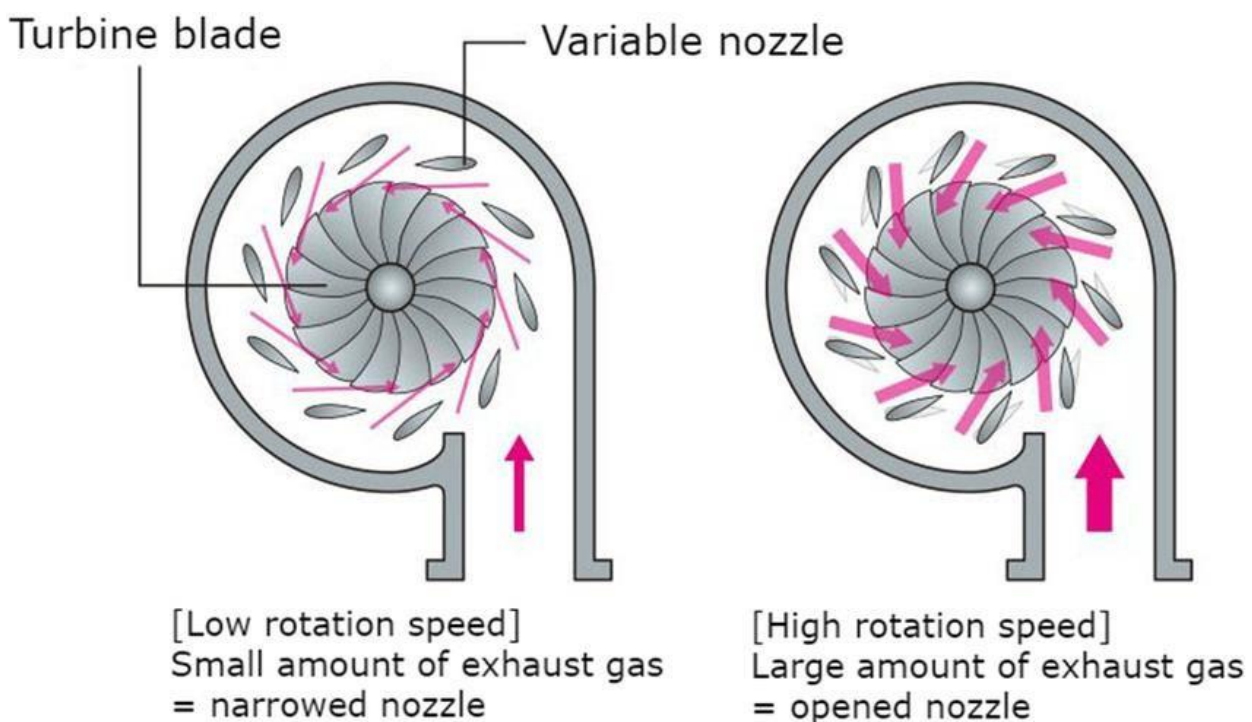


Figure: Variable Gate Turbocharger (VGT)

- VGTs refer to those types of turbochargers which include a ring of aerodynamically-shaped vanes inside the turbine housing at the turbine inlet. The turbos used in the passenger cars and light commercial vehicles, can rotate in order to vary the gas swirl angle and the cross-sectional area simultaneously. The internal vanes which are present alter the turbo's area-to-radius ratio (A/R) in order to match the RPM of the engines, and to also give a peak performance.
- Considering a case of low RPM, a low A/R ratio occurs which helps the turbo to spool up quickly by increasing the velocity of the exhaust gas. At higher revs the A/R ratio increases which is responsible for the increased airflow. These results in a low boost threshold which is responsible for reducing the turbo lag, and also provides a wide and smooth torque band.
- While the VGTs are quite typically used in the diesel engines where the exhaust gases lower the temperature and by then the VGTs were just limited in the petrol engine applications due to their cost and the requirement for components was made from an exotic material.

Types of nozzles:

(a) Depends on the type of combustion chamber,

Open combustion chamber:

- fuel seeks air

- air swirl is created due to inclined induction port

- multi-hole nozzle injects fuel at a pressure of about 200 to 300 bar as low moving air

- provide good cold starting performance and improved thermal efficiency

Pre-combustion chamber:

- air velocity is very much high

- single hole nozzle with 65 to 100 bar injection pressure is used

- used in high speed engine due to rapid combustion

- external heating device for easy starting of the engine

(b) Open and closed type of nozzle,

Opentype:

- consists of fuel orifices and open burner

- cheap and less efficient

ex- opposed piston two-stroke Junkers diesel engine

Closed type: pressure drop is minimised compared to opentype

(c) Different types of nozzle for different combustion chamber

(i) **Single hole nozzle:**

- used in open combustion chamber

- size of hole larger than 0.2 mm

- very high injection pressure required

(ii) **Multi-hole nozzle:**

- no. of holes varies from 4 to 18 and the size from 1.5 to 0.35 mm

- injection rate is not uniform

(iii) **Pintle nozzle:**

- a projection or pintle is provided in the nozzle to avoid weak injection and dribbling

- pintle may be cylindrical or conical shape

- cone angle varied from 0 to 60°
- provide good atomisation and reduced penetration
- fuel pressures are lower than single and multi-hole nozzle

(iv) **Pintaux nozzle:**

- injected fuel in upstream of air
- development of pintle nozzle with auxiliary hole drilled in the nozzle body
- reduced delay period and increased thermal efficiency

CATALYTIC CONVERTER

As indicated by the meaning of chemistry, a catalyst is a substance that causes or quickens a compound response without itself being influenced. Catalysts take an interest in the responses, however are neither reactants nor results of the response they catalyze. An exhaust system is a vehicle discharge control gadget which changes over lethal by-products of burning in the fumes of an interior ignition motor to less poisonous substances by method for catalyzed compound responses. It lessens temperature at which CO and HC change over into CO₂ and H₂O. Big and large exhaust systems utilize platinum gathering of respectable metals.



The contaminations have negative effect on air quality, environment and human well being that leads in stringent standards of poison outflow. Quantities of option innovations like change in motor plan, fuel pretreatment, utilization of option energizes, fuel added substances, fumes treatment or better tuning of the ignition procedure and so forth, are being considered to lower the release levels of the engine. Out of various progressions available for auto vapour radiation control a fumes framework is found to be best choice to control CO, HC and NO_x discharges from petrol driven vehicles while diesel particulate channel and oxidation forces converter or diesel oxidation impulse have so far been the most potential other option to control particulates outpourings from diesel driven vehicle [5]. An exhaust system (CC) is put inside the tailpipe through which destructive fumes gasses containing unburnt fuel, CO, NO_x are transmitted.

Three-way Catalytic Converter

Similar to the oxidation converter, the reduction catalytic converter helps to eliminate hydrocarbons and carbon-monoxide emanations, in addition to oxides of nitrogen discharges, or NO_x. NO_x outflows are created in the motor burning chamber when it reaches extremely high temperatures more than 2,500 degrees Fahrenheit, approximately. In this type of converter, a reduction reaction also occurs in addition to two oxidation reactions same as two-way converter. The reduction reaction occurs during the conversion of

oxides of nitrogen and oxygen. So this type of converter is also known as reduction type catalytic converter.

Conversion Reactions in Three Way Catalytic Converter

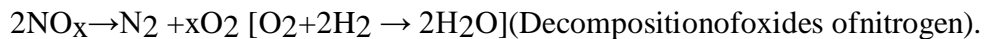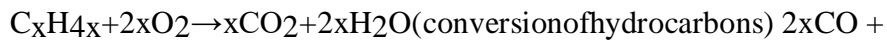

Emissions

- Emission Norms are emission standards instituted by the Government of a nation to regulate the output of air pollutants from internal combustion engines and Spark-ignition engines equipment, including motor vehicles.
- In India the standards and the timeline for implementation are set by the Central Pollution Control Board under the Ministry of Environment, Forest and Climate Change
- All new vehicles manufactured after the implementation of the norms have to be compliant with the regulations

European Emission Standards

- **European emission standards** define the acceptable limits for exhaust emissions of new vehicles sold in EU member states.
- Currently, emissions of nitrogen oxides (NO_x), total hydrocarbon (THC), non-methane hydrocarbons (NMHC), carbon monoxide (CO) and particulate matter (PM) are regulated for most vehicle types, including cars, lorries, trains, tractors and similar machinery, but excluding seagoing ships and aeroplanes.
- For each vehicle type, different standards apply. Compliance is determined by running the engine at a standardised test cycle. Non-compliant vehicles cannot be sold in the EU, but new standards do not apply to vehicles already on the roads. **No use of specific technologies is mandated to meet the standards, though available technology is considered when setting the standards.** New models introduced must meet current or planned standards,

CO₂ emission

- Within the European Union, road transport is responsible for about 20% of all CO₂ emissions, with passenger cars contributing about 12%.
- The target fixed at Kyoto Protocol was an 8% reduction of emissions in all sectors of the economy compared to 1990 levels by 2008-2012.
- Relative CO₂ emissions from transport have risen rapidly in recent years, from 21% of the total in 1990 to 28% in 2004,

European emission standards for passenger cars (Category M*), g/km

Tier	Date	CO	THC	NMHC	NO _x	HC+NO _x	PM	P***
Diesel								
Euro 1†	July 1992	2.72 (3.16)	-	-	-	0.97 (1.13)	0.14 (0.18)	-
Euro 2	January 1996	1.0	-	-	-	0.7	0.08	-
Euro 3	January 2000	0.64	-	-	0.50	0.56	0.05	-
Euro 4	January 2005	0.50	-	-	0.25	0.30	0.025	-
Euro 5	September 2009	0.50	-	-	0.180	0.230	0.005	-
Euro 6 (future)	September 2014	0.50	-	-	0.080	0.170	0.005	-
Petrol (Gasoline)								
Euro 1†	July 1992	2.72 (3.16)	-	-	-	0.97 (1.13)	-	-
Euro 2	January 1996	2.2	-	-	-	0.5	-	-
Euro 3	January 2000	2.3	0.20	-	0.15	-	-	-
Euro 4	January 2005	1.0	0.10	-	0.08	-	-	-
Euro 5	September 2009	1.0	0.10	0.068	0.060	-	0.005**	-
Euro 6 (future)	September 2014	1.0	0.10	0.068	0.060	-	0.005**	-
* Before Euro 5, passenger vehicles > 2500 kg were type approved as light commercial vehicles N ₁ -I								
** Applies only to vehicles with direct injection engines								
*** A number standard is to be defined as soon as possible and at the latest upon entry into force of Euro 6								
† Values in brackets are conformity of production (COP) limits								

Emission standards for light commercial vehicles

European emission standards for light commercial vehicles ≤1305 kg (Category N₁-I), g/km

Tier	Date	CO	THC	NMHC	NO _x	HC+NO _x	PM	P
Diesel								
Euro 1	October 1994	2.72	-	-	-	0.97	0.14	-
Euro 2	January 1998	1.0	-	-	-	0.7	0.08	-
Euro 3	January 2000	0.64	-	-	0.50	0.56	0.05	-
Euro 4	January 2005	0.50	-	-	0.25	0.30	0.025	-
Euro 5	September 2009	0.500	-	-	0.180	0.230	0.005	-
Euro 6	September 2014	0.500	-	-	0.080	0.170	0.005	-
Petrol (Gasoline)								
Euro 1	October 1994	2.72	-	-	-	0.97	-	-
Euro 2	January 1998	2.2	-	-	-	0.5	-	-
Euro 3	January 2000	2.3	0.20	-	0.15	-	-	-
Euro 4	January 2005	1.0	0.10	-	0.08	-	-	-
Euro 5	September 2009	1.000	0.100	0.068	0.060	-	0.005*	-
Euro 6	September 2014	1.000	0.100	0.068	0.060	-	0.005*	-

* Applies only to vehicles with direct injection engines

History of Emission Standards in India

- It was in the early nineties that the first emission standards were introduced in the country.
- Other regulatory norms followed in the form of making the catalytic converters mandatory for petrol vehicles and then, by the introduction of unleaded petrol.
- In 1999, the apex court of the country made it mandatory for all vehicles to meet the India 2000 norms by June 2000, in a ruling.
- In 2002, the Mashelkar Committee report was accepted by the Indian Government.
 - The committee had recommended a road map for the implementation of the Euro norms based emission standards for India.
 - It also recommended that the roll-out of the norms be implemented in major cities first to be followed by the rest of the country in a phased manner.
 - Based on the committee's recommendations, in 2003, the government released the National Auto Fuel Policy.

Bharat Stage Emission Standards

- Bharat Stage or BS Emission Standards are government-instituted emission standards that all motor vehicles have to comply with if they are to be sold and driven in India.
- Currently, all new vehicles sold and registered in India should be compliant with the BS-VI iteration of emission standards.
- The standards and timelines for their implementation are set by the Central Pollution Control Board (CPCB) under the Minister of Environment, Forests and Climate Change.
- The BS norms are based on the European Emission Standards (Euro norms) and were first set in 2000. Equivalent to the Euro-1, the first iteration was known as 'India 2000', and not BS-I.
- Subsequent emission standards were called BS-II, BS-III, and BS-IV.
- The government decided to jump directly from BS-IV to BS-VI skipping BS-V in view of the long time it took to move from BS-III to IV.

- With the implementation of the new norms, pollution levels are expected to reduce to a large extent as the particulate matter (PM) concentration should decrease. About one-third of the air pollution is caused by motor vehicles and cars.
- At present, BS-IV auto fuels are being supplied in over 30 cities, and the rest of the country has BS-III fuels.
- Earlier, the government planned the implementation of BS V and BS VI emission norms nationwide by 2020 and 2024 respectively. However, the government decided to advance the dates.

The following table gives the timeline of the BS norms being implemented in India starting from the India 2000 till the latest BS-VI norms.

Standard(Reference)	Year/Region
India 2000(Euro 1)	2000–Nationwide
BSII(Euro2)	2001–Metro cities 2003–10 more major cities 2005–Nationwide
BSIII(Euro3)	2005–Metros and major cities 2010 – Nationwide
BSV(Euro5)	Skipped
BSVI(Euro6)	2018–Delhi 2019–NCR 2020–Nationwide

UNIT III
TRANSMISSION SYSTEMS

UNIT-III

TRANSMISSION SYSTEMS

Introduction to the Transmission Systems in Automobile:

It is a system by means of which power developed by the engine is transmitted to the road wheels to propel the vehicle.

Chief function of the device is to receive power at one torque and angular velocity and to deliver it at another torque and the corresponding angular velocity.

REQUIREMENTS OF TRANSMISSION SYSTEM

1. To provide for disconnecting the engine from the driving wheels.
2. When the engine is running, to enable the connection to the driving wheels to be made smoothly and without shock.
3. To enable the leverage between the engine and driving wheels to be varied.
4. It must reduce the drive-line speed from that of the engine to that of the driving wheels in a ratio of somewhere between about 3:1 and 10:1 or more, according to the relative size of engine and weight of vehicle.
5. Turn the drive, if necessary, through 90° or perhaps otherwise re-align it.
6. Enable the driving wheels to rotate at different speeds.
7. Provide for relative movement between the engine and driving wheels.

The most common transmission systems that have been used for the automotive industry are:

- Manual transmission,
- Automatic transmission,
- Semi-automatic transmission,

- Continuously-variable transmission (C.V.T.).

Manual Transmission:

The first transmission invented was the manual transmission system. The driver needs to disengage the clutch to disconnect the power from the engine first, select the target gear, and engage the clutch again to perform the gear change. This will challenge a new driver. It always takes time for a new driver to get used to this skill.

Automatic Transmission:

An automatic transmission uses a fluid-coupling torque converter to replace the clutch to avoid engaging/disengaging clutch during gear change. A completed gear set, called planetary gears, is used to perform gear ratio change instead of selecting gear manually. A driver no longer needs to worry about gear selection during driving. It makes driving a car much easier, especially for a disabled or new driver. However, the indirect gear contact of the torque converter causes power loss during power transmission, and the complicated planetary gear structure makes the transmission heavy and easily broken.

Semi-Automatic Transmission:

A semi-automatic transmission tries to combine the advantages of the manual and automatic transmission systems, but avoid their disadvantages. However, the complicated design of the semi-automatic transmission is still under development, and the price is not cheap. It is only used for some luxury or sports cars currently.

Continuously Variable Transmission (C.V.T.):-

The Continuously Variable Transmission (C.V.T.) is a transmission in which the ratio of the rotational speeds of two shafts, as the input shaft and output shaft of a vehicle or other machine, can be varied continuously within a given range, providing an infinite number of possible ratios. The other mechanical transmissions described above only allow a few different gear ratios to be selected,

but this type of transmission essentially has an infinite number of ratios available within a finite range.

It provides even better fuel economy if the engine is constantly made run at a single speed. This transmission is capable of a better user experience, without the rise and fall in speed of an engine, and the jerk felt when changing gears.

MANUAL TRANSMISSION SYSTEM

Manual transmissions also referred as stick shift transmission or just 'stick', 'straight drive', or standard transmission because you need to use the transmission stick every time you change the gears.

To perform the gear shift, the transmission system must first be disengaged from the engine. After the target gear is selected, the transmission and engine are engaged with each other again to perform the power transmission. Manual transmissions are characterized by gear ratios that are selectable by locking selected gear pairs to the output shaft inside the transmission.

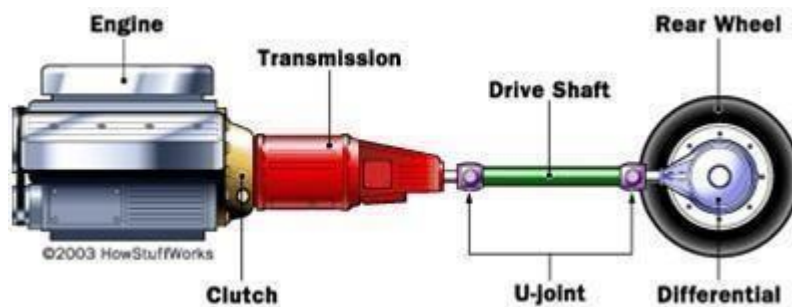


Fig: The transmission system delivers the engine power to wheels.

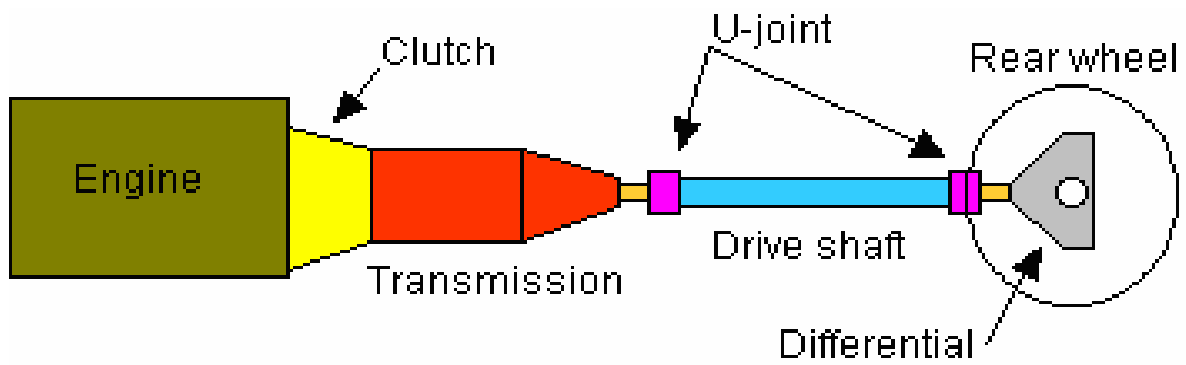


Fig:LayoutofAutomobilePowerTransmissionSystem

Componentsofmanualtransmission

The maincomponentsofmanualtransmissionare:

- Clutch
- Gearbox
- Slipjoint
- Universaljoint
- Propellershaft
- Finaldrive
- Differentialunit
- Rearaxle

Clutch:

Clutchisadevicewhichisusedinthetransmissionsofautomobiletoengageanddisengage the engine to the transmission or gear box.It is located between the transmission and the engine. When the clutch is engaged, the power flows from the engine to the rear wheels in a rear- wheel-drive transmission and the vehicle moves. When the clutch is disengaged, the power is not transmitted from the engine to the rear wheels and vehicle stops even if engine is running.

It works on the principle of friction. When two friction surfaces are brought in contact with each other and they are united due to the friction between them. If one is revolved the other will also revolve.

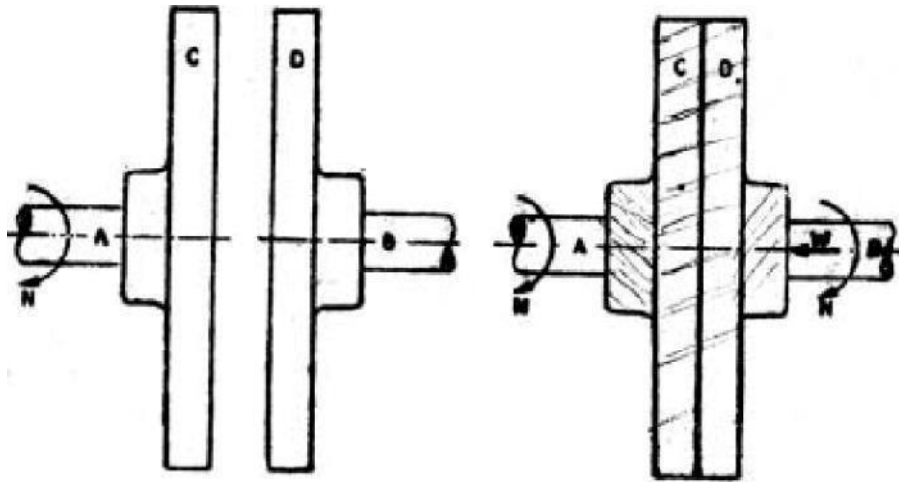


Fig: Principle of Clutch

The friction depends upon the surface area contact. The friction surfaces are so designed that the driven member initially slips on driving member when initially pressure is applied. As pressure increases the driven member is brought gradually to speed the driving member.

The three main parts of clutch are:

- Driving member
- Driven member
- Operating member

The driving member consists of a flywheel mounted on the engine crank shaft. The flywheel is bolted to cover which carries a pressure plate or driving disc, pressure springs and releasing levers. Thus the entire assembly of flywheel and cover rotates all the times. The clutch housing and the cover provided with openings dissipate the heat generated by friction during the clutch operation.

The driving member consists of a disc or plate called clutch plate. It is free to slide length wise on the splines of the clutch shaft. It carries friction material on both of its surfaces when it is gripped

between the flywheel and the pressure plate; it rotates the clutch shaft through splines.

The operating members consists of a foot pedal, linkage, release or throw-out bearing, release levers and springs necessary to ensure the proper operation of the clutch.

Now the driving member in an automobile is flywheel mounted on crank shaft, the driven member is the pressure plate mounted on transmission or gear box input shaft. Friction surfaces or clutch plates is placed between two members.

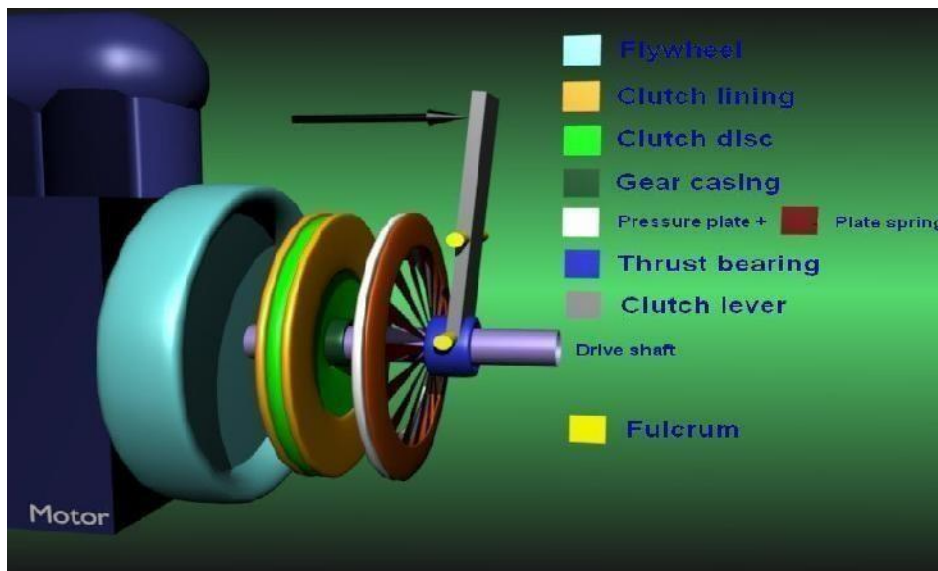


Fig: Exploded view of clutch

Types of Friction Materials:

The friction materials of the clutch plate are generally of 3 types:

- Mill Board Type
- Molded type
- Woventype

Mill Board type friction materials mainly include asbestos material with different types of impregnates.

Molded type friction materials are made from a matrix of asbestos fiber and starch or any other suitable binding materials. They are then heated to a certain temperature for moulding in dies under pressure. They are also made into sheets by rolling, pressing and backs till they are extremely hard and dense. Metallic wires are used sometimes to increase wear properties.

Woven types facing materials are made by impregnating a cloth with certain binders or by weaving threads of copper or brass wires covered with long fiber asbestos and cotton. The woven sheet treated with binding solution are baked and rolled.

Table: Coefficient of Friction for Clutch Facing Materials

Sl.No.	Material	Coefficient of Material (μ)
1.	Leather	0.27
2.	Cork	0.37
3.	Cotton fabric	0.4-0.5
4.	Asbestos Base Materials	0.35-0.4

Properties of Good Clutching:

- Good Wearing Properties
- High Resistance to heat
- High coefficient of friction
- Good Binders in it

Operation of Clutch:

When the clutch pedal is pressed through pedal movement, the clutch release bearing presses on the clutch release lever plate which being connected to clutch release levers, forces these levers forward. This causes the pressure plate to compress pressure springs, thus allowing it to move away from the clutch driven plate. This action releases the pressure on the driven plate and flywheel, the flywheel is now free to turn independently, without turning the transmission.

When the clutch pedal is released, reverse action takes place i.e. the driven plate is again forced against the flywheel by the pressure plate- because of the force exerted by pressure springs. The pressure plate will keep on pressing the facings of driven plate until friction created becomes equal to the resistance of the vehicle. Any further increase in pressure will cause the clutch plate and the transmission shaft to turn along with flywheel, thus achieving vehicle movement.

Single Clutch Plate:

It is the most common type of clutch plate used in motor vehicles. Basically it consists of only one clutch plate, mounted on the splines of the clutch shaft. The flywheel is mounted on engine crankshaft and rotates with it. The pressure plate is bolted to the flywheel through clutch springs, and is free to slide on the clutch shaft when the clutch pedal is operated. When the clutch is engaged the clutch plate is gripped between the flywheel and pressure plate. The friction linings are on both the sides of the clutch plate. Due to the friction between the flywheel, clutch plate and the pressure plate the clutch plate revolves with the flywheel. As the clutch plate revolves the clutch shaft also revolves. Clutch shaft is connected to the transmission gear box. Thus the engine power is transmitted to the crankshaft and then to the clutch shaft.

When the clutch pedal is pressed, the pressure plate moves back against the force of the springs, and the clutch plate becomes free between the flywheel and the pressure plate. Thus the flywheel remains rotating as long as the engine is running and the clutch shaft speed reduces slowly and finally it stops rotating. As soon as the clutch pedal is released, the clutch is said to be engaged, otherwise it remains disengaged due to the spring forces.



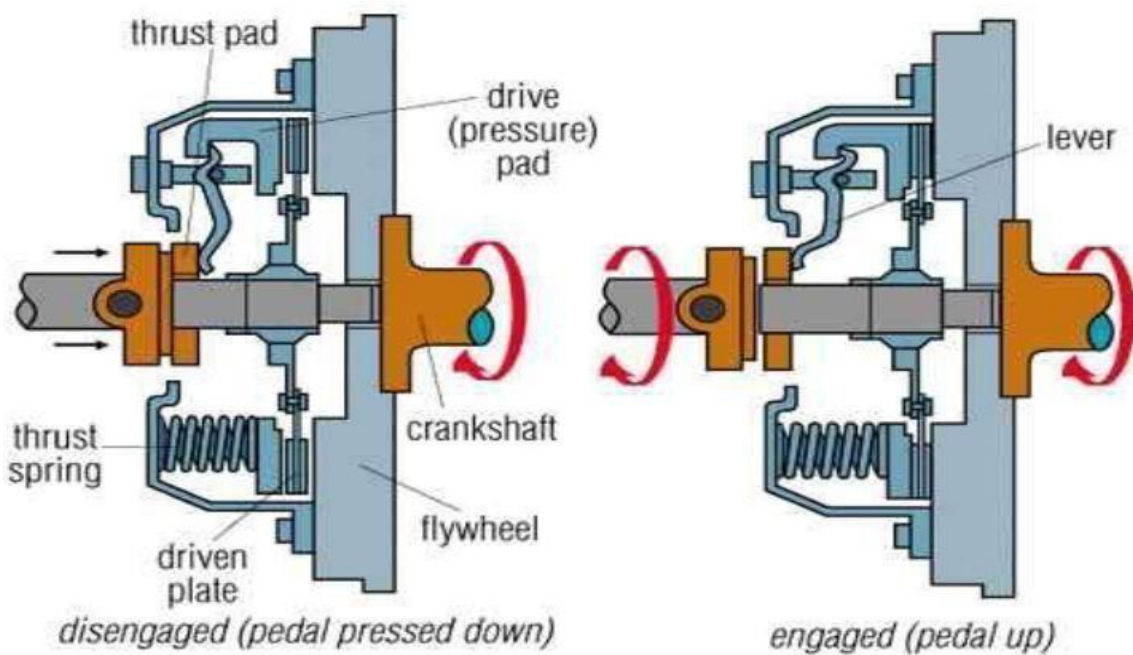


Fig: Clutch in Engaged & Disengaged Position

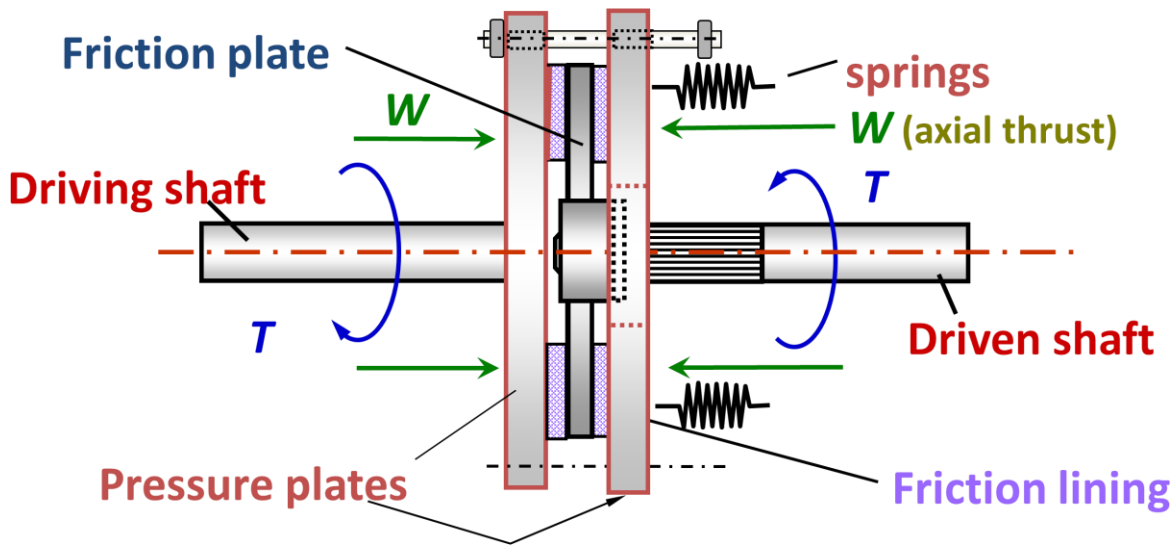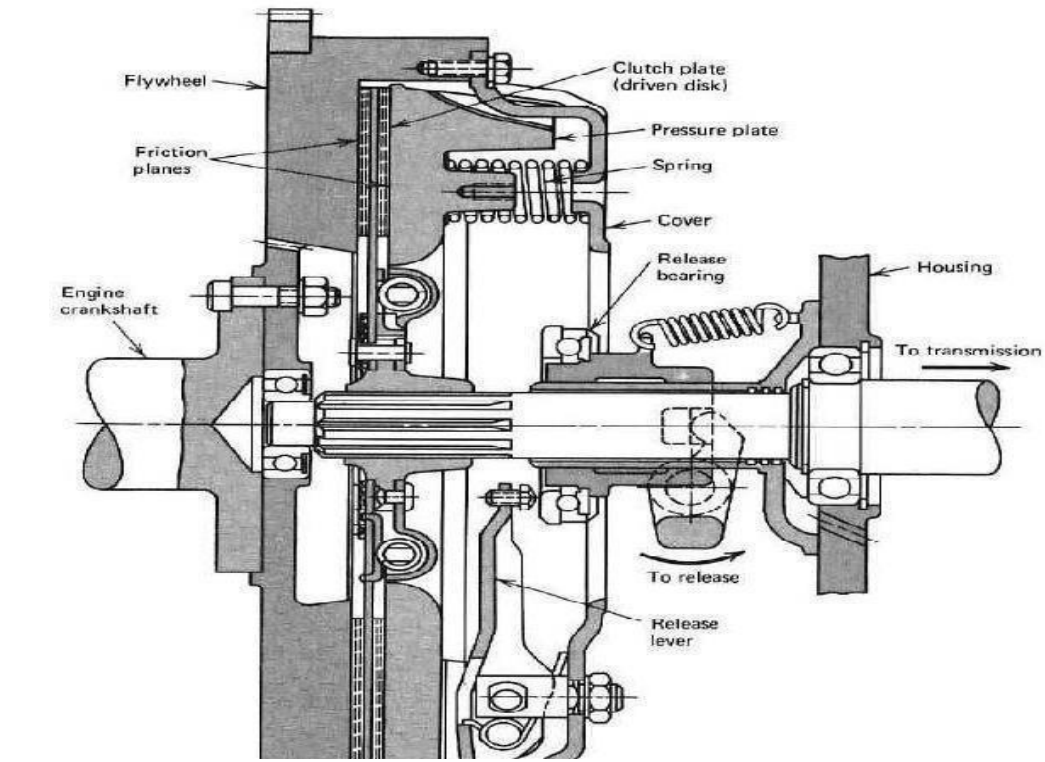

Multi-plateClutch:

Multi-plate clutch consists of a number of clutch plates instead of only one clutch plate as in case of single plate clutch. As The number of clutch plates are increased, the friction surfaces also increases. The increased number of friction surfaces obviously increases the capacity of the clutch to transmit torque.

The plates are alternately fitted to engine and gear box shaft. They are firmly pressed by strong coil springs and assembled in a drum. Each of the alternate plates slides on the grooves on the flywheel and the other slides on splines on the pressure plate. Thus, each alternate plate has inner and outer splines.

The multi-plate clutch works in the same way as a single plate clutch by operating the clutch pedal. The multi-plate clutches are used in heavy commercial vehicles, racing cars and motor cycles for transmitting high torque. The multi-plate clutch may be dry or wet. When the clutch is operated in an oil bath, it is called a wet clutch. When the clutch is operated dry it is called dry clutch. The wet clutch is used in conjunction with or part of the automatic transmission.

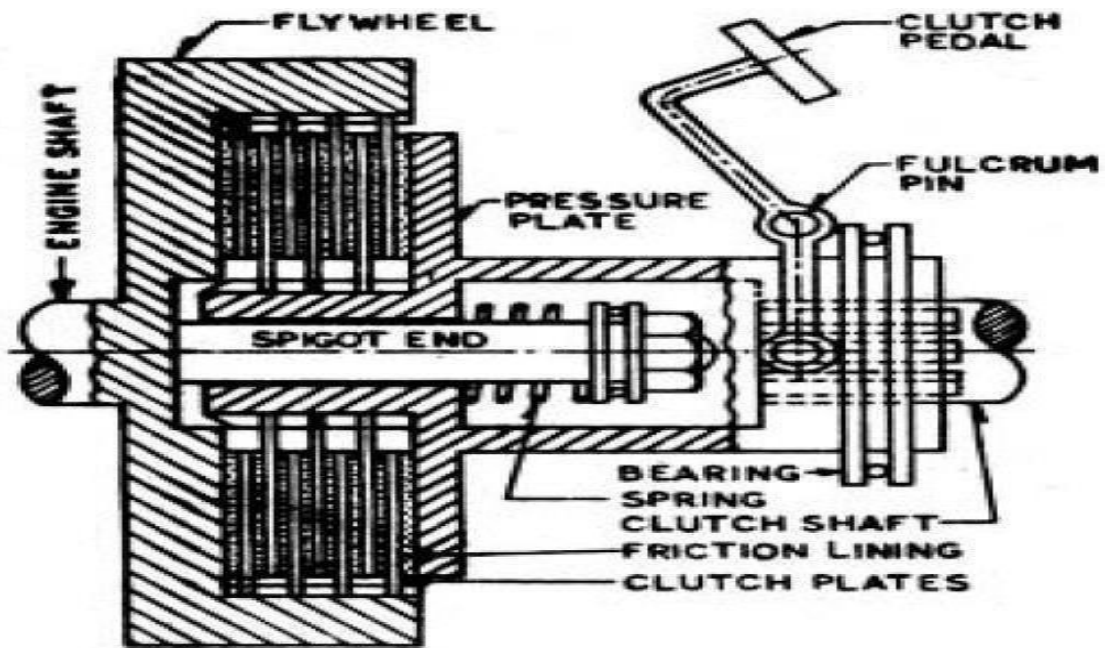


Fig : Multi-Plate Clutch



Fig: Cutaway Model Of Multi-Plate Clutch



Fig: Exploded View Of Multi-Plate Clutch


Fig: Multi-Plate Clutch

ConeClutch:

Coneclutchconsistsoffrictionsurfacesintheformofcone.The engineshaftconsistsoffemalecone. The male cone is mounted on the splined clutch shaft. It has friction surfaces on the conical portion. The male cone can slide on the clutch shaft. Hen the clutch is engaged thefriction surfaces of themaleconeareincontactwiththatofthefemaleconedueto forceofthespring.When theclutchpedal is pressed, the male cone slides against the spring force and the clutch is disengaged.

The only advantage ofthe cone clutch isthatthenormal force acting onthe frictionsurfaces isgreater thantheaxialforce,ascomparetothesingleplateclutchinwhichthenormalforceactingonthe

friction surfaces is equal to the axial force. The disadvantage in cone clutch is that if the angle of the cone is made smaller than 20° the male cone tends to bind in the female cone and it becomes difficult to disengage the clutch. Cone clutches are generally now only used in low peripheral speed applications although they were once common in automobiles and other combustion engine transmissions. They are usually now confined to very specialist transmissions in racing, rallying, or in extreme off-road vehicles, although they are common in power boats. Small cone clutches are used in synchronizer mechanisms in manual transmissions.

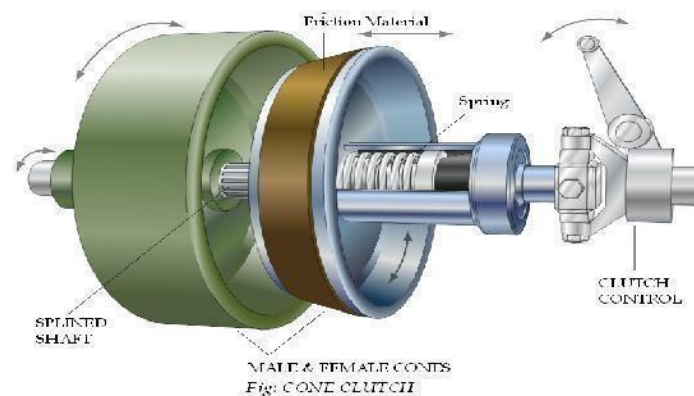

Dog&SplineClutch:

This type of clutch is used to lock two shafts together or to lock a gear to shaft. It consists of a sleeve having two sets of internal splines. It slides on a splined shaft with smallest diameter splines. The bigger diameter splines match with the external dog clutch teeth on driving shaft. When the sleeve is made to slide on the splined shaft, its teeth match with the dog clutch teeth of the driving shaft. Thus the sleeve turns the splined shaft with the driving shaft.

The clutch is said to be engaged. To disengage the clutch, the sleeve is moved back on the splined shaft to have no contact with the driving shaft. This type of clutch has no tendency to slip. The driven shaft revolves exactly at the same speed of the driving shaft, as soon as the clutch is engaged. This is also known as positive clutch.

CentrifugalClutch:

The centrifugal clutch uses centrifugal forces, instead of spring force for keeping it in engaged position. Also, it does not require clutch pedal for operating the clutch. The clutch is operated automatically depending on engine speed. The vehicle can be stopped in gear without stalling the engine. Similarly the gear can be started in any gear by pressing the accelerator pedal.

A centrifugal clutch works through centrifugal force. The input of the clutch is connected to the engine crankshaft while the output drives gearbox shaft, chain, or belt. As engine

R.P.M. increases, weighted arms in the clutch swing outward and force the clutch to engage. The most common types have friction pads or shoes radially mounted that engage the inside of the rim of housing.

On the center shaft there are an assorted amount of extension springs, which connect to a clutch shoe. When the center shaft spins fast enough, the springs extend causing the clutch shoes to engage the friction face. It can be compared to a drum brake in reverse. The weighted arms force these disks together and engage the clutch.

When the engine reaches a certain RPM, the clutch activates, working almost like a continuously variable transmission. As the load increases the R.P.M. drops thereby disengaging the clutch and letting the rpm rise again and reengaging the clutch. If tuned properly, the clutch will tend to keep the engine at or near the torque peak of the engine.

This results in a fair bit of waste heat, but over a broad range of speeds it is much more useful than a direct drive in many applications. Weaker spring/heavier shoes will cause the clutch to engage at a lower R.P.M. while a stronger spring/lighter shoes will cause the clutch to engage at a higher R.P.M.

Semi-centrifugalClutch:-

A semi centrifugal clutch is used to transmit power from high powered engines and racing car engines where clutch disengagement requires appreciable and tiresome driver effort. The transmission of

power in such clutches is partly by clutch springs and rest by centrifugal action of an extra weight provided in system. The clutch springs serve to transmit the torque up to normal speeds, while the centrifugal force assists at speeds higher than normal.

Besides clutch, pressure plate and splines shaft it mainly consists of: Compression spring (3 numbers)

Weighted levers (3 numbers)

At normal speeds when the power transmission is low the spring keeps the clutch engaged, the weighted levers do not have any pressure on the pressure plate. At high speed, when the power transmission is high the weights fly off and levers exert pressure on the plate which keeps the clutch firmly engaged. Thus instead of having more stiff springs for keeping the clutch engaged firmly at high speeds, they are less stiff, so that the driver may not get any strain in operating the clutch.

when the speed decreases, the weights fall and the levers do not exert any pressure on the pressure plate. Only the spring pressure is exerted on the pressure plate which is sufficient to keep the clutch engaged.

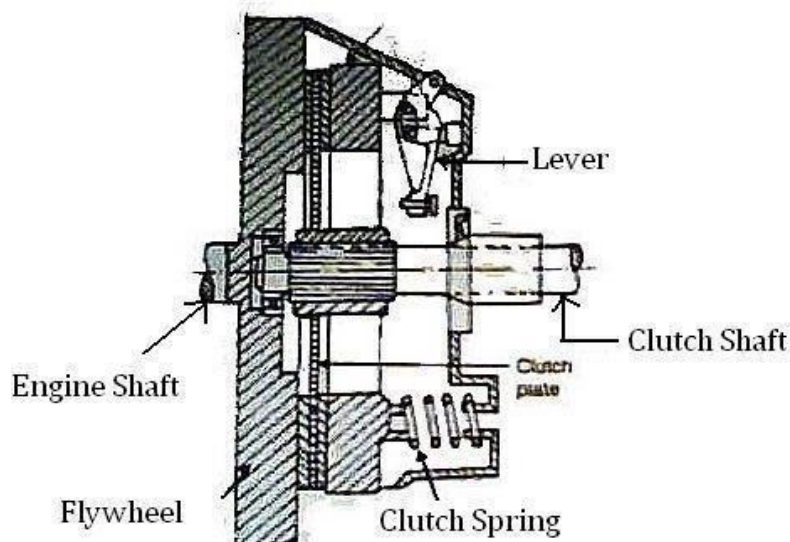


Fig: Semicentrifugal Clutch

Electromagnetic Clutch:

An electromagnetic clutch is a clutch (a mechanism for transmitting rotation) that is engaged and disengaged by an electromagnetic actuator. In this type of clutch, the flywheel consists of winding. The current is supplied to the winding from battery or dynamo.

When the current passes through the winding it produces an electromagnetic field which attracts the pressure plate, thereby engaging the clutch. When supply is cutoff, the clutch is disengaged. The gear lever consists of a clutch release switch. When then the driver holds the gear lever to change the gear the witch is operated cutting off the current to the winding which causes the clutch disengaged. At low speeds when the dynamo output is low, the clutch is not firmly engaged.

Therefore three springs are also provided on the pressure plate which help the clutch engaged firmly at low speed also. Cycling is achieved by turning the voltage/current to the electromagnet on and off. Slippage normally occurs only during acceleration. When the clutch is fully engaged, there is no relative slip, assuming the clutch is sized properly, and thus torque transfer is 100% efficient.

The electromagnetic clutch is most suitable for remote operation since no linkages are required to control its engagement. It has fast, smooth operation. However, because energy dissipates as heat in the electromagnetic actuator every time the clutch is engaged, there is a risk of overheating. Consequently the maximum operating temperature of the clutch is limited by the temperature rating of the insulation of the electromagnet. This is a major limitation. Another disadvantage is higher initial cost.

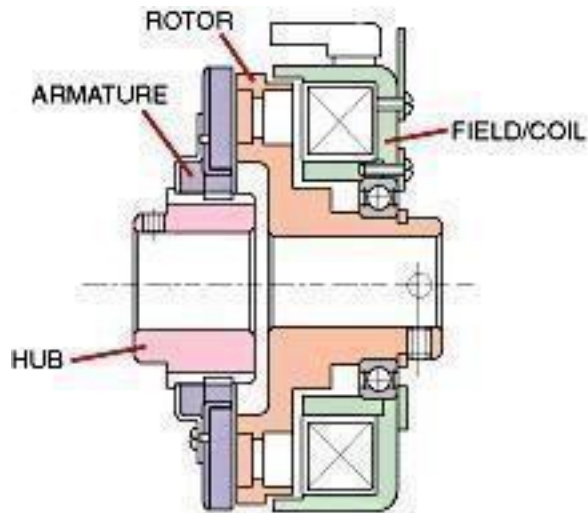


Fig: Electromagnetic Clutch

GearBox;

A gearbox is a mechanical method of transferring energy from one device to another and is used to increase torque while reducing speed. Torque is the power generated through the bending or twisting of a solid material. This term is often used interchangeably with transmission. Located at the junction point of a power shaft, the gearbox is often used to create a right angle change in direction, as is seen in a rotary mower or a helicopter. Each unit is made with a specific purpose in mind, and the gear ratio used is designed to provide the level of force required. This ratio is fixed and cannot be changed once the box is constructed. The only possible modification after the fact is an adjustment that allows the shaft speed to increase, along with a corresponding reduction in torque. In a situation where multiple speeds are needed, a transmission with multiple gears can be used to increase torque while slowing down the output speed. This design is commonly found in automobile transmissions. The same principle can be used to create an overdrive gear that increases output speed while decreasing torque.

Principle of Gearing

Consider a simple 4-gear train. It consists of a driving gear A on input shaft and a driven gear D on the output shaft. In between the two gears there are two intermediate gears B, C. Each of these gears are mounted on separate shaft. We notice that:

Gear A drives Gear B

$$\therefore \frac{N_b}{N_a} = \frac{T_a}{T_b}$$

Gear B drives Gear C

$$\therefore \frac{N_c}{N_b} = \frac{T_b}{T_c}$$

Gear C drives Gear D

$$\therefore \frac{N_d}{N_c} = \frac{T_c}{T_d}$$

Therefore, the overall speed ratios are:

$$\therefore \frac{N_d}{N_a} = \frac{T_c}{T_d} \times \frac{T_b}{T_c} \times \frac{T_a}{T_b} = \frac{T_a}{T_d}$$

Types of Gear Boxes: The following types of gear boxes are used in automobiles:

- Sliding Mesh
- Constant Mesh
- Synchromesh


Sliding Mesh Gear Box


It is the simplest gear box. The following figure shows 4-speed gear box in neutral position. 4 gears are connected to the layshaft/countershaft. A reverse idler gear is mounted on another shaft and

always remains connected to the reverse gear of countershaft. This—H shift pattern enable the driver to select four different gear ratios and a reverse gear.

Gears in Neutral:


When the engine is running and clutch is engaged the clutch shaft gear drives the countershaft gear. The countershaft rotates opposite in direction of the clutch shaft. In neutral position only the clutch shaft gear is connected to the countershaft gear. Other gears are free and hence the transmission main shaft is not turning. The vehicle is stationary.

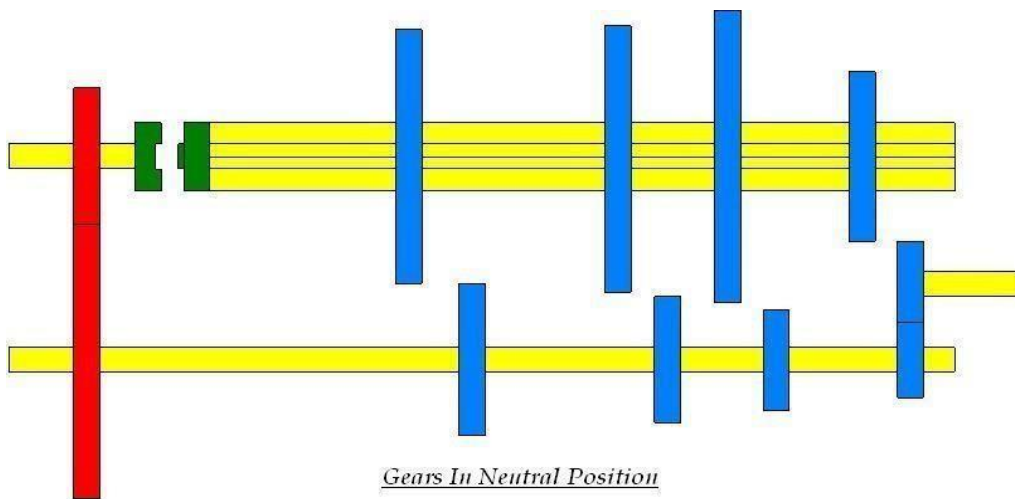


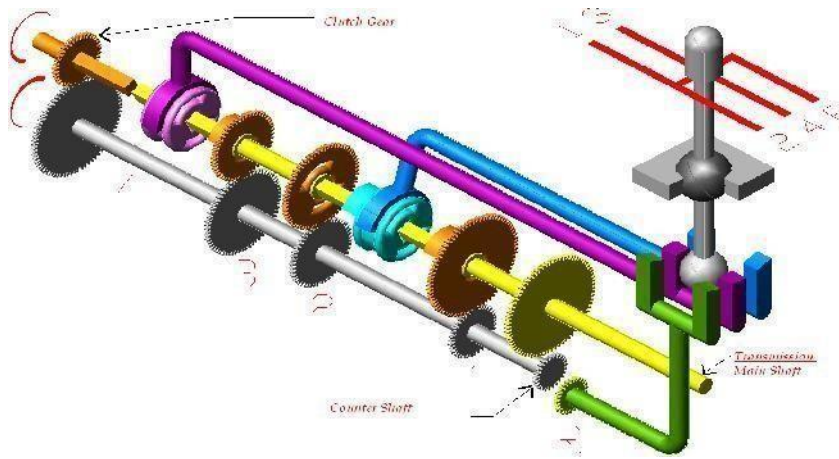

First or low shaft gear:


By operating the gear shift lever the larger gear on the main shaft is moved along the shaft to mesh with the first gear of the counter shaft. The main shaft turns in the same direction as that of the clutch shaft. Since the smaller countershaft is engaged with larger shaft gear a gear reduction of approximately 4:1 is obtained i.e. the clutch shaft turns 4 times for each revolution of main shaft.

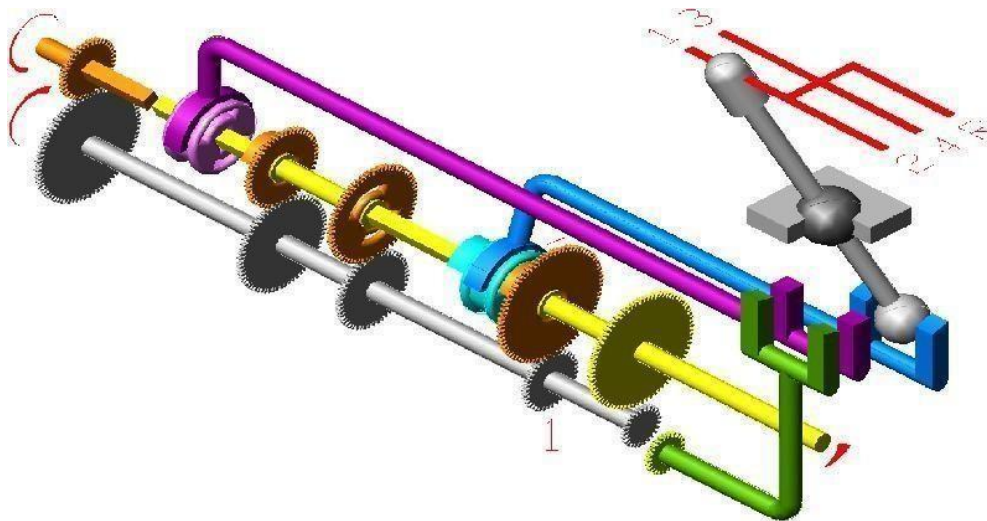


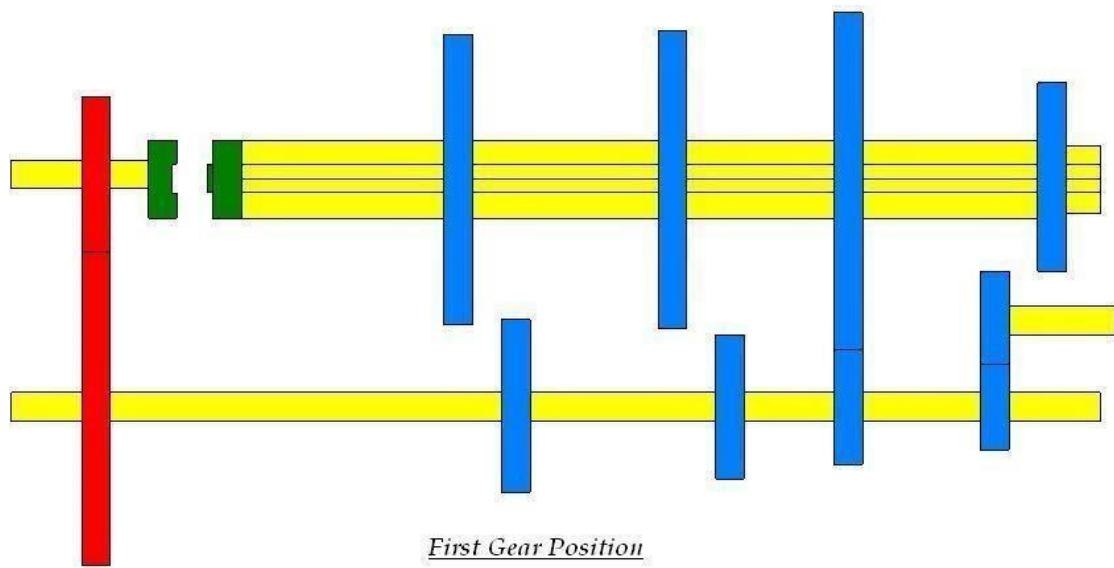

Secondspeedgear:


By operating the gear shift lever the third gear on the main shaft is moved along the shaft to mesh with the third gear of the counter shaft. The main shaft turns in same direction as clutch shaft. A gear reduction of approximately 3:1 is obtained.

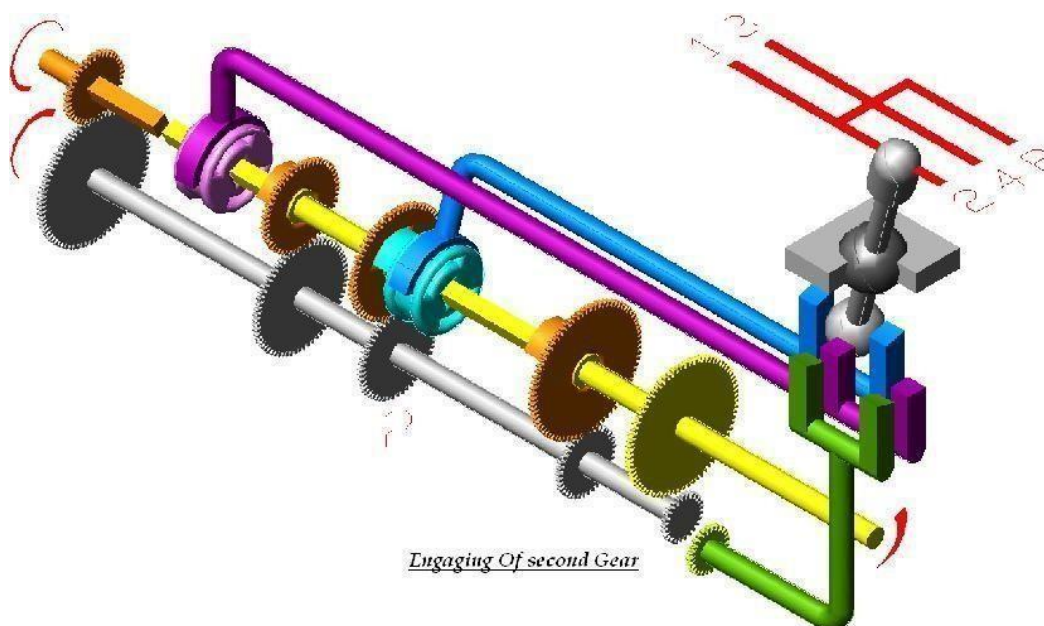


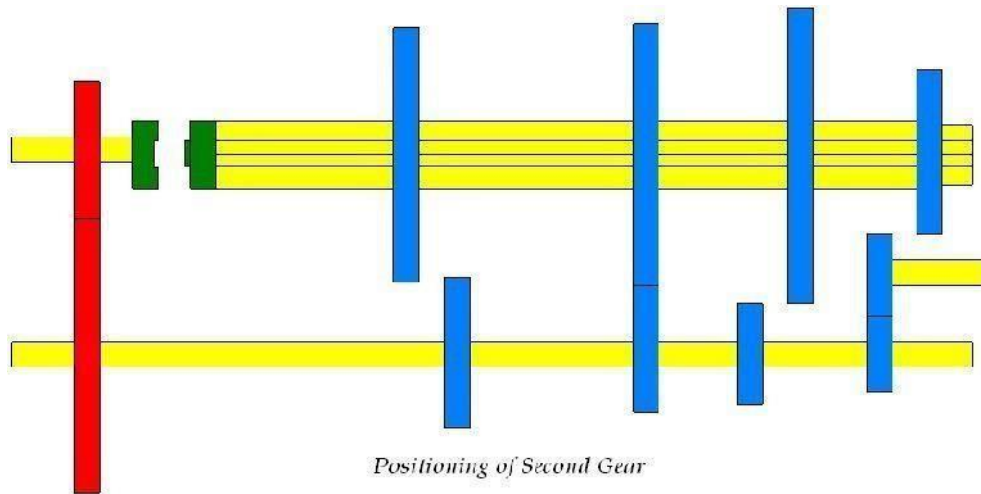

Third speed gear:


By operating the gear shift lever, the second gear of the main shaft and countershaft are demeshed and then the third gear of the main shaft are forced axially against the clutch shaft gear. External Teeth on the clutch shaft gear mesh with the internal teeth in the third and top gear. The main shaft turns in same direction as clutch shaft. A gear reduction of approximately 2:1 is obtained i.e. the clutch shaft turns 2 times for each revolution of main shaft.

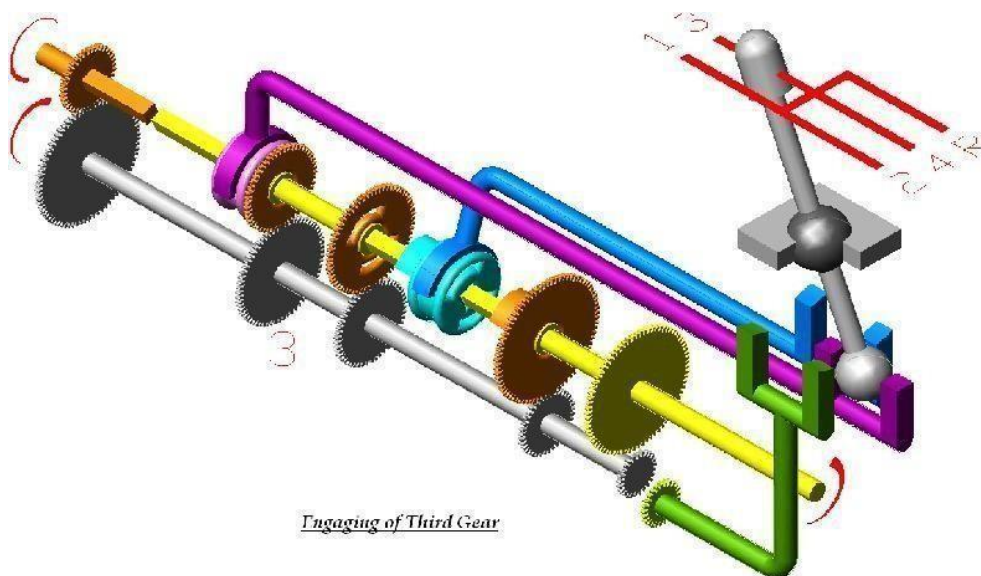


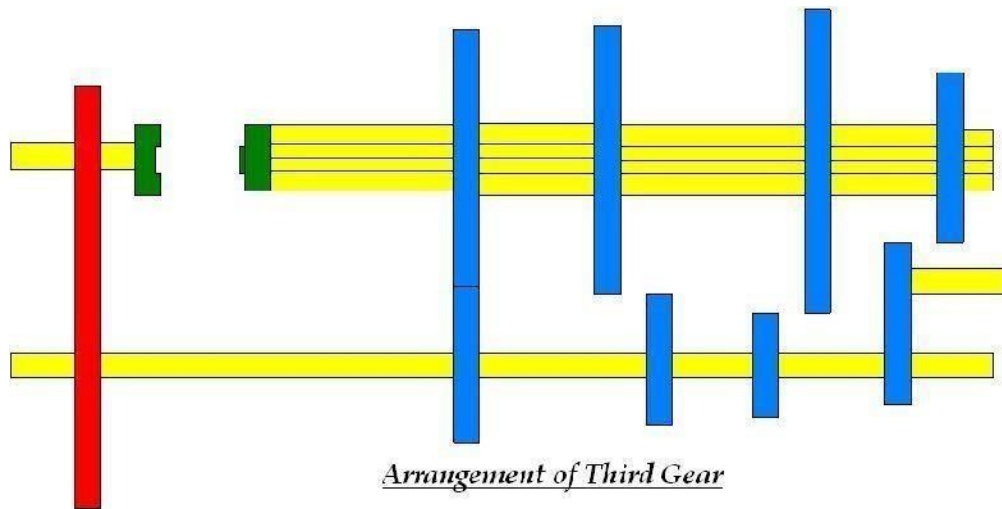

Fourth speed gear/Top or High-Speed Gear:


By operating the gear shaft lever the third gear of the main and countershaft is disengaged and the gears present on the main shaft along with the shaft is forced axially against the clutch shaft gear. External teeth present on the main shaft engage with the internal teeth present on the main shaft. The main shaft turns along with the clutch shaft and a gear ratio of approximately 1:1 is obtained.

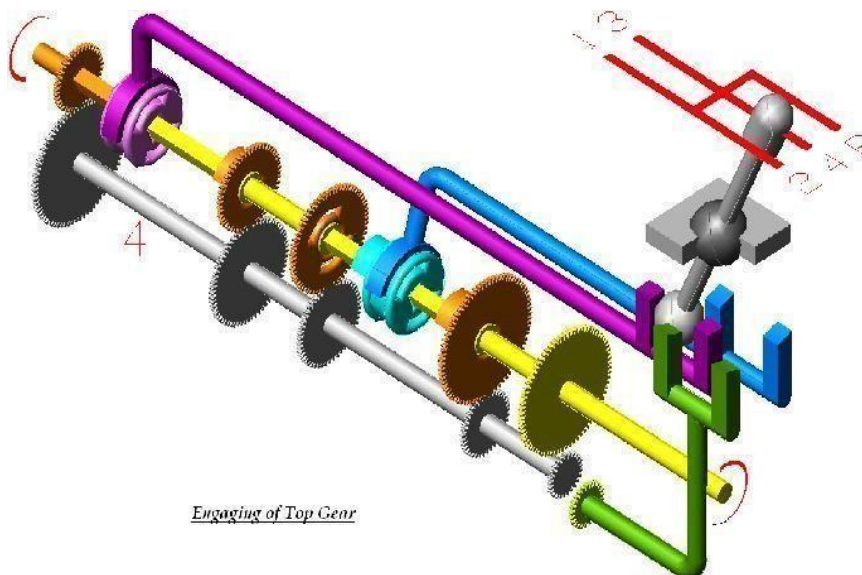


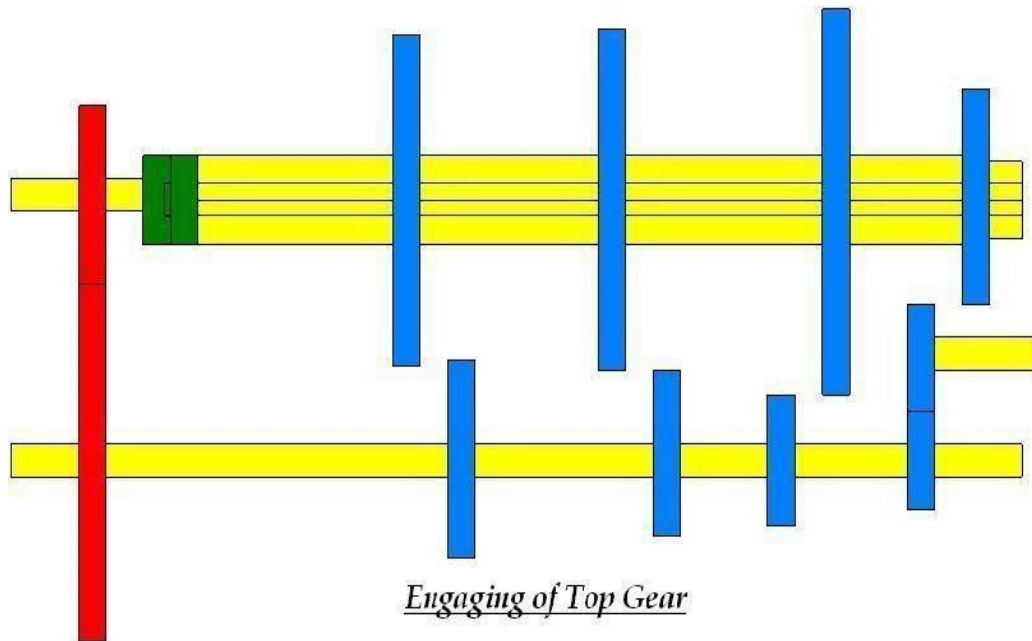

Reversegear:


By operating the gear shift lever, the last gear present on the main shaft is engaged with the reverse idler gear. The reverse idler gear is always in mesh with the countershaft gear. Interposing the idler gear between the counter-shaft reverse gear and main shaft gear, the main shaft turns in the direction opposite to the clutchshaft. This reverses the rotation of the wheels so that the wheel backs.

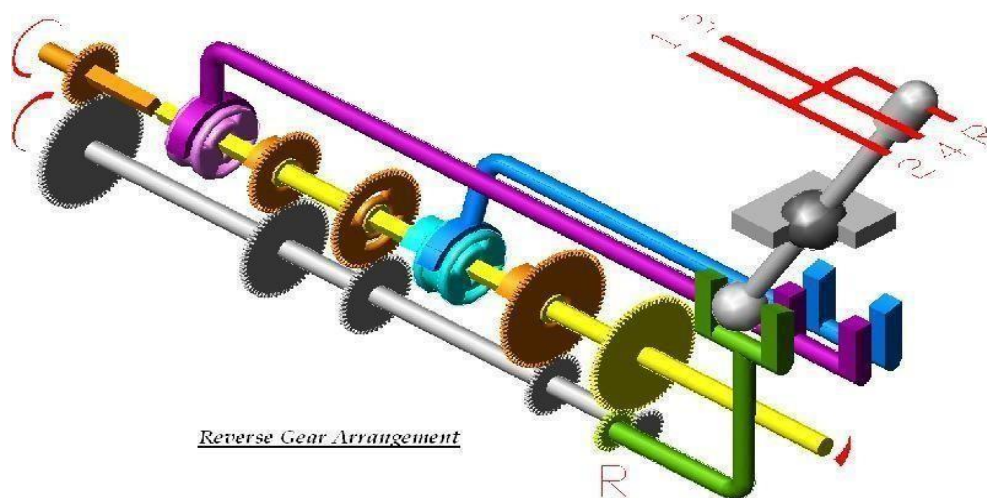

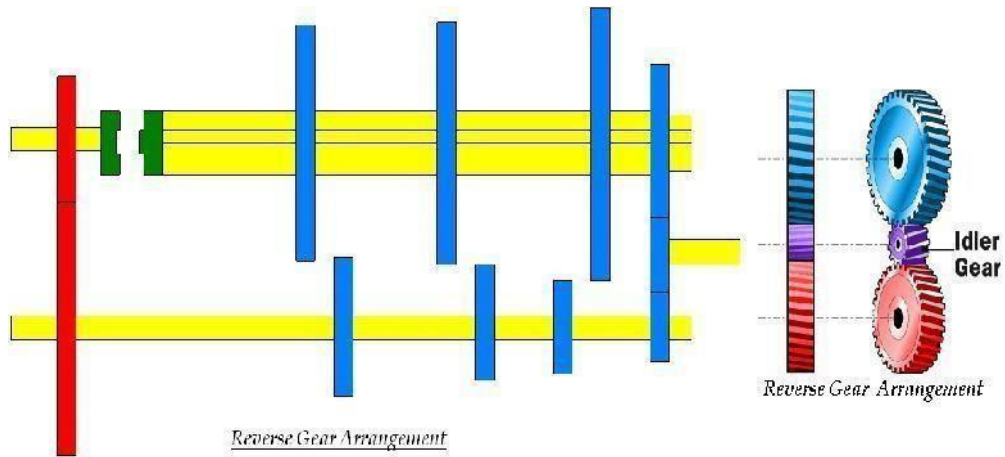

Constant Mesh Gear Box:

In this type of gear box, all gears of the main shaft are in constant mesh with the corresponding gears of the countershaft (Lay shaft). Two dog clutches are provided on the main shaft - one between the

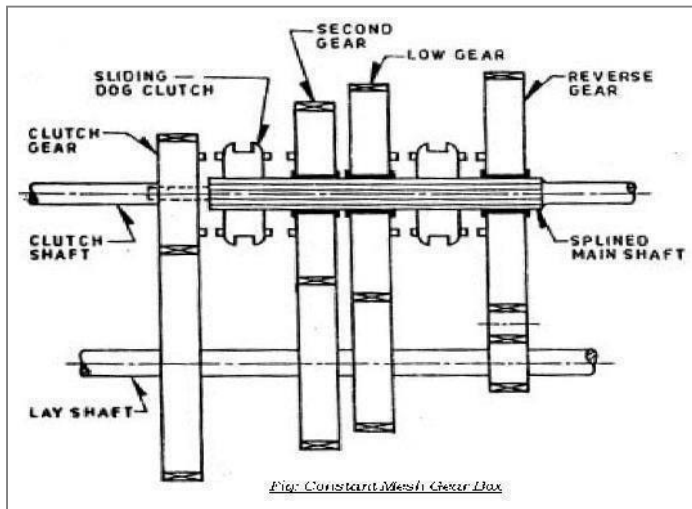

clutch gear and the second gear, and the other between the first gear and reverse gear. The main shaft is splined and all the gears are free on it. Dog clutch can slide on the shaft and rotates with it. All the gears on the countershaft are rigidly fixed with it.

When the left hand dog clutch is made to slide to the left by means of the gear shift lever, it meshes with the clutch gear and the top speed gear is obtained. When the left hand dog clutch meshes with the second gear, the second speed gear is obtained. Similarly by sliding the right hand dog clutch to the left and right, the first speed gear and reverse gear are obtained respectively. In this gear box because

all the gears are in constant mesh they are safe from being damaged and an unpleasant grinding sound does not occur while engaging and disengaging them.

Syncromesh Gear Box:

In sliding Mesh Gear box the two meshing gears need to be revolve at equal peripheral speeds to achieve a jerk less engagement and it is true for constant mesh gearbox in which the peripheral speeds of sliding dog and the corresponding gear on the output shaft must be equal. The peripheral speed is given by Where d_1 and N_1 are pitch circle diameter and r.p.m. of gear and d_2 and N_2 diameter and r.p.m. of attached dog respectively. Now $N_1 \neq N_2$ since $d_1 \neq d_2$. Thus there is a difference in gear and dog which necessitates double declutching. The driver has to disengage the clutch twice in quick succession therefore it is referred as double declutching. There are two steps involved in this process:

The clutch is disengaged i.e. first declutching and the gear system is placed in its neutral position. Now the clutch is reengaged and acceleration pedal is pressed to adjust the engine speed according to driver's judgment. The clutch is disengaged (i.e. second declutching) again the appropriate gear is engaged and then the clutch is reengaged

It is that gear box in which sliding synchronizing units are provided in place of sliding dog clutches as in case of constant mesh gear box. With the help of synchronizing unit, the speed of both the driving and driven shafts is synchronized before they are clutched together through train of gears. The arrangement of power flow for the various gears remains the same as in constant mesh gear box. The synchronizer is made of frictional materials. When the collar tries to mesh with the gear, the synchronizer will touch the gear first and use friction force to drive the gear to spin at the same speed as the collar. This will ensure that the collar is meshed into the gear very smoothly without grinding. Syncromesh gear devices work on the principle that two gears to be engaged are first brought into frictional contact which equalizes their speed after which they are engaged readily and smoothly.

The following types of devices are mostly used in vehicles:

- PinType
- Synchronizerringtype

A synchronizing system is used for smooth meshing. Synchromesh works like a friction clutch. In the following figure two conical surfaces cone-1 is the part of the collar and the cone-2 is the part of the gear wheel. Cone1, 2 are revolving at different speeds. While cone-2 is revolving, cone-1 gradually slides into it. Friction slows or speeds up the gear wheel. Finally both the cones revolve at same speed.


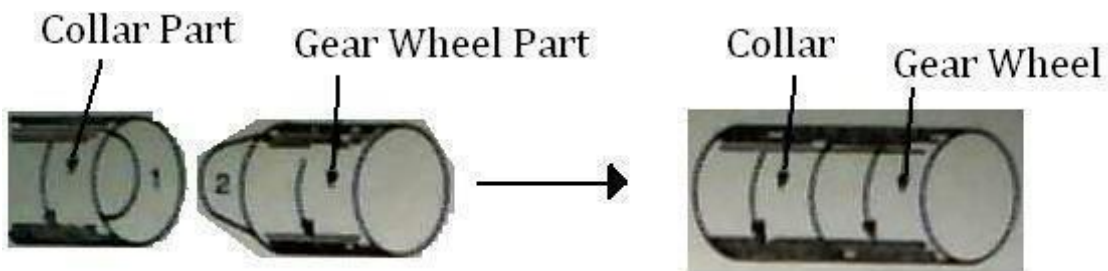


Fig: Two Cones acting as Friction Clutch

In the following Fig collar and gear wheel are separate and they are revolving at different speeds. The internal cone comes in contact with the outer cone of the gear wheel. Friction slows or speeds up the gear wheel.

And when the collar and gear wheel rotate at same speed the spring loaded outer ring of the collar is pushed forward. The dog slide smoothly into mesh without clashing. The collar and gear wheel lock and revolve at same speed. This the principle of synchromesh.

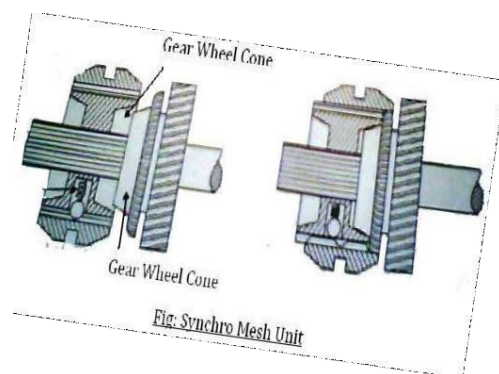

U-Joint:

A universal joint, U-joint, Cardan joint, Hardy-Spicer joint, or Hooke's joint is a linkage that transmits rotation between two non parallel shafts whose axes are coplanar but not coinciding, and is commonly used in shafts that transmit rotary motion. It is used in automobiles where it is used to transmit power from the gear box of the engine to the rear axle. The driving shaft rotates at a uniform angular speed, whereas the driven shaft rotates at a continuously varying angular speed.

A complete revolution of either shaft will cause the other to rotate through a complete revolution at the same time. Each shaft has fork at its end. The four ends of the two fork are connected by a centre piece, the arms of which rest in bearings, provided in fork ends. The centre piece can be of any shape of a cross, square or sphere having four pins or arms. The four arms are at right angle to each other.

When the two shafts are at an angle other than 180° (straight), the driven shaft does not rotate with constant angular speed in relation to the drive shaft; the more the angle goes toward 90° the jerkier the movement gets (clearly, when the angle $\beta = 90^\circ$ the shafts would even lock). However, the overall average speed of the driven shaft remains the same as that of driving shaft, and so speed ratio of the driven to the driving shaft on average is 1:1 over multiple rotations.

The angular speed ω_2 of the driven shaft, as a function of the angular speed of the driving shaft ω_1 and the angle of the driving shaft ϕ_1 , is found using:

$$\omega_2 = \omega_1 \cos \alpha / (1 - \sin 2\alpha \cdot \cos 2\theta)$$

For a given and set angle between the two shafts it can be seen that there is a cyclical variation in the input to output velocity ratio. Maximum values occur when $\sin \theta = 1$, i.e. when $\theta = 90^\circ$ and 270° . The denominator is greatest when $\theta = 0^\circ$ or 180° and this condition gives the minimum ratio of the velocities



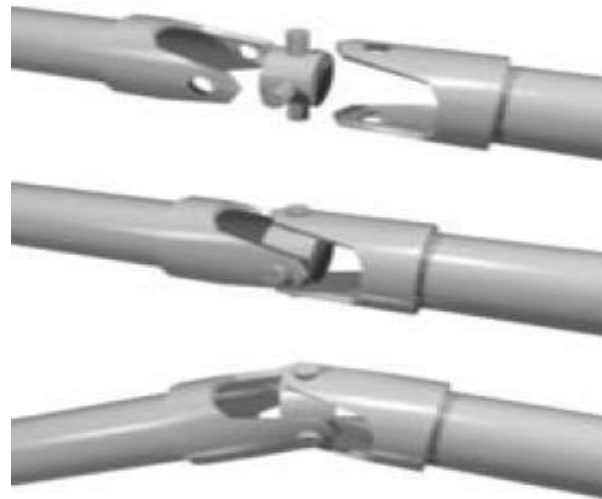



Fig: Components and assembly of U-Joint


Components of Hooke's Joint

Slip Joint in the Propeller Shaft;

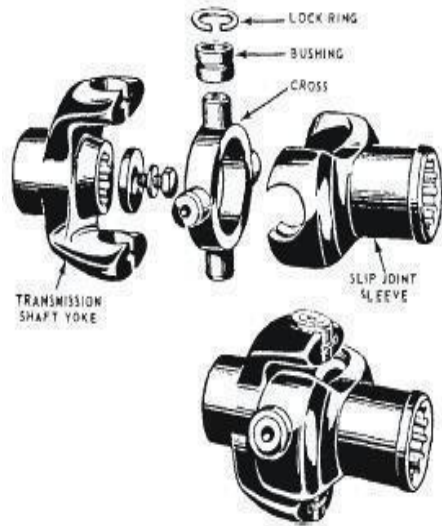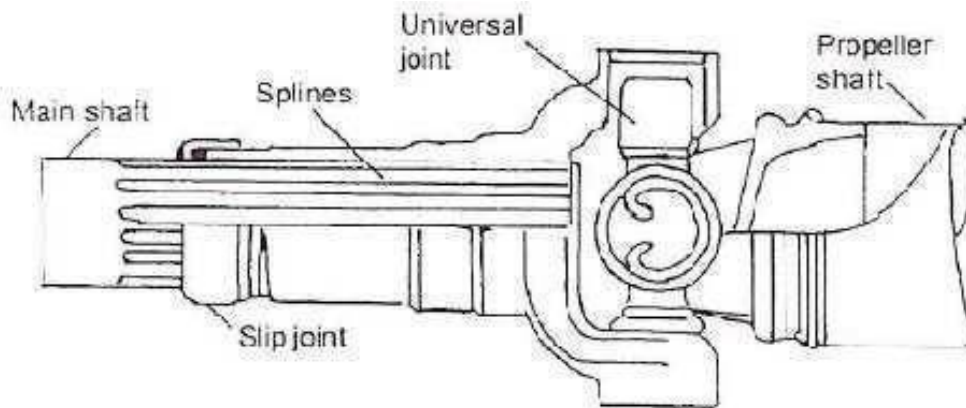

Hook Joint in the Propeller Shaft;

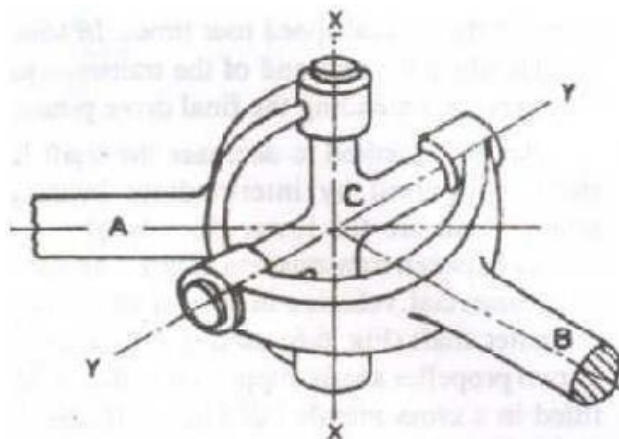

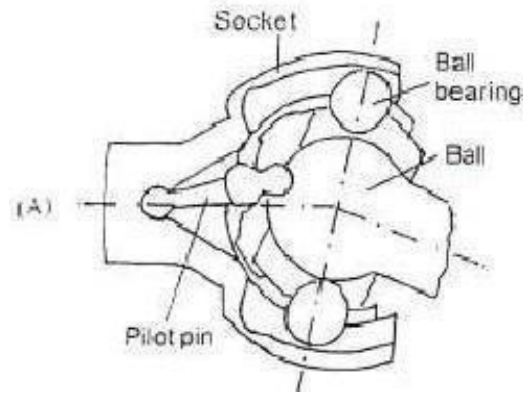

The Drive Shaft


The drive shaft, or propeller shaft, connects the transmission output shaft to the differential pinion shaft. Since all roads are not perfectly smooth, and the transmission is fixed, the drive shaft has to be flexible to absorb the shock of bumps in the road. Universal, or "U-joints" allow the drive shaft to flex (and stop it from breaking) when the drive angle changes.

Drive shafts are usually hollow in order to weigh less, but of a large diameter so that they are strong. High quality steel, and sometimes aluminum are used in the manufacture of the drive shaft. The shaft must be quite straight and balanced to avoid vibrating. Since it usually turns at engine speeds, a lot of damage can be caused if the shaft is unbalanced, or bent. Damage can also be caused if the U-joints are worn out.

There are two types of drive shafts, the Hotchkiss drive and the Torque Tube Drive. The Hotchkiss drive is made up of a drive shaft connected to the transmission output shaft and the differential pinion gear shaft. U-joints are used in the front and rear. The Hotchkiss drive transfers the torque of the output shaft to the differential. No wheel drive thrust is sent to the drive shaft. Sometimes this drive comes in two pieces to reduce vibration and make it easier to install (in this case, three U-joints are needed). The two-piece type needs ball bearings in a dustproof housing as center support for the shafts. Rubber is added into this arrangement for noise and vibration reduction.

The torque tube drive shaft is used if the drive shaft has to carry the wheel drive thrust. It is a hollow

steel tube that extends from the transmission to the rear axle housing. One end is fastened to the axle housing by bolts. The transmission end is fastened with a torque ball. The drive shaft fits into the torque tube. A U-joint is located in the torque ball, and the axle housing end is splined to the pinion gear shaft. Drive thrust is sent through the torque tube to the torque ball, to transmission, to engine and finally, to the frame through the engine mounts. That is, the car is pushed forward by the torque tube pressing on the engine.

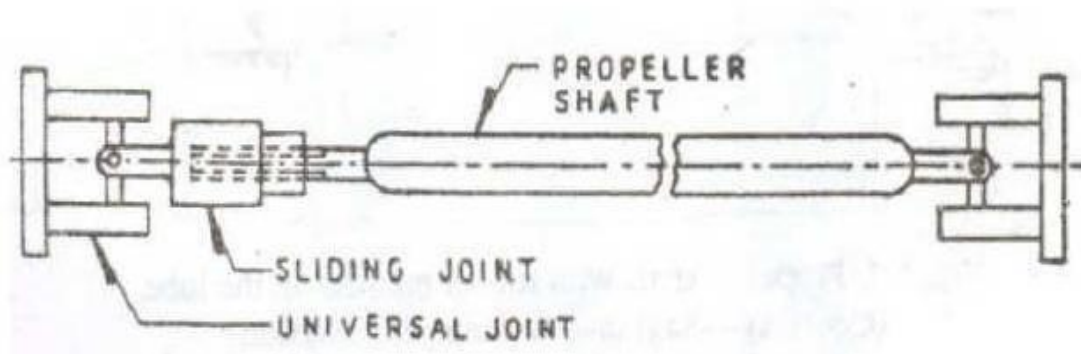

Differential Unit:

Differentials are a variety of gearbox, almost always used in one of two ways. In one of these, it receives one input and provides two outputs; this is found in every automobile. In automobile and other wheeled vehicles, the differential allows each of the driving wheels to rotate at different speeds, while supplying equal torque to each of them. In the other, less commonly encountered, it combines two inputs to create an output that is the sum (or difference) of the inputs. In automotive applications, the differential and its housing are sometimes collectively called a "pumpkin" (because the housing resembles a pumpkin).

Purpose:-

The differential gearbox has following functions:

- Avoids skidding of the rear wheels on a road turning.
- Reduces the speed of inner wheels and increases the speed of outer wheels, while drawing a

curve.

- Keep equal speeds of all the wheels while moving on a straight road.
- Eliminates a single rigid rear axle, and provides a coupling between two rear axles.

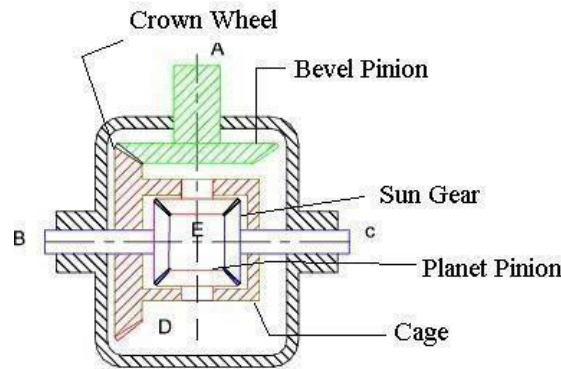


Fig: Differential gear Assembly

The following description of a differential applies to a "traditional" rear- or front-wheel-drive car or truck:

Power is supplied from the engine, via the transmission or gearbox, to a drive shaft termed as propeller shaft, which runs to the differential. A spiral bevel pinion gear at the end of the propeller shaft is encased within the differential itself, and it meshes with the large spiral bevel ring gear termed as crown wheel. The ring and pinion may mesh in hypoid orientation.

The ring gear is attached to a carrier, which holds what is sometimes called a spider, a cluster of four bevel gears in a rectangle, so each bevel gear meshes with two neighbors and rotates counter to the third that it faces and does not mesh with. Two of these spider gears are aligned on the same axis as the ring gear and drive the half shafts connected to the vehicle's driven wheels.

These are called the side gears. The other two spider gears are aligned on a perpendicular axis which changes orientation with the ring gear's rotation. These two gears are just called pinion gears, not to be confused with the main pinion gear. (Other spider designs employ different numbers of pinion gears depending on durability requirements.)


As the carrier rotates, the changing axis orientation of the pinion gears imparts the motion of the ring

gear to the motion of the side gears by pushing on them rather than turning against them (that is, the same teeth stay in contact), but because the spider gears are not restricted from turning against each other, within that motion the side gears can counter-rotate relative to the ring gear and to each other under the same force (in which case the same teeth do not stay in contact).

Thus, for example, if the car is making a turn to the right, the main ring gear may make 10 full rotations. During that time, the left wheel will make more rotations because it has further to travel, and the right wheel will make fewer rotations as it has less distance to travel. The side gears will rotate in opposite directions relative to the ring gear by, say, 2 full turns each (4 full turns relative to each other), resulting in the left wheel making 12 rotations, and the right wheel making 8 rotations.

The rotation of the ring gear is always the average of the rotations of the side gears. This is why if the wheels are lifted off the ground with the engine off, and the drive shaft is held (preventing the ring gear from turning inside the differential), manually rotating one wheel causes the other to rotate in the opposite direction by the same amount.

When the vehicle is traveling in a straight line, there will be no differential movement of the planetary system of gears other than the minute movements necessary to compensate for slight

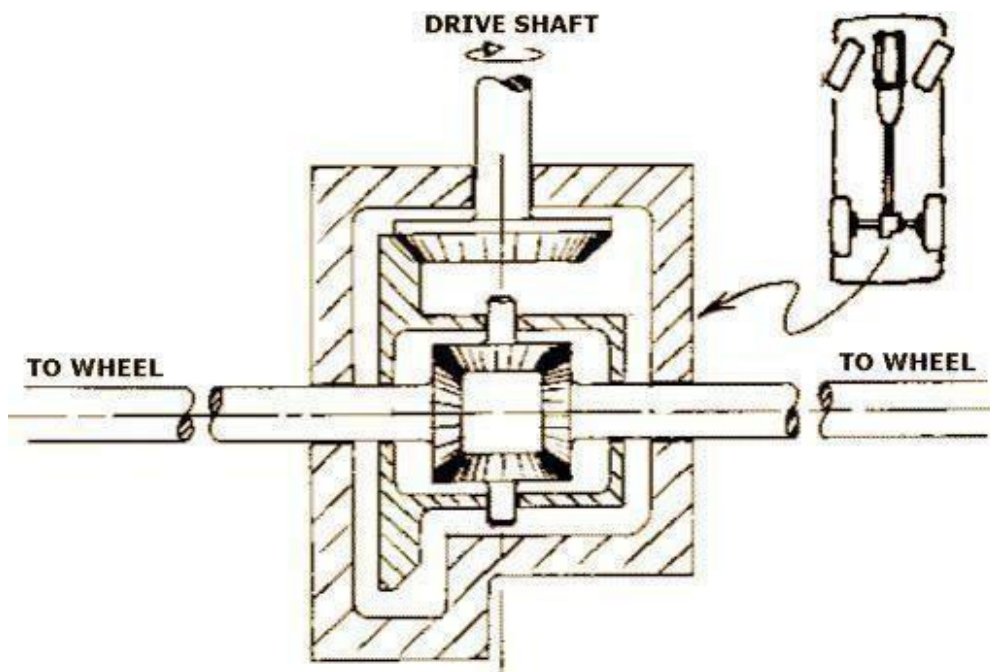

differences in wheel diameter, undulations in the road (which make for a longer or shorter wheel path), etc.

Automatic Transmission:

An automatic transmission (commonly "AT" or "Auto") is an automobile gearbox that can change gear ratios automatically as the vehicle moves, freeing the driver from having to shift gears manually.

Automatic Transmission Modes:

In order to select the mode, the driver would have to move a gear shift lever located on the steering column or on the floor next to him/her. In order to select gears/modes the driver must push a button in (called the shift lock button) or pull the handle (only on column mounted shifters) out. In some vehicles position selector buttons for each mode on the cockpit instead, freeing up space on the central console. Vehicles conforming to U.S. Government standards must have the modes ordered P- R-N-D- L (left to right, top to bottom, or clockwise). Prior to this, quadrant-selected automatic transmissions often utilized a P-N-D-L-R layout, or similar. Such a pattern led to a number of deaths and injuries owing to un-intentional gear miss-selection, as well the danger of having a selector (when worn) jump into Reverse from Low gear during engine braking maneuvers.

Automatic Transmissions have various modes depending on the model and make of the transmission. Some of the common modes are:

Park Mode (P):-

This selection mechanically locks the transmission, restricting the car from moving in any direction. A parking pawl prevents the transmission—and therefore the vehicle—from moving, although the vehicle's non-drive wheels may still spin freely. For this reason, it is recommended to use the hand brake (or parking brake) because this actually locks the (in most cases, rear) wheels and prevents them from moving. This also increases the life of the transmission and the park pin mechanism, because parking on an incline with the transmission in park without the parking brake engaged will cause undue stress on the parking pin. An efficiently-adjusted hand brake should also prevent the car from

moving if a worn selector accidentally drops into reverse gear during early morning fast-idle engine warmups.

Reverse(R):-

This puts the car into the reverse gear, giving the ability for the car to drive backwards. In order for the driver to select reverse they must come to a complete stop, push the shiftlock button in (or pull the shift lever forward in the case of a column shifter) and select reverse. Not coming to a complete stop can cause severe damage to the transmission. Many modern automatic gearboxes have a safety mechanism in place, which does to some extent prevent (but doesn't completely avoid) inadvertently putting the car in reverse when the vehicle is moving.

This mechanism usually consists of a solenoid-controlled physical barrier on either side of the Reverse position, which is electronically engaged by a switch on the brake pedal. Therefore, the brake pedal needs to be depressed in order to allow the selection of reverse. Some electronic transmissions prevent or delay engagement of reverse gear altogether while the car is moving.

Neutral/No gear(N):-

This disconnects the transmission from the wheels so the car can move freely under its own weight. This is the only other selection in which the car can be started.

Drive(D):-

This allows the car to move forward and accelerate through its range of gears. The number of gears a transmission has depends on the model, but they can commonly range from 3, 4 (the most common), 5, 6 (found in VW/Audi Direct Shift Gearbox), 7 (found in Mercedes 7G gearboxes, BMW M5 and VW/Audi Direct Shift Gearbox) and 8 in the newer models of Lexus cars. Some cars when put into D will automatically lock the doors or turn on the Daytime Running Lamps.

Overdrive([D],Od,Or A Boxed D):-

This mode is used in some transmissions to allow early Computer Controlled Transmission to engage

the Automatic Overdrive. In these transmissions, Drive (D) locks the Automatic Overdrive off, but is identical otherwise. OD (Overdrive) in these cars is engaged under steady speeds or low acceleration at approximately 35-45 mph (approx. 72 km/h). Under hard acceleration or below 35-45 mph, the transmission will automatically downshift. Vehicles with this option should be driven in this mode unless circumstances require a lower gear.

Second(2orS):-

This mode limits the transmission to the first two gears, or more commonly locks the transmission in second gear. This can be used to drive in adverse conditions such as snow and ice, as well as climbing or going downhill in the winter time. Some vehicles will automatically up-shift out of second gear in this mode if a certain rpm range is reached, to prevent engine damage.

First(1orL):-

This mode locks the transmission in first gear only. It will not accelerate through any gear range. This, like second, can be used during the winter season, or for towing.

As well as the above modes there are also other modes, dependent on the manufacturer and model.

Some examples include:

D5:- In Hondas and Acuras equipped with 5-speed automatic transmissions, this mode is used commonly for highway use (as stated in the manual), and uses all five forward gears.

D4:- This mode is also found in Honda and Acura 4 or 5-speed automatics and only uses the first 4 gears. According to the manual, it is used for "stop and go traffic", such as city driving.

D3:- This mode is found in Honda and Acura 4-speed automatics and only uses the first 3 gears. According to the manual, it is used for stop & go traffic, such as city driving. This mode is also found in Honda and Acura 5-speed automatics.

This is the manual selection of gears for automatics, such as Porsche's Tiptronic. This feature can also be found in Chrysler and General Motors products such as the Dodge Magnum and Pontiac G6. The driver can shift up and down at will, by toggling the shift lever (console mounted) like a semi-

automatic transmission. This mode may be engaged either through a selector/position or by actually changing gear (e.g. tipping the gear-down paddles mounted near the driver's fingers on the steering wheel).

The predominant form of automatic transmission is hydraulically operated, using a fluid coupling/torque converter and a set of planetary gear-sets to provide a range of torque multiplication.

Parts and Operation:-

A hydraulic automatic transmission consists of the following parts:

- Torque Converter/Fluid Coupling
- Planetary Gear Set
- Clutch packs & Bands
- Valve Body
- Hydraulic or Lubricating Oil

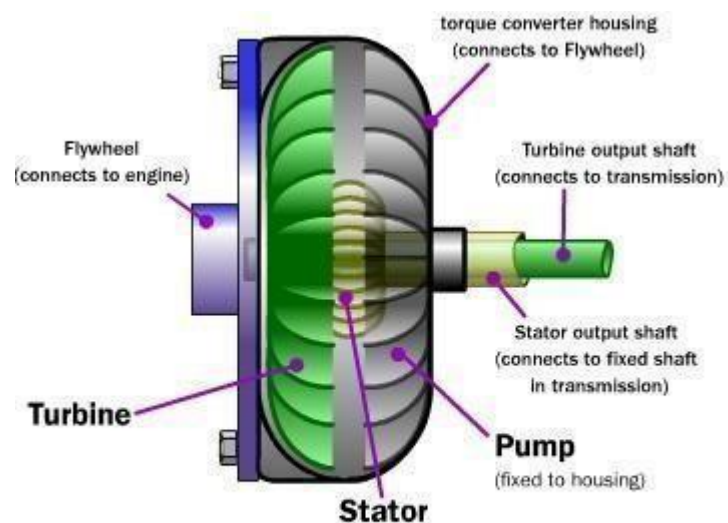


Fig: Cut section Model of Torque converter

Torque Converter/Fluid Coupling: -Unlike a manual transmission system, automatic transmission does not use a clutch to disconnect power from the engine temporarily when shifting gears. Instead, a device called a torque converter was invented to prevent power from being temporarily disconnected from the engine and also to prevent the vehicle from stalling when the transmission is in gear.

A fluid coupling/torque converter consists of a sealed chamber containing two toroidal-shaped, vaned components, the pump and turbine, immersed in fluid (usually oil). The pump or driving torus (the latter a General Motors automotive term) is rotated by the prime mover, which is typically an internal combustion engine or electric motor. The pump's motion imparts a relatively complex centripetal motion to the fluid. Simplified, this is a centrifugal force that throws the oil outwards against the coupling's housing, whose shape forces the flow in the direction of the turbine or driven torus (the latter also a General Motors term).

Here, Coriolis force reaction transfers the angular fluid momentum outward and across, applying torque to the turbine, thus causing it to rotate in the same direction as the pump. The fluid leaving the center of the turbine returns to the pump, where the cycle endlessly repeats. The pump typically is connected to the flywheel of the engine—in fact, the coupling's enclosure may be part of the flywheel proper, and thus is turned by the engine's crankshaft. The turbine is connected to the input shaft of the transmission. As engine speed increases while the transmission is in gear, torque is transferred from the engine to the input shaft by the motion of the fluid, propelling the vehicle. In this regard, the behavior of the fluid coupling strongly resembles that of a mechanical clutch driving a manual transmission.

A torque converter differs from a fluid coupling in that it provides a variable amount of torque multiplication at low engine speeds, increasing "breakaway" acceleration. This is accomplished with a third member in the "coupling assembly" known as the stator, and by altering the shapes of the vanes inside the coupling in such a way as to curve the fluid's path into the stator. The stator captures the kinetic energy of the transmission fluid in effect using the left-over force of it to enhance torque multiplication.

Tiptronic transmission is a special type of automatic transmission with a computer controlled automatic shift. The driver can switch the transmission to manual mode, which lets her shift the gear at her wish sequentially up (+) or down (-) without disengaging the clutch. This works just like a manual transmission; however, it still uses a torque converter to transfer power from the engine. Unfortunately, this is less efficient than a manual transmission.

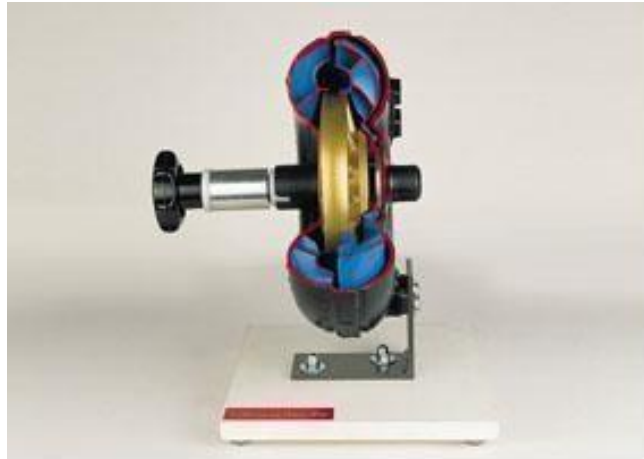


Fig: Torque converter

Planetary Gear-Set: - The automatic system for current automobiles uses a planetary gear set instead of the traditional manual transmission gear set. The planetary gear set contains four parts: sun gear, planet gears, planet carrier, and ring gear. Based on this planetary set design, sun gear, planet carrier, and ring gear spin centrifugally. By locking one of them, the planetary set can generate three different gear ratios, including one reverse gear, without engaging and disengaging the gear set. The gear set is actuated by hydraulic servos controlled by the valve body, providing two or more gear ratios.

Clutch Packs And Bands: - A clutch pack consists of alternating disks that fit inside a clutch drum. Half of the disks are steel and have splines that fit into grooves on the inside of the drum.

The other half have a friction material bonded to their surface and have splines on the inside edge that fit grooves on the outer surface of the drum. There is a piston inside the drum that is

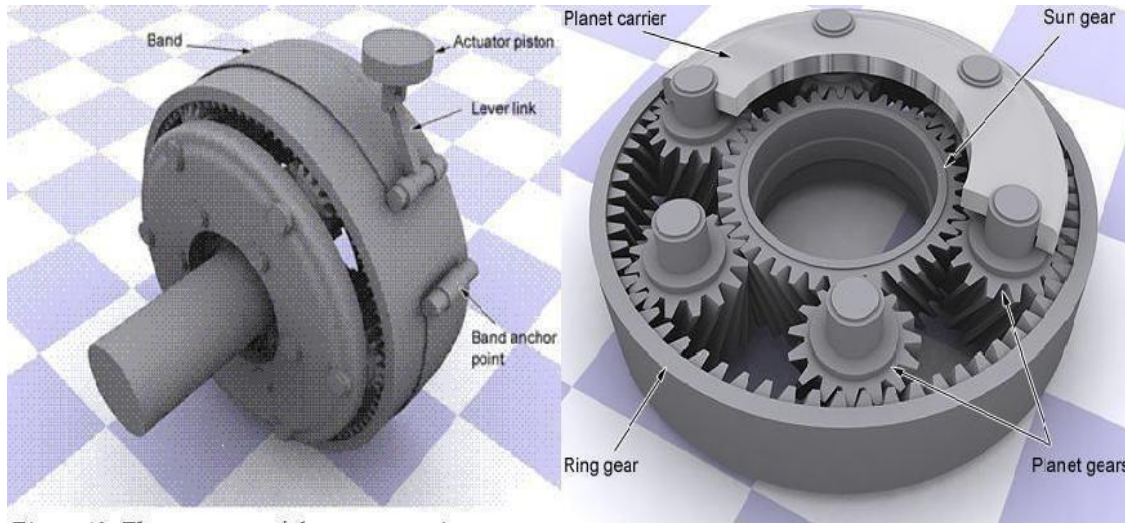


Figure 12: The structure of the actuator piston, lever link, and band system.

Figure 10 Planetary Gear Set.

activated by oil pressure at the appropriate time to squeeze the clutch pack together so that the two components become locked and turn as one.

A band is a steel strap with friction material bonded to the inside surface. One end of the band is anchored against the transmission case while the other end is connected to a servo. At the appropriate time hydraulic oil is sent to the servo under pressure to tighten the band around the drum to stop the drum from turning.

The bands come into play for manually selected gears, such as low range or reverse, and operate on the planetary drum's circumference. Bands are not applied when drive/overdrive range is selected, the torque being transmitted by the sprag clutches instead.

The sun gear is connected to a drum, which can be locked by a band. The ring gear is directly connected to the input shaft, which transfers power from the engine. The planet carrier is connected to the output shaft, which transfers power into the wheels.

Based on this design, when in neutral, both band and clutch sets are released. Turning the ring gear can only drive planet gears but not the planet carrier, which stays static if the car is not moving. The planet gears drive the sun gear to spin freely. In this situation, the input shaft is not able to transfer power to the output shaft. When shifting to 1st gear, the band locks the sun gear by locking the drum.

The ring gear drives the planet carrier to spin. In this situation, the ring gear (input shaft) spins faster than the planet carrier (output shaft).

To shift to higher gear, the band is released and the clutch is engaged to force the sun gear and planet carrier (output shaft) to spin at the same speed. The input shaft will also spin at the same speed as the output shaft, which makes the car run faster than in 1st gear. Using a compound planetary gear set generates more gear ratios with a special gear ratio, over-drive gear whose gear ratio is smaller than 1.

This will make the gear shift smoother. Both the band and clutch piston are pressurized by the hydraulic system. The part connecting the band or clutches to the hydraulic system is called the shift valve, while the one connecting the hydraulic system to the output shaft is called the governor.

The governor is a centrifugal sensor with a spring loaded valve. The faster the governor spins, the more the valve opens. The more the valve opens, the more the fluid goes through and the higher the pressure applied on the shift valve. Therefore, each band and clutch can be pushed to lock the gear based on a specific spin speed detected by the governor from the output shaft. To make the hydraulic system work efficiently, a complex maze of passages was designed to replace a large number of tubes. For modern cars, an electronic controlled (computer controlled) solenoid pack is used to detect throttle position, vehicle speed, engine speed, engine load, brake pedal position, etc., and to automatically choose the best gear for a moving vehicle.

Principally, a type of device known as a sprag or roller clutch is used for routine upshifts/downshifts. Operating much as a ratchet, it transmits torque only in one direction, freewheeling or "overrunning" in the other. The advantage of this type of clutch is that it eliminates the sensitivity of timing a simultaneous clutch release/apply on two planetaries, simply "taking up" the drivetrain load when actuated, and releasing automatically when the next gear's sprag clutch assumes

the torque

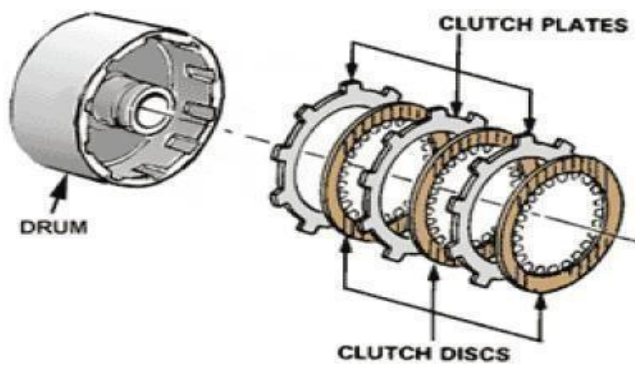


Fig: CLUTCH PACKS

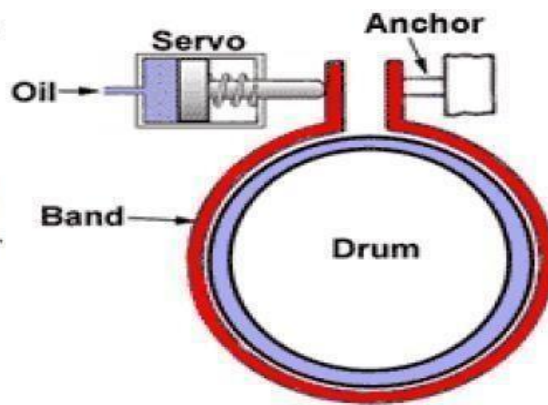


Fig: BANDS

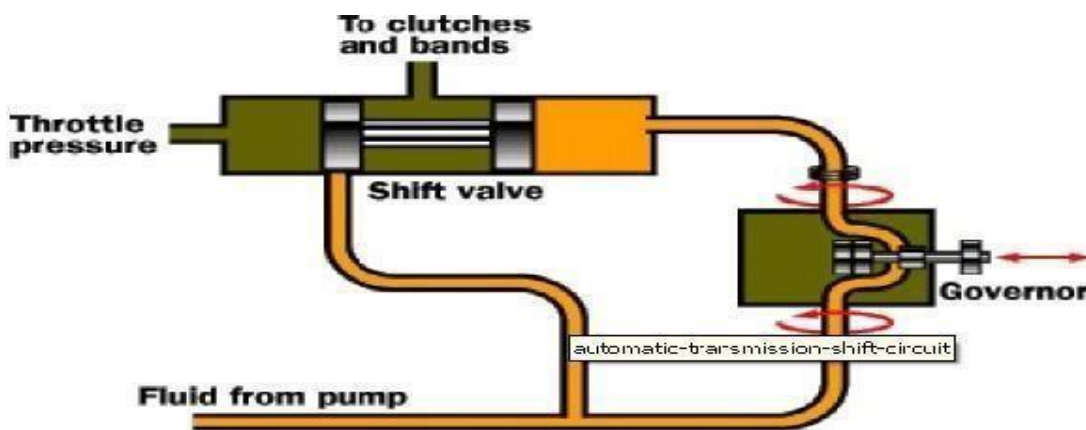


Fig: Hydraulic System

Valve Body: - Hydraulic control center that receives pressurized fluid from a main pump operated by the fluid coupling/torque converter. The pressure coming from this pump is regulated and used to run a network of spring-loaded valves, check balls and servo pistons.

The valves use the pump pressure and the pressure from a centrifugal governor on the output side (as well as hydraulic signals from the range selector valves and the throttle valve or modulator) to control which ratio is selected on the gearset; as the car and engine change speed, the difference between the pressures changes, causing different sets of valves to open and close.

Each of the many valves in the valve body has a specific purpose and is named for that function. For example the 2-3 shift valves activate the 2nd gear to 3rd gear up-shift or the 3-2 shift timing valve which determines when a downshift should occur.

The hydraulic pressure controlled by these valves drives the various clutch and brake band actuators, thereby controlling the operation of the planetary gearset to select the optimum gear ratio for the

current operating conditions. However, in many modern automatic transmissions, the valves are controlled by electro-mechanical servos which are controlled by the Engine Management System or a separate transmission controller.

The most important valve and the one that you have direct control over is the manual valve. The manual valve is directly connected to the gear shift handle and covers and uncovers various passages depending on what position the gear shift is placed in. When you place the gear shift in Drive, for instance, the manual valve directs fluid to the clutch pack(s) that activates 1st gear.

It also sets up to monitor vehicle speed and throttle position so that it can determine the optimal time and the force for the 1 - 2 shifts. On computer controlled transmissions, you will also have electrical solenoids that are mounted in the valve body to direct fluid to the appropriate clutch packs or bands under computer control to more precisely control shift points.

Hydraulic & Lubricating Oil: - A component called Automatic Transmission Fluid (ATF) which is part of the transmission mechanism provides lubrication, corrosion prevention, and a hydraulic medium to convey mechanical power.

Primarily it is made of refined petroleum and processed to provide properties that promote smooth power transmission and increase service life. ATF is one of the parts of the automatic transmission that needs routine service as the vehicle ages.

SemiAutomaticTransmission

A semi-automatic transmission (also known as clutch less manual transmission, automated manual transmission, e-gear, shift-tronic, flappy paddle gearbox, or paddle shift gearbox) is a system which uses electronic sensors, processors and actuators to do gear shifts on the command of the driver. This removes the need for a clutch pedal which the driver otherwise needs to depress before making a gear change, since the clutch itself is actuated by electronic equipment which can synchronize the timing and torque required to make gear shifts quick and smooth.

The system was designed by European automobile manufacturers to provide a better driving

experience, especially in cities where congestion frequently causes stop-and-go traffic patterns. Like a tiptronic transmission, a semi-automatic transmission can also be switched to manual mode to perform gear shifting at the driver's wish.

The two most common semi-automatic transmissions

- Direct shift transmission (or dual-clutch transmission)
- Electro-hydraulic manual transmission (or sequential transmission)

Direct shift transmission: In direct shift transmission direct shift gear box is used. The Direct-Shift Gearbox or D.S.G. is an electronically controlled, twin-shaft dual-clutch manual gearbox, without a conventional clutch pedal, with full automatic or semi-manual control.

Unlike the conventional manual transmission system, there are two different gear/collar sets, with each connected to two different input/output shafts. The outer clutch pack drives gears 1, 3, 5 and reverse. It is just like two conventional manual transmission gear boxes in one. The inner clutch pack drives gears 2, 4, and 6. Instead of a standard large dry single-plate clutch, each clutch pack is a collection of four small wet interleaved clutch plates.

Due to space constraints, the two clutch assemblies are concentric. To automatically shift from 1st gear to 2nd gear, first the computer detects that the spinning speed of the input shaft is too high, and engages the 2nd gear's collar to the 2nd gear. The clutch then disengages from 1st gear's input shaft, and engages the 2nd gear's input shaft. Controlled by computer, the gear shift becomes extremely fast compared with a conventional manual transmission.

Using direct contact of the clutch instead of fluid coupling also improves power transmission efficiency. Another advanced technology used for direct shift transmission allows it to perform —double clutching— by shifting the gear to neutral first, adjusting the spinning speed of the input shaft, and then shifting to the next gear. This makes gear shifting very smooth.

Operation Modes Of D.S.G.:- "D" mode:

When the motor vehicle is stationary, in neutral, both clutch packs are fully disengaged. When the driver has selected D for drive (after pressing the foot brake pedal), the transmission's first gear is selected on the first shaft, and the clutch prepares to engage. At the same time, the second gear is also selected, but the clutch pack for second gear remains fully disengaged. When the driver releases the brake pedal, the clutch pack for the first gear takes up the drive, and the vehicle moves forward. Pressing the accelerator pedal increases forward speed. As the car accelerates, the transmission's computer determines when the second gear (which is connected to the second clutch) should be fully utilized.

Depending on the vehicle speed and amount of power being requested by the driver (full throttle or part-throttle normal driving), the D.S.G. then up-shifts. During this sequence, the DSG disengages the first clutch while engaging the second clutch (all power from the engine is now going through the second shaft), thus completing the shift sequence. This sequence happens in 8 ms, and there is practically no power loss.

Once the vehicle has shifted up to second gear, the first gear is immediately de-selected, and third gear (being on the same shaft as 1st and 5th) is pre-selected, and is pending. Once the time comes to shift, the second clutch disengages and the first clutch re-engages. This method of operation continues in the same manner up to 6th gear. Downshifting is similar to up-shifting but in reverse order. The car's computer senses the car slowing down or more power required, and thus lines up a lower gear on one of the shafts not in use, and then completes the downshift.

The actual shift timings are determined by the D.S.G.'s Electronic Control Unit, or E.C.U., which commands a hydro-mechanical unit, and the two units combined are called a "mechatronics" unit. Because the D.S.G. & E.C.U. uses "fuzzy logic", the operation of the DSG is said to be "adaptive"; i.e. the DSG will "learn" how the user drives the car, and will tailor the shift points accordingly.

In the vehicle instrument display, between the speedometer and tachometer, the available shift positions are shown, the current position of the shift lever is highlighted, and the current gear ratio is also displayed as a number. Under "normal", progressive acceleration and deceleration, the DSG shifts in a "sequential" mode, i.e. under acceleration: 1 > 2 > 3 > 4 > 5 > 6, and the same sequence reversed for deceleration. However, if the car is being driven at set speeds, with a light throttle opening, and the accelerator pedal is then pressed fully to the floor, this activates the "kick-down" function. During kick-down, the DSG can skip gears, going from 6th gear straight down to 3rd gear. **"S"**

mode:

The floor selector lever also has an S position. When S is selected, "sport" mode is activated in the DSG. Sport mode still functions as a fully automatic mode, identical in operation to "D" mode, but up-shifts and down-shifts are made much higher up the engine rev-range. This aids a sportier driving manner, by utilizing considerably more of the available engine power, and also maximizing engine braking. However, this mode does have a worsening effect on the vehicle fuel consumption, when compared to D mode. S is also highlighted in the instrument display, and like D mode, the currently used gear ratio is displayed as a number.

Manual (Tiptronic) Mode:

Additionally, the floor shift lever also has another plane of operation, for manual or tiptronic mode, with spring-loaded "+" and "-" positions. This plane is selected by moving the stick away from the driver (in vehicles with the driver's seat on the right, the lever is pushed to the left, and in left-hand drive cars, the stick is pushed to the right) when in "D" mode only. When this plane is selected, the D.S.G. can now be controlled like a manual gearbox, even though under a sequential shift pattern.

The readout in the instrument display changes to 6 -5- 4- 3- 2- 1, and just like the automatic modes, the currently used gear ratio is highlighted. To change up a gear, the lever is pushed forwards (against a spring pressure) towards the "+", and to change down, the lever is pulled rearward towards the "-".

The DSG box can now be operated with the gear changes being (primarily) determined by the driver. This method of operation is commonly called "tiptronic". When accelerating in Manual/tiptronic mode, the D.S.G. will still

automatically change up just before the red-line and when decelerating, it will change down automatically at very low revs, just before the engine idle speed (tick over). Furthermore, if the driver calls for a gear when it is not appropriate (i.e., engine speed near the red-line, and a down change is requested) the D.S.G. will delay the change until the engine revs are at an appropriate level to cope with the requested gear.

PaddleShifters:

On certain "sporty" or high-powered cars paddle shifters are available. The paddle shifters have two distinct advantages: the driver can safely keep both hands on the steering wheel when using the Manual/tiptronic mode; and the driver can immediately manually override either of the automatic programs (D or S) on a temporary basis, and gain instant manual control of the D.S.G. box.

If the manual override of one of the automatic programs (D or S) is utilized intermittently, the gearbox will "default" back to the previously selected automatic mode after a predetermined duration of inactivity of the paddles, or when the car becomes stationary. Alternatively, should the driver wish to revert immediately to automatic control, this can be done by holding the "+" paddle for at least two seconds.

ElectroHydraulicManualTransmission:

In electro-hydraulic manual transmission (also known as sequential transmission) the gear set is almost the same as the conventional transmission system, except that the shifting of the selector is not an H-pattern. Instead, all selector forks are connected to a drum. The drum has several grooves, and each has a ball sliding in it. Each fork hooks up to a ball and can be moved forward and backward when the drum is turning. Based on the pattern of the grooves on the drum, by turning the drum, each fork can move forward and backward in turn, which makes gear selection sequential. Therefore, it is impossible for an electro-hydraulic manual transmission to perform a gear shift from 1st to 3rd or 4th to 2nd. The shifting must be sequential, like 1st → 2nd → 3rd → 4th, or 4th → 3rd → 2nd → 1st.

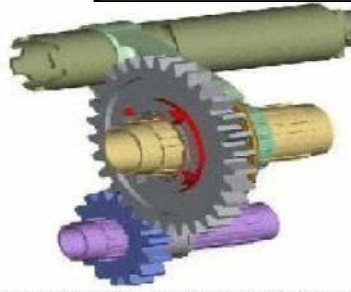
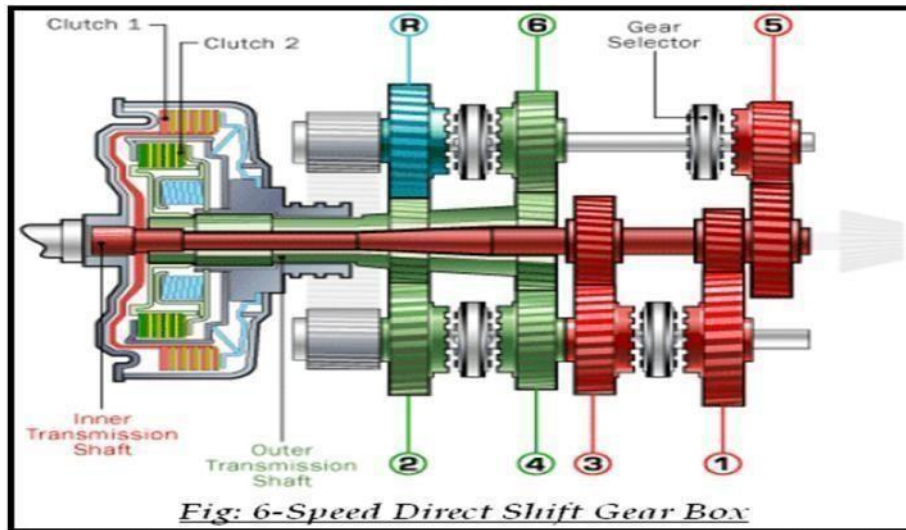


Fig: Collar and Fork move when Drum is Turning



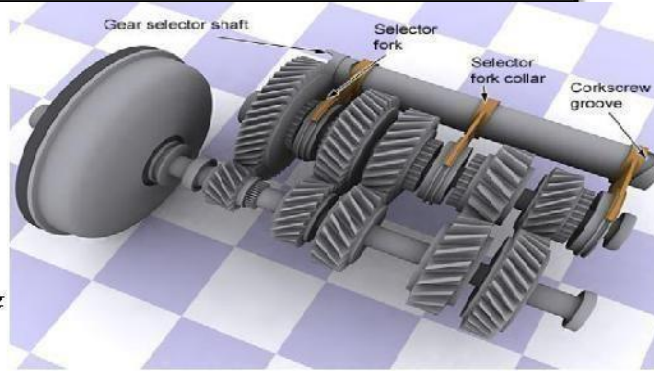


Fig: Electro-Hydraulic Manual Transmission

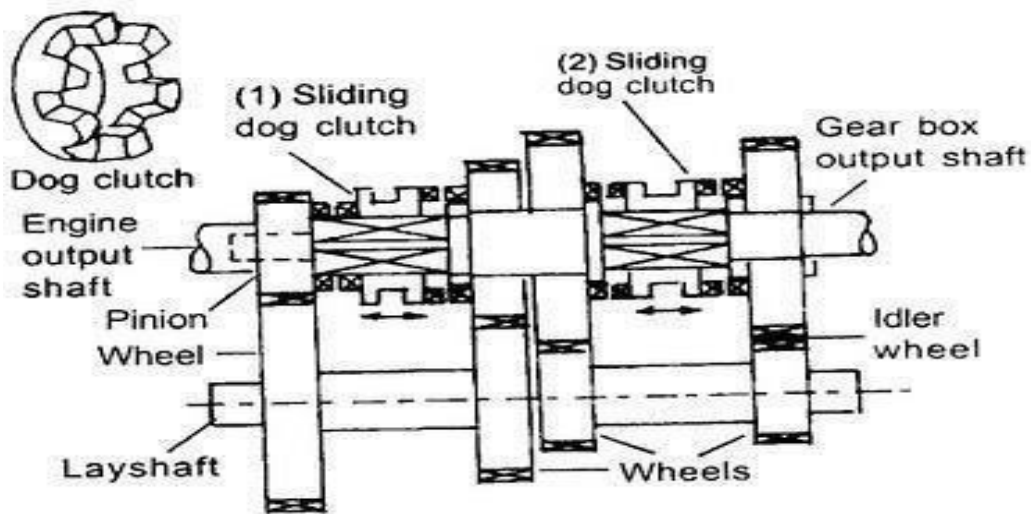

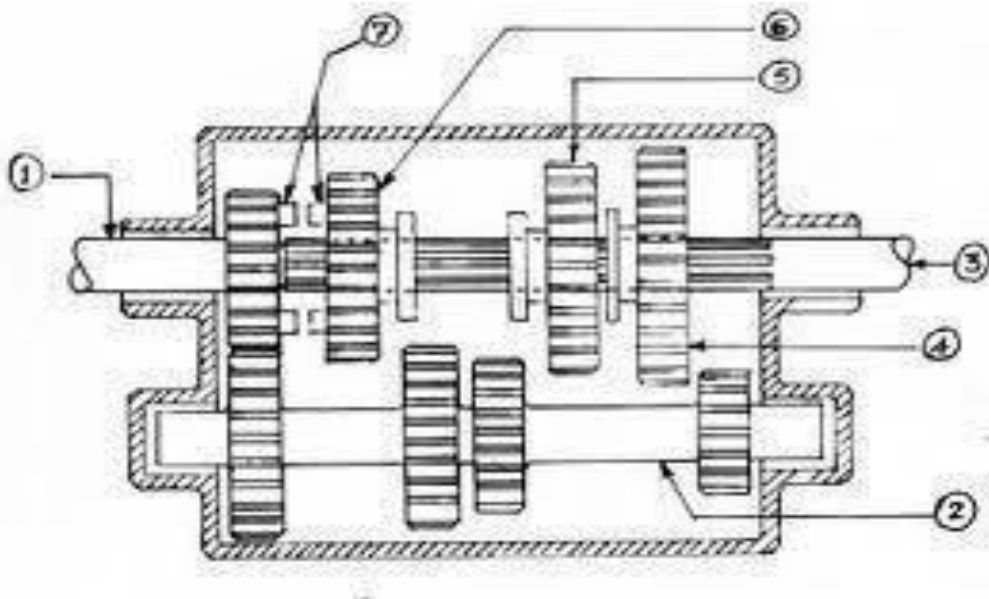

Hotchkiss drive;

The Hotchkiss drive is a system of power transmission. It was the dominant form of power transmission for front-engine, rear-wheel drive layout cars in the 20th century. The name comes from the French automobile firm of Hotchkiss, although it is clear that other makers (such as Peerless) used similar systems before Hotchkiss.

During the early part of the 20th century the two major competing systems of power transmission were the shaft-drive and chain-drive configurations. The Hotchkiss drive is a shaft-drive system (another type of direct-drive transmission system is the torque tube, which was also popular until the 1950s).

All shaft-drive systems consist of a driveshaft (also called a "propeller shaft" or Cardan shaft) extending from the transmission in front to the differential in the rear. The differentiating characteristic of the Hotchkiss drive is the fact that it uses universal joints at both ends of the driveshaft, which is not enclosed. The use of two universal joints, properly phased and with parallel alignment of the drive and driven shafts, allows the use of simple cross-type universals. (In a


torque-tube arrangement only a single universal is used at the end of the transmission tail shaft, and this universal should be a constant velocity joint.)

In the Hotchkiss drive, slip-splines or a plunge-type (ball and trunnion u-joint) eliminate thrust transmitted back up the driveshaft from the axle, allowing simple rear-axle positioning using parallel leaf springs. (In the torque-tube type this thrust is taken by the torque tube to the transmission and thence to the transmission and motor mounts to the frame. While the torque-tube type requires additional locating elements, such as a Panhard rod, this allows the use of coil springs.)

Some Hotchkiss drive shafts are made in two pieces with another universal joint in the center for greater flexibility, typically in trucks and specialty vehicles built on truck frames. Some installations use rubber mounts to isolate noise and vibration. The 1984–1987 RWD Toyota Corolla (i.e., Corolla SR5 and GT-S) coupe is another example of a car that uses a 2-part Hotchkiss driveshaft with a rubber-mounted center bearing.

This design was the main form of power transmission for most cars from the 1920s through

the 1970s. Presently (circa 2012), it remains common in pick-up trucks, and sport utility vehicles

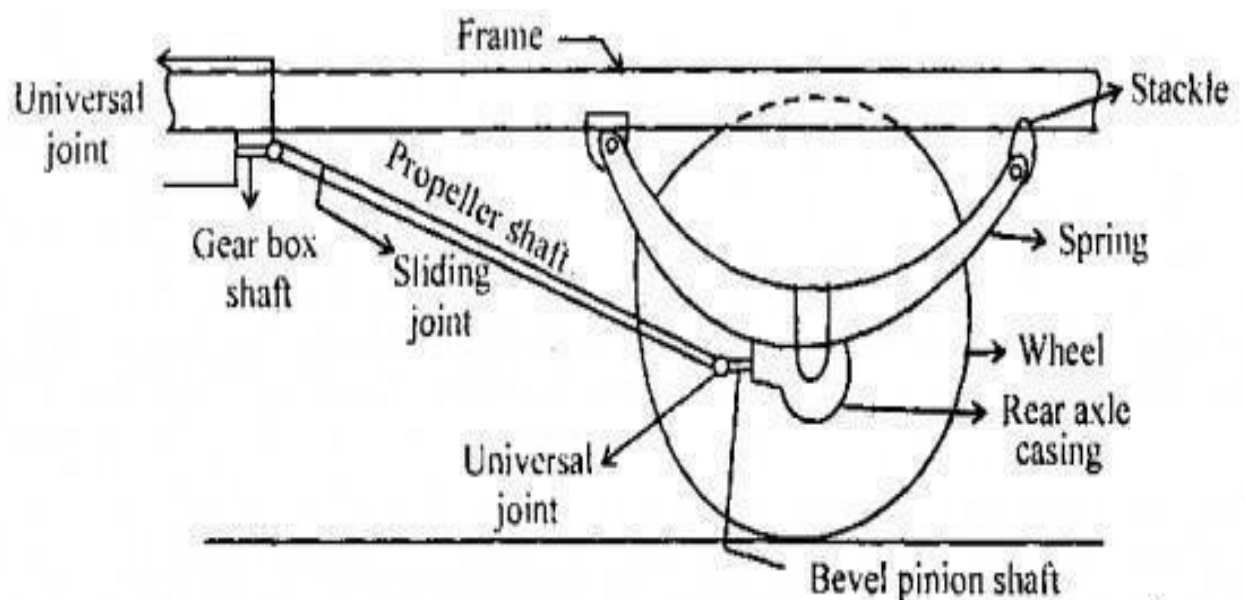



TorquetubeDrive

A torque tube system is a driveshaft technology, often used in automobiles with a front engine and rear drive. It is not as widespread as the Hotchkiss drive, but is still occasionally used to this day. Drive shafts are sometimes also used for other vehicles and machinery.

The "torque" that is referred to in the name is not that of the driveshaft, along the axis of the car, but that applied by the wheels. The design problem that the torque tube solves is how to get the traction forces generated by the wheels to the car frame. The "torque tube" transmits this force by directly coupling the axle differential to the transmission and therefore propels the car forward by pushing on the engine/transmission and then through the engine mounts to the car frame^[citation needed].

In contrast, the Hotchkiss drive has the traction forces transmitted to the car frame by using other suspension components such as leaf springs or trailing arms. A ball and socket type of joint called a "torque ball" is used at one end of the torque tube to allow relative motion between the axle and transmission due to suspension travel. Since the torque tube does not constrain the axle in the lateral (side-to-side) direction a pan hard rod is often used for this purpose. The combination of the pan hard rod and the torque tube allows the easy implementation of soft coil springs in the rear to give good ride quality.

In addition to transmitting the traction forces, the torque tube is hollow and contains the rotating driveshaft. Inside the hollow torque ball is the universal joint of the driveshaft that allows relative motion between the two ends of the driveshaft. In most applications the drive shaft uses a single universal joint which has the disadvantage that it causes speed fluctuations in the driveshaft when the shaft is not straight. The Hotchkiss drive uses two universal joints which has the effect of canceling the speed fluctuations and gives a constant speed even when the shaft is no longer straight.

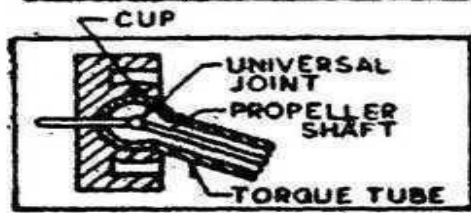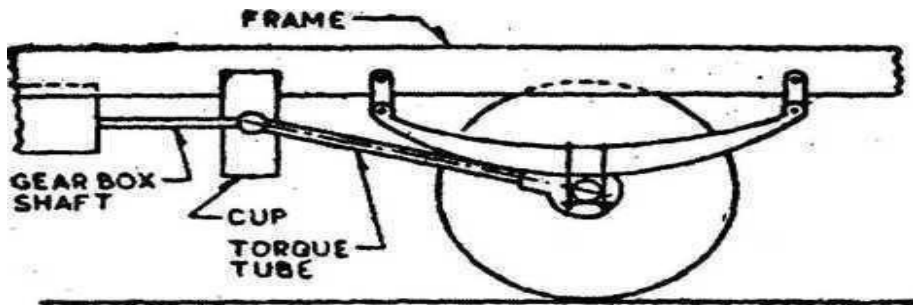

DETAILS OF CUP

UNIT IV
STEERING, BRAKES AND
SUSPENSION SYSTEMS

UNIT-IV

Suspension system;

Suspension system is the term given to the system of springs, shock absorbers and linkages that connects a vehicle to its wheels . It is basically cushion for passengers protects the luggage or any cargo and also itself from damage and wear.

Sir **William Brush** is the father of suspension system in automobiles.

The main role of suspension system are as follows:

- It supports the weight of vehicle.
- Provides smooth ride for the driver and passengers i.e. acts as a cushion.
- Protects your vehicle from damage and wear.
- It also plays a critical role in maintaining self-driving conditions.
- It also keeps the wheels pressed firmly to the ground for traction.
- It isolates the body from road shocks and vibrations which would otherwise be transferred to the passengers and load.

Principle:

When a tire hits an obstruction, there is a reaction force. The size of this reaction force depends on the unsprung mass at each wheel assembly.

In general, the larger the ratio of sprung weight to unsprung weight, the less the body and vehicle occupants are affected by bumps, dips, and other surface imperfections such as small bridges. A large sprung weight to unsprung weight ratio can also impact vehicle control.


No road is perfectly flat i.e. without irregularities. Even a freshly paved highway has subtle imperfections that can interact with a vehicle's wheels. These are the imperfections that apply forces on wheels.

According to **Newton's law of motion** all forces have both magnitude and direction. A bump in the road causes the wheel to move up and down perpendicular to the road surface. The magnitude of

course, depends on whether the wheel is striking a giant bump or a tiny speck. Thus, either the wheel experiences a vertical acceleration as it passes over an imperfection.

The suspension of a car is actually part of the chassis, which comprises all of the important systems located beneath the car's body. These systems include:

- Frame
- Suspension system
- Steering system
- Tires or Wheels

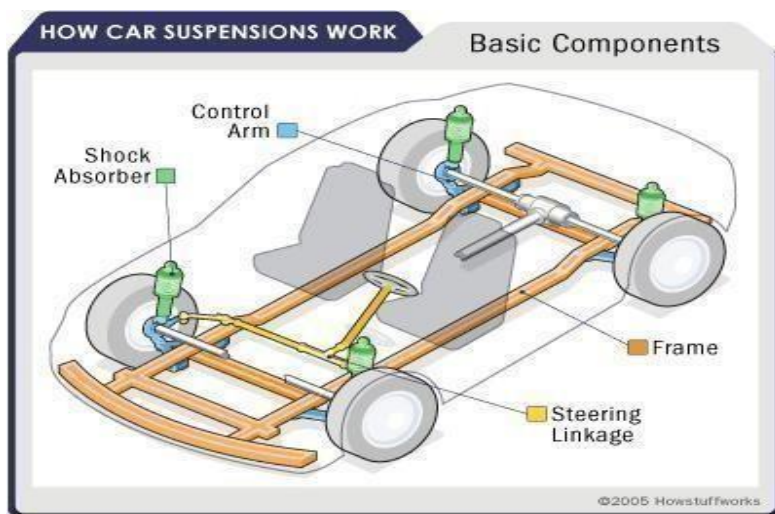

Components of Suspension system;


There are three fundamental components of any suspension system.

- Springs
 - Coil spring
 - Leaf springs
 - Air springs
- Dampers
 - Shock absorbers
 - Struts:-

➤ Anti-sway Bars

- Antiswaybars.

Types of Suspension System;

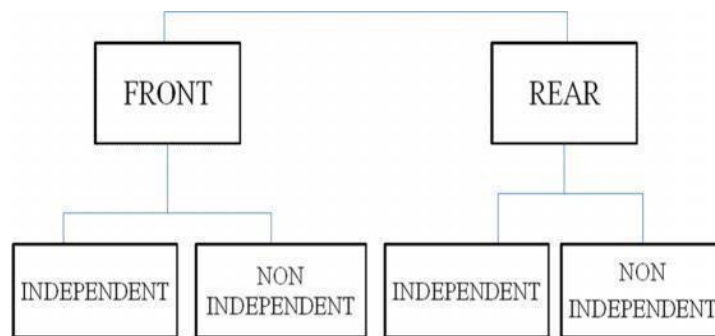

Advantages;

- Comfort to passengers
- Good handling
- Shields the vehicle from damage
- Increases life of vehicle
- Keeps the tires pressed firmly to ground.

Braking System;

A brake is a mechanical device which inhibits motion, slowing or stopping a moving object or preventing its motion. The rest of this article is dedicated to various types of vehicular brakes.

Most commonly brakes use friction between two surfaces pressed together to convert the kinetic energy of the moving object into heat, though other methods of energy conversion may be employed.

For example regenerative braking converts much of the energy to electrical energy, which may be stored for later use. Other methods convert kinetic energy into potential energy in such stored forms as pressurized air or pressurized oil. Eddy current brakes use magnetic fields to convert kinetic energy into electric current in the brake disc, fin, or rail, which is converted into heat. Still other braking methods even transform kinetic energy into different forms, for example by transferring the energy to a rotating flywheel.

Brakes are generally applied to rotating axles or wheels, but may also take other forms such as the surface of a moving fluid (flaps deployed into water or air). Some vehicles use a combination of braking mechanisms, such as drag racing cars with both wheel brakes and a parachute, or airplanes with both wheel brakes and drag flaps raised into the air during landing.

Since kinetic energy increases quadratically with velocity ($k = mv^2/2$) an object moving at 10 m/s has 100 times as much energy as one of the same mass moving at 1 m/s, and consequently the theoretical braking distance, when braking at the traction limit, is 100 times as long. In practice, fast vehicles usually have significant air drag, and energy lost to air drag rises quickly with speed. Almost all wheeled vehicles have a brake of some sort. Even baggage carts and shopping carts may have them for use on a moving ramp. Most fixed-wing aircraft are fitted with wheel brakes on the undercarriage. Some aircraft also feature air brakes designed to reduce their speed in flight.

Notable examples include gliders and some World War II-era aircraft, primarily some fighter aircraft and many dive bombers of the era. These allow the aircraft to maintain a safe speed in a steep descent. The Saab B 17 dive bomber and Vought F4U Corsair fighter used the deployed undercarriage as an air brake. Friction brakes on automobiles store braking heat in the drum brake or disc brake while braking then conduct it to the air gradually. When traveling downhill some vehicles can use their engines to brake.

When the brake pedal of a modern vehicle with hydraulic brakes is pushed, ultimately a piston pushes the brake pad against the brake disc which slows the wheel down. On the brake drum it is similar as the cylinder pushes the brake shoes against the drum which also slows the wheel down. Brakes may be broadly described as using friction, pumping, or electromagnetic. One brake may use several principles: for example, a pump may pass fluid through an orifice to create friction: Frictional brakes are most common and can be divided broadly into "shoe" or "pad" brakes, using an explicit wear surface, and hydrodynamic brakes, such as parachutes, which use friction in a working fluid and do not explicitly wear. Typically the term "friction brake" is used to mean pad/shoe brakes and excludes hydrodynamic brakes, even though hydrodynamic brakes use friction.

Friction (pad/shoe) brakes are often rotating devices with a stationary pad and a rotating wear

surface. Common configurations include shoes that contract to rub on the outside of a rotating drum, such as a band brake; a rotating drum with shoes that expand to rub the inside of a drum, commonly called a "drum brake", although other drum configurations are possible; and pads that pinch a rotating disc, commonly called a "disc brake".

Other brake configurations are used, but less often. For example, PCC trolley brakes include a flat shoe which is clamped to the rail with an electromagnet; the Murphy brake pinches a rotating drum, and the Ausco Lambert disc brake uses a hollow disc (two parallel discs with a structural bridge) with shoes that sit between the disc surfaces and expand laterally. Pumping brakes are often used where a pump is already part of the machinery. For example, an internal-combustion piston motor can have the fuel supply stopped, and then internal pumping losses of the engine create some braking. Some engines use a valve override called a Jake brake to greatly increase pumping losses. Pumping brakes can dump energy as heat, or can be regenerative brakes that recharge a pressure reservoir called a hydraulic accumulator.

Electromagnetic brakes are likewise often used where an electric motor is already part of the machinery. For example, many hybrid gasoline/electric vehicles use the electric motor as a generator to charge electric batteries and also as a regenerative brake. Some diesel/electric railroad locomotives use the electric motors to generate electricity which is then sent to a resistor bank and dumped as heat.

Types of Braking system in Automobile;

- By applications—
 1. Foot Brake,
 2. Handbrake.
- By Method of power—
 1. Mechanical brake,
 2. Hydraulic brake.
 3. Vacuum brake,

4. Electricalbrakeand

5. Airbrake.

□ Bymethodofoperations –

1. Manualbrake,

2. Servobrake.

3. Poweroperation.

□ Byconstruction–

1. Drumtypebrake,

2. Disctypebrake

Anti-lockbrakingsystem(ABS)

Anti-lock braking system (ABS) is an automobile safety system that allows the wheels on a motor vehicle to maintain tractive contact with the road surface according to driver inputs while braking, preventing the wheels from locking up (ceasing rotation) and avoiding uncontrolled skidding. It is an automated system that uses the principles of threshold braking and cadence braking which were practiced by skillful drivers with previous generation braking systems. It does this at a much faster rate and with better control than a driver could manage.

ABS generally offers improved vehicle control and decreases stopping distances on dry and slippery surfaces for many drivers; however, on loose surfaces like gravel or snow-covered pavement, ABS can significantly increase braking distance, although still improving vehicle control.

Since initial widespread use in production cars, anti-lock braking systems have evolved considerably. Recent versions not only prevent wheel lock under braking, but also electronically control the front-to-rear brake bias. This function, depending on its specific capabilities and implementation, is known as electronic brake force distribution (EBD), traction control system, emergency brake assist, or electronic stability control (ESC).

Operation

The anti-lock brake controller is also known as the CAB (Controller Anti-lock Brake). Typically ABS includes a central electronic control unit (ECU), four wheel speed sensors, and at least two hydraulic valves within the brake hydraulics. The ECU constantly monitors the rotational speed of each wheel; if it detects a wheel rotating significantly slower than the others, a condition indicative of impending wheel lock, it actuates the valves to reduce hydraulic pressure to the brake at the affected wheel, thus reducing the braking force on that wheel; the wheel then turns faster.

Conversely, if the ECU detects a wheel turning significantly faster than the others, brake hydraulic pressure to the wheel is increased so the braking force is reapplied, slowing down the wheel. This process is repeated continuously and can be detected by the driver via brake pedal pulsation. Some anti-lock systems can apply or release braking pressure 15 times per second.^[17] Because of this, the wheels of cars equipped with ABS are practically impossible to lock even during panic braking in extreme conditions.

The ECU is programmed to disregard differences in wheel rotative speed below a critical threshold, because when the car is turning, the two wheels towards the center of the curve turn slower than the outer two. For this same reason, a differential is used in virtually all roadgoing vehicles. If a fault develops in any part of the ABS, a warning light will usually be illuminated on the vehicle instrument panel, and the ABS will be disabled until the fault is rectified.

Modern ABS applies individual brake pressure to all four wheels through a control system of hub-mounted sensors and a dedicated micro-controller. ABS is offered or comes standard on most road vehicles produced today and is the foundation for electronic stability control systems, which are rapidly increasing in popularity due to the vast reduction in price of vehicle electronics over the years.

Modern electronic stability control systems are an evolution of the ABS concept. Here, a minimum of two additional sensors are added to help the system work: these are a steering wheel angle sensor, and a gyroscopic sensor. The theory of operation is simple: when the gyroscopic sensor detects that

the direction taken by the car does not coincide with what the steering wheel sensor reports, the ESC software will brake the necessary individual wheel(s) (up to three with the most sophisticated systems), so that the vehicle goes the way the driver intends. The steering wheel sensor also helps in the operation of Cornering Brake Control (CBC), since this will tell the ABS that wheels on the inside of the curve should brake more than wheels on the outside, and by how much.

ABS equipment may also be used to implement a traction control system (TCS) on acceleration of the vehicle. If, when accelerating, the tire loses traction, the ABS controller can detect the situation and take suitable action so that traction is regained. More sophisticated versions of this can also control throttle levels and brakes simultaneously.

Components of ABS

There are four main components of ABS:

- Speed sensors,
- Valves,
- Pump, and
- Controller.

Speed sensors

A speed sensor is used to determine the acceleration or deceleration of the wheel. These sensors use a magnet and a coil of wire to generate a signal. The rotation of the wheel or differential induces a magnetic field around the sensor. The fluctuations of this magnetic field generate a voltage in the sensor. Since the voltage induced in the sensor is a result of the rotating wheel, this sensor can become inaccurate at slow speeds. The slower rotation of the wheel can cause inaccurate fluctuations in the magnetic field and thus cause inaccurate readings to the controller.

Valves

There is a valve in the brake line of each brake controlled by the ABS. On some systems, the valve has three positions:

In position one, the valve is open; pressure from the master cylinder is passed right through to the brake.

In position two, the valve blocks the line, isolating that brake from the master cylinder. This prevents the pressure from rising further should the driver push the brake pedal harder.

In position three, the valve releases some of the pressure from the brake.

The majority of problems with the valve system occur due to clogged valves. When a valve is clogged it is unable to open, close, or change position. An inoperable valve will prevent the system from modulating the valves and controlling pressure supplied to the brakes.

Pump

The pump in the ABS is used to restore the pressure to the hydraulic brakes after the valves have released it. A signal from the controller will release the valve at the detection of wheel slip. After a valve release the pressure supplied from the user, the pump is used to restore a desired amount of pressure to the braking system. The controller will modulate the pump's status in order to provide the desired amount of pressure and reduce slipping.

Controller

The controller is an ECU type unit in the car which receives information from each individual wheel speed sensor, in turn if a wheel loses traction the signal is sent to the controller, the controller will then limit the brake force (EBD) and activate the ABS modulator which actuates the braking valves on and off.

Use

There are many different variations and control algorithms for use in ABS. One of the simpler systems works as follows,

The controller monitors the speed sensors at all times. It is looking for decelerations in the wheel that are out of the ordinary. Right before wheel locks up, it will experience a rapid deceleration.

If left unchecked, the wheel would stop much more quickly than any car could. It might take a car five seconds to stop from 60 mph (96.6 km/h) under ideal conditions, but a wheel that locks up could stop spinning in less than a second.

The ABS controller knows that such a rapid deceleration is impossible, so it reduces the pressure to that brake until it sees an acceleration, then it increases the pressure until it sees the deceleration again. It can do this very quickly, before the tire can actually significantly change speed. The result is that the tire slows down at the same rate as the car, with the brakes keeping the tires very near the point at which they will start to lock up. This gives the system maximum braking power.

This replaces the need to manually pump the brakes while driving on a slippery or a low traction surface, allowing steering even in the most emergency braking conditions.

When the ABS is in operation the driver will feel a pulsing in the brake pedal; this comes from the rapid opening and closing of the valves. This pulsing also tells the driver that the ABS has been triggered. Some ABS systems can cycle up to 16 times per second.

Hydraulic braking system

The disc brake or disk brake is a device for slowing or stopping the rotation of a wheel while it is in motion. A brake disc (or rotor in U.S. English) is usually made of cast iron, but may in some cases be made of composites such as reinforced carbon-carbon or ceramic-matrix composites.

This is connected to the wheel and/or the axle. To stop the wheel, friction material in the form of brake pads (mounted on a device called a brake caliper) is forced mechanically, hydraulically, pneumatically or electromagnetically against both sides of the disc. Friction causes the disc and attached wheel to slow or stop. Brakes (both disc and drum) convert motion to heat, but if the brakes

get too hot, they will become less effective because they cannot dissipate enough heat. This condition of failure is known as brake fade.

Construction of Braking System;

The most common arrangement of hydraulic brakes for passenger vehicles, motorcycles, scooters, and mopeds, consists of the following:

- Brake pedal or lever
- A pushrod (also called an actuating rod)
- A master cylinder assembly containing a piston assembly
- Reinforced hydraulic lines

Brake caliper assembly usually consisting of one or two hollow aluminum or chrome-plated steel pistons (called caliper pistons), a set of thermally conductive brake pads and a rotor (also called a brake disc) or drum attached to an axle. The system is usually filled with a glycol-ether based brake fluid (other fluids may also be used).


At one time, passenger vehicles commonly employed drum brakes on all four wheels. Later, disc brakes were used for the front and drum brakes for the rear. However disc brakes have shown better heat dissipation and greater resistance to 'fading' and are therefore generally safer than drum brakes. So four-wheel disc brakes have become increasingly popular, replacing drums on all but the most basic vehicles. Many two-wheel vehicle designs, however, continue to employ a drum brake for the rear wheel. The following description uses the terminology for and configuration of a simple

In a hydraulic brake system, when the brake pedal is pressed, a pushrod exerts force on the piston(s) in the master cylinder, causing fluid from the brake fluid reservoir to flow into a pressure chamber through a compensating port. This results in an increase in the pressure of the entire hydraulic system, forcing fluid through the hydraulic lines toward one or more calipers where it acts upon one or two caliper pistons sealed by one or more seated O-rings (which prevent leakage of the fluid).

The brake caliper pistons then apply force to the brake pads, pushing them against the spinning rotor, and the friction between the pads and the rotor causes a braking torque to be generated, slowing the vehicle. Heat generated by this friction is either dissipated through vents and channels in the rotor or is conducted through the pads, which are made of specialized heat-tolerant materials such as kevlar or sintered glass.

Subsequent release of the brake pedal/lever allows the spring(s) in my master cylinder assembly to return the master piston(s) back into position. This action first relieves the hydraulic pressure on the caliper, then applies suction to the brake piston in the caliper assembly, moving it back into its housing and allowing the brake pads to release the rotor.

The hydraulic braking system is designed as a closed system: unless there is a leak in the system, none of the brake fluid enters or leaves it, nor does the fluid get consumed through use.

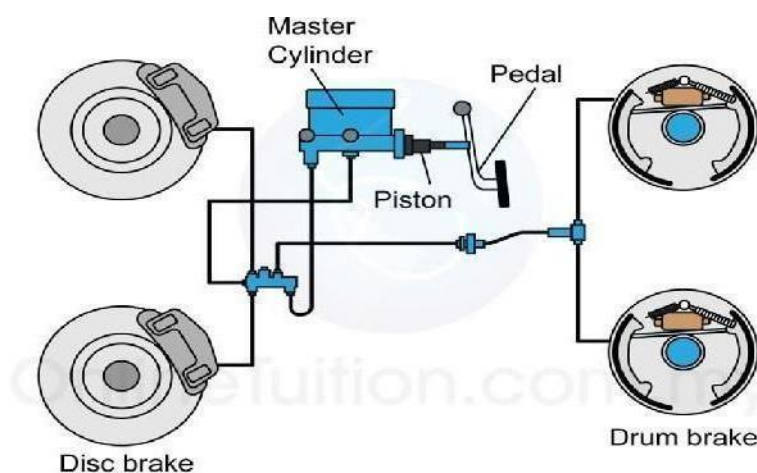

Pneumatic braking system

An air brake or, more formally, a compressed air brake system, is a type of friction brake for vehicles in which compressed air pressing on a piston is used to apply the pressure to the brake pad needed to stop the vehicle.

Air brakes are used in large heavy vehicles, particularly those having multiple trailers which must be linked into the brake system, such as trucks, buses, trailers, and semi-trailers in addition to their use in

railroadtrains.

George Westinghouse first developed air brakes for use in railway service. He patented a safer air brake on March 5, 1872. Westinghouse made numerous alterations to improve his air pressured brake invention, which led to various forms of the automatic brake. In the early 20th century, after its advantages were proven in railway use, it was adopted by manufacturers of trucks and heavy road vehicles


Construction of Braking system;

Air brake systems are typically used on heavy trucks and buses. The system consists of service brakes, parking brakes, a control pedal, and an air storage tank. For the parking brake, there is a disc or drum brake arrangement which is designed to be held in the 'applied' position by spring pressure.

Air pressure must be produced to release these "spring brake" parking brakes. For the service brakes (the ones used while driving for slowing or stopping) to be applied, the brake pedal is pushed, routing the air under pressure (approx 100–120 psi or 690–830 kPa) to the brake chamber, causing the brake to be engaged. Most types of truck air brakes are drum brakes, though there is an increasing trend towards the use of disc brakes in this application. The air compressor draws filtered air from the atmosphere and forces it into high-pressure reservoirs at around 120 psi (830 kPa).

Most heavy vehicles have a gauge within the driver's view, indicating the availability of air pressure for safe vehicle operation, often including warning tones or lights. Setting of the parking/emergency brake releases the pressurized air in the lines between the compressed air storage tank and the brakes, thus allowing the spring actuated parking brake to engage. A sudden loss of air pressure would result in full spring brake pressure immediately.

A compressed air brake system is divided into a supply system and a control system. The supply system compresses, stores and supplies high-pressure air to the control system as well as to additional air operated auxiliary truck systems (gearbox shift control, clutch pedal air assistance servo, etc.).

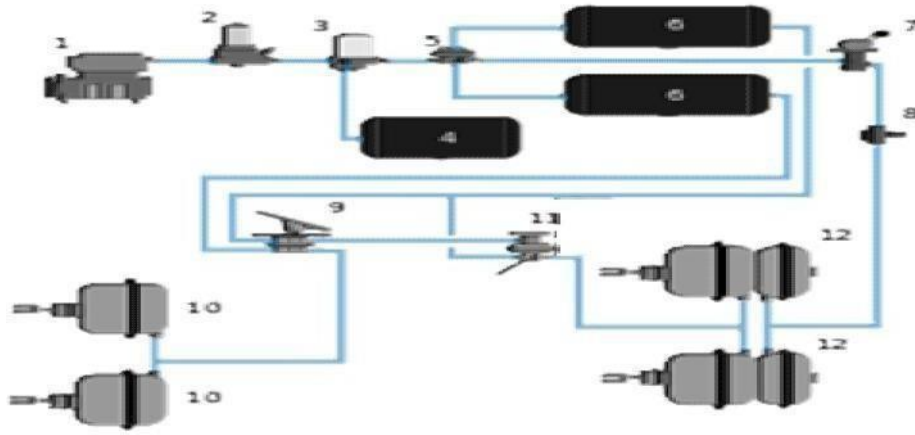

Highly simplified air brake diagram on a commercial road vehicle (does not show all air reservoirs and all applicable air valves). The air compressor is driven by the engine either by crankshaft pulley via a belt or directly from the engine timing gears. It is lubricated and cooled by the engine lubrication and cooling systems.

Compressed air is first routed through a cooling coil and into an air dryer which removes moisture and oil impurities and also may include a pressure regulator, safety valve and smaller purge reservoir. As an alternative to the air dryer, the supply system can be equipped with an anti-freeze device and oil separator. The compressed air is then stored in a reservoir (also called a wet tank) from which it is then distributed via a four way protection valve into the front and rear brake circuit air reservoir, a parking brake reservoir and an auxiliary air supply distribution point. The system also includes various check, pressure limiting, drain and safety valves. Air brake systems may include a wig wag device which deploys to warn the driver if the system air pressure drops too low.

Control system

The control system is further divided into two service brake circuits: the parking brake circuit and the trailer brake circuit. This dual brake circuit is further split into front and rear wheel circuits which receive compressed air from their individual reservoirs for added safety in case of an air leak. The service brakes are applied by means of a brake pedal air valve which regulates both circuits.

The parking brake is the air operated spring brake type where it is applied by spring force in the spring brake cylinder and released by compressed air via a hand control valve. The trailer brake consists of a

direct two line system: the supply line (marked red) and the separate control or service line (marked blue). The supply line receives air from the prime mover park brake air tank via a park brake relay valve and the control line is regulated via the trailer brake relay valve. The operating signals for the relay are provided by the prime mover brake pedal air valve, trailer service brakehand control(subject to a country's relevant heavy vehicle legislation) and the primemover park brake hand control.

AdvantagesofAirBrakes;

Air brakes are used as an alternative to hydraulic brakes which are used on lighter vehicles such as automobiles. Hydraulic brakes use a liquid (hydraulic fluid) to transfer pressure from the brake pedal to the brake shoe to stop the vehicle. Air brakes have several advantages for largemultitrailer vehicles:


- The supply of air is unlimited, so the brake system can never run out of its operating fluid, as hydraulic brakes can. Minor leaks do not result in brake failures.
- Air line couplings are easier to attach and detach than hydraulic lines; there is no danger of letting air into hydraulic fluid. So air brake circuits of trailers can be attached and removed easily by operators with little training.
- Air not only serves as a fluid for transmission of force, but also stores potential energy. So it can serve to control the force applied. Air brake systems include an air tank that stores sufficient energy to stop the vehicle if the compressorfails.
- Air brakes are effective even with considerable leakage, so an air brake system can be designedwithsufficient "fail-safe" capacity tostopthe vehicle safely even whenleaking.

IntroductionofSteeringsystem


Steering is the collection of components, linkages, etc. which allowa vessel (ship,boat) or vehicle (car, motorcycle, bicycle) to follow the desired course. An exception is the case of rail transport by whichrailtrackscombinedtogetherwithrailroadswitches(andsoknownas'points'inBritish

English) provide the steering function.

The most conventional steering arrangement is to turn the front wheels using a hand-operated steering wheel which is positioned in front of the driver, via the steering column, which may contain universal joints (which may also be part of the collapsible steering column design), to allow it to deviate somewhat from a straight line. Other arrangements are sometimes found on different types of vehicles, for example, a tiller or rear-wheel steering. Tracked vehicles such as bulldozers and tanks usually employ differential steering — that is, the tracks are made to move at different speeds or even in opposite directions, using clutches and brakes, to bring about a change of course or direction.

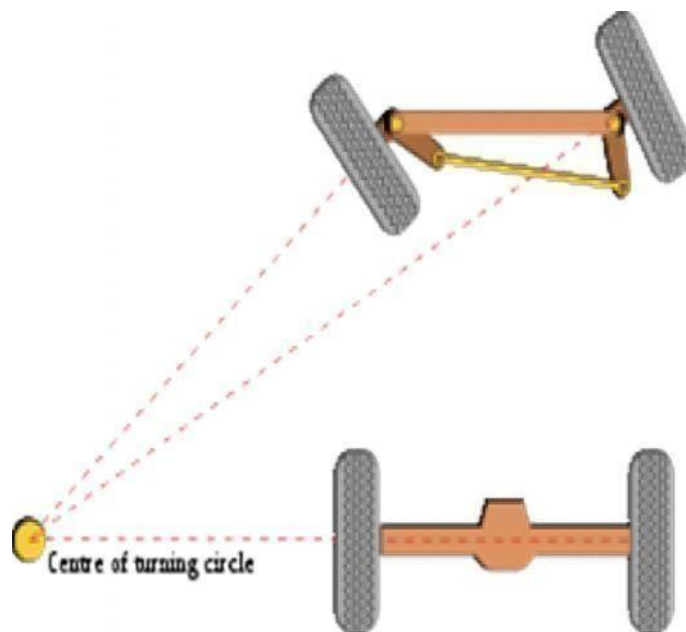

Wheeled vehicle steering - Basic geometry

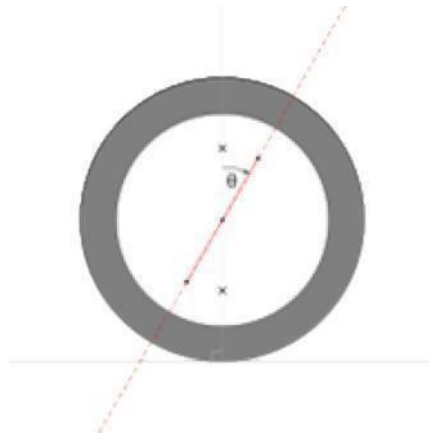


Ackermannsteeringgeometry

Caster angle θ indicates steering pivot line and gray area indicates vehicle's tire with the wheel moving from right to left. A positive caster angle aids in directional stability, as the wheel tends to trail, but a large angle makes steering more difficult.

Curves described by the rear wheels of a conventional automobile. While the vehicle moves with a constant speed its inner and outer rear wheels do not.

The basic aim of steering is to ensure that the wheels are pointing in the desired directions. This is typically achieved by a series of linkages, rods, pivots and gears. One of the fundamental concepts is that of caster angle – each wheel is steered with a pivot point ahead of the wheel; this makes the steering tend to be self-centering towards the direction of travel.

The steering linkages connecting the steering box and the wheels usually conform to a variation of Ackermann steering geometry, to account for the fact that in a turn, the inner wheel is actually travelling a path of smaller radius than the outer wheel, so that the degree of toe suitable for driving in a straight path is not suitable for turns. The angle the wheels make with the vertical plane also influences steering dynam

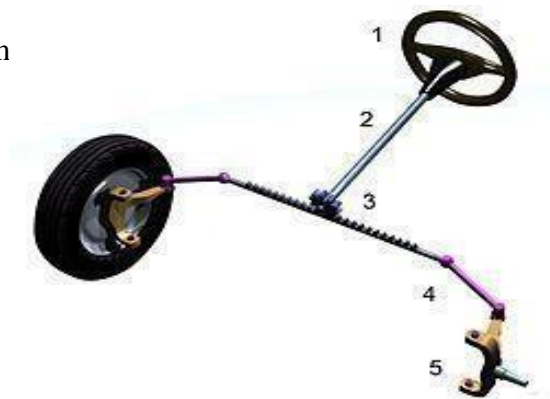

Rack and pinion, recirculating ball, worm and sector

Rack and pinion steering mechanism:

1. Steering wheel;
2. Steering column;
3. Rack and pinion;
4. Tie rod;
5. Kingpin

Rack and pinion unit mounted in the cockpit of an Ariel Atom sports car chassis. For most high volume production, this is usually mounted on the other side of this panel

Steering box of a motor vehicle, the traditional (non-assisted), you may notice that the system allows you to adjust the braking and steering systems, you can also see the attachment system to the frame.

Many modern cars use rack and pinion steering mechanisms, where the steering wheel turns the pinion gear; the pinion moves the rack, which is a linear gear that meshes with the pinion, converting circular motion into linear motion along the transverse axis of the car (side to side motion). This motion applies steering torque to the swivel pin ball joints that replaced previously used kingpins of the stub axle of the steered wheels via tie rods and a short lever arm called the steering arm.

The rack and pinion design has the advantages of a large degree of feedback and direct steering "feel". A disadvantage is that it is not adjustable, so that when it does wear and develop lash, the only cure is replacement.

Older designs often use the recirculating ball mechanism, which is still found on trucks and utility

vehicles. This is a variation on the older sector design; the steering column turns a large screw (the "wormgear") which meshes with a sector of a gear, causing it to rotate about its axis as the wormgear is turned; an arm attached to the axis of the sector moves the Pitman arm, which is connected to the steering linkage and thus steers the wheels. The recirculating ball version of this apparatus reduces the considerable friction by placing large ball bearings between the teeth of the worm and those of the screw; at either end of the apparatus the balls exit from between the two pieces into a channel internal to the box which connects them with the other end of the apparatus, thus they are "recalculated".

The recirculating ball mechanism has the advantage of a much greater mechanical advantage, so that it was found on larger, heavier vehicles while the rack and pinion was originally limited to smaller and lighter ones; due to the almost universal adoption of power steering, however, this is no longer an important advantage, leading to the increasing use of rack and pinion on newer cars.

The recirculating ball design also has a perceptible lash, or "dead spot" on center, where a minute turn of the steering wheel in either direction does not move the steering apparatus; this is easily adjustable via a screw on the end of the steering box to account for wear, but it cannot be entirely eliminated because it will create excessive internal forces at other positions and the mechanism will wear very rapidly. This design is still in use in trucks and other large vehicles, where rapidity of steering and direct feel are less important than robustness, maintainability, and mechanical advantage.

The worm and sector was an older design, used for example in Willys and Chrysler vehicles, and the Ford Falcon (1960s).

Other systems for steering exist, but are uncommon on road vehicles. Children's toys and go-karts often use a very direct linkage in the form of a bellcrank (also commonly known as a Pitman arm) attached directly between the steering column and the steering arms, and the use of cable-operated steering linkages (e.g. the Capstan and Bowstring mechanism) is also found on some home-built vehicles such as soapbox cars and recumbent tricycles.

Steering Gear Boxes;

The steering gears convert the rotary motion of the steering wheel into the to-and-fro motion of the link rod of the steering linkages. Moreover it also provides necessary leverage so that the driver is

able to steer the vehicle without fatigue.

There are various types of steering gearboxes available in automobile.

- Worm and Wheel steering gearbox,
- Cam and double roller steering gearbox,
- Worm and nut steering gearbox,
- Recalculating ball type steering gearbox,
- Rack and pinion steering gearbox,

Power steering

In automobiles, power steering (also known as power assisted steering (PAS) or steering assist system) helps drivers steer by augmenting steering effort of the steering wheel.

Hydraulic or electric actuators add controlled energy to the steering mechanism, so the driver need to provide only a modest effort regardless of conditions. Power steering helps considerably when a vehicle is stopped or moving slowly. Also, power steering provides some feedback of forces acting on the front wheel to give an ongoing sense of how the wheels are interacting with the road; this is typically called "road feel".

Representative power steering systems for cars augment steering effort via an actuator, a hydraulic cylinder, which is part of a servo system. These systems have a direct mechanical connection between the steering wheel and the linkage that steers the wheels.

This means that power-steering system failure (to augment effort) still permits the vehicle to be steered using manual effort alone.

Other power steering systems (such as those in the largest off-road construction vehicles) have no direct mechanical connection to the steering linkage; they require power. Systems of this kind, with no mechanical connection, are sometimes called "drive by wire" or "steer by wire", by analogy with aviation's "fly-by-wire". In this context, "wire" refers to electrical cables that carry power and data, not thin-wire-rope mechanical control cables.

In other power steering systems, electric motors provide the assistance instead of hydraulic systems. As with hydraulic types, power to the actuator (motor, in this case) is controlled by the rest of the power-steering system.

Some construction vehicles have a two-part frame with a rugged hinge in the middle; this hinge allows the front and rear axles to become non-parallel to steer the vehicle. Opposing hydraulic cylinders move the halves of the frame relative to each other to steer.


Power steering helps the driver of a vehicle to steer by directing some of the power to assist in swiveling the steered road wheels about their steering axes. As vehicles have become heavier and switched to front wheel drive, particularly using negative offset geometry, along with increases in tire width and diameter, the effort needed to turn the wheels about their steering axis has increased, often to the point where major physical exertion would be needed were it not for power assistance.

To alleviate this auto makers have developed power steering systems: or more correctly power-assisted steering—on road going vehicles there has to be a mechanical linkage as a failsafe. There are two types of power steering systems; hydraulic and electric/electronic. A hydraulic- electric hybrid system is also possible. A hydraulic power steering (HPS) uses hydraulic pressure supplied by an engine-driven pump to assist the motion of turning the steering wheel. Electric power steering (EPS) is more efficient than the hydraulic power steering, since the electric power steering motor only needs to provide assistance when the steering wheel is turned, whereas the hydraulic pump must run constantly.

In EPS, the amount of assistance is easily tunable to the vehicle type, road speed, and even driver preference. An added benefit is the elimination of environmental hazard posed by leakage and disposal of hydraulic power steering fluid. In addition, electrical assistance is not lost when the engine fails or stalls, whereas hydraulic assistance stops working if the engine stops, making the steering doubly heavy as the driver must now turn not only the very heavy steering—without any help—but also the power-assistance system itself.

Speed Sensitive Steering

An outgrowth of power steering is speed sensitive steering, where the steering is heavily assisted at low speed and lightly assisted at high speed. The auto makers perceive that motorists might need to make large steering inputs while manoeuvring for parking, but not while traveling at high speed. The first vehicle with this feature was the Citroën SM with its Diravi layout [citation needed], although rather than altering the amount of assistance as in modern power steering systems, it altered the pressure on a centring cam which made the steering wheel try to "spring" back to the straight-ahead position. Modern speed-sensitive power steering systems reduce the mechanical or electrical assistance as the vehicle speed increases, giving a more direct feel. This feature is gradually becoming more common.

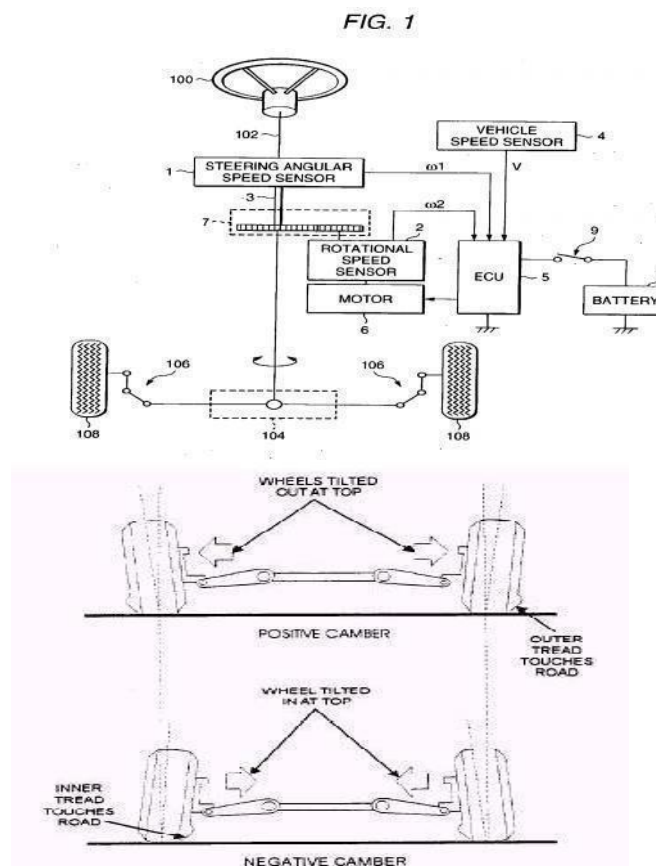

UNIT V
ALTERNATIVE ENERGY
SOURCES

UNIT V

ALTERNATIVE ENERGY SOURCES

5.1. Natural Gas as a Fuel in Automobile;

A natural gas vehicle (NGV) is an alternative fuel vehicle that uses compressed natural gas (CNG) or liquefied natural gas (LNG) as a cleaner alternative to other fossil fuels. Natural gas vehicles should not be confused with vehicles powered by propane (LPG), which is a fuel with a fundamentally different composition. Worldwide, there were 14.8 million natural gas vehicles by 2011, led by Iran with 2.86 million, Pakistan (2.85 million), Argentina (2.07 million), Brazil (1.70 million), and India (1.10 million).

The Asia-Pacific region leads the world with 6.8 million NGVs, followed by Latin America with 4.2 million vehicles. In the Latin American region almost 90% of NGVs have bi-fuel engines, allowing these vehicles to run on either gasoline or CNG. In Pakistan, almost every vehicle converted to (or manufactured for) alternative fuel use typically retains the capability to run on ordinary gasoline.

As of 2009, the U.S. had a fleet of 114,270 compressed natural gas (CNG) vehicles, mostly buses; 147,030 vehicles running on liquefied petroleum gas (LPG); and 3,176 vehicles liquefied natural gas (LNG). Other countries where natural gas-powered buses are popular include India, Australia, Argentina, and Germany. In OECD countries there are around 500,000 CNG vehicles. Pakistan's market share of NGVs was 61.1% in 2010, followed by Armenia with 32%, and Bolivia with 20%. The number of NGV refueling stations has also increased, to 18,202 worldwide as of 2010, up 10.2% from the previous year.

Existing gasoline-powered vehicles may be converted to run on CNG or LNG, and can be dedicated (running only on natural gas) or bi-fuel (running on either gasoline or natural gas). Diesel engines for heavy trucks and busses can also be converted and can be dedicated with the addition of new heads containing spark ignition systems, or can be run on a blend of diesel and natural gas, with the primary fuel being natural gas and a small amount of diesel fuel being used

as an ignition source.

An increasing number of vehicles worldwide are being manufactured to run on CNG. Until recently, the Honda Civic GX was the only NGV commercially available in the US market., however now Ford, GM and Ram have bi-fuel offerings in their vehicle lineup. Ford's approach is to offer a bi-fuel pre-kit as a factory option, and then have the customer choose an authorized partner to install the natural gas equipment.

In 2006 the Brazilian subsidiary of FIAT introduced the Fiat Siena Tetra fuel, a four-fuel car developed under Magneti Marelli of Fiat Brazil. This automobile can run on natural gas (CNG); 100% ethanol (E100); E20 to E25 gasoline blend, Brazil's mandatory gasoline; and pure gasoline, though no longer available in Brazil it is used in neighboring countries.

NGV filling stations can be located anywhere that natural gas lines exist. Compressors (CNG) or liquification plants (LNG) are usually built on large scale but with CNG small home refueling stations are possible. A company called FuelMaker pioneered such a system called Phill Home Refueling Appliance (known as "Phill"), which they developed in partnership with Honda for the American GX model. Phill is now manufactured and sold by BRC FuelMaker, a division of Fuel Systems Solutions, Inc.

CNG may also be mixed with biogas, produced from landfills or wastewater, which doesn't increase the concentration of carbon in the atmosphere. Despite its advantages, the use of natural gas vehicles faces several limitations, including fuel storage and infrastructure available for delivery and distribution at fueling stations. CNG must be stored in high pressure cylinders (3000psi to 3600psi operation pressure), and LNG must be stored in cryogenic cylinders (-260F to -200F).

These cylinders take up more space than gasoline or diesel tanks that can be molded in intricate shapes to store more fuel and use less on-vehicle space. CNG tanks are usually located in the vehicle's trunk or pickup bed, reducing the space available for other cargo. This problem can be solved by installing the tanks under the body of the vehicle, or on the roof (typical for busses), leaving cargo areas free.

As with other alternative fuels, other barriers for widespread use of NGVs are natural gas

distribution and refueling stations as well as the low number of CNG and LNG stations. CNG-

powered vehicles are considered to be safer than gasoline-powered vehicles **5.2. Liquefied**

petroleum gas as a Fuel in Automobile;

Liquefied petroleum gas or liquid petroleum gas (LPG or LP gas), also referred to as simply propane or butane, is a flammable mixture of hydrocarbon gases used as a fuel in heating appliances, cooking equipment, and vehicles. It is increasingly used as an aerosol propellant and a refrigerant, replacing chlorofluorocarbons in an effort to reduce damage to the ozone layer.

When specifically used as a vehicle fuel it is often referred to as auto gas.

Varieties of LPG bought and sold include mixes that are primarily propane (C₃H₈), primarily butane (C₄H₁₀) and, most commonly, mixes including both propane and butane. In winter, the mixes contain more propane, while in summer, they contain more butane. In the United States, primarily two grades of LPG are sold: commercial propane and HD-5. These specifications are published by the Gas Processors Association (GPA) and the American Society of Testing and Materials (ASTM). Propane/butane blends are also listed in these specifications.

Propylene, butylenes and various other hydrocarbons are usually also present in small concentrations. HD-5 limits the amount of propylene that can be placed in LPG to 5%, and is utilized as an autogas specification. A powerful odorant, ethanethiol, is added so that leaks can be detected easily. The international standard is EN 589. In the United States, tetrahydrothiophene (thiophane) or amyl mercaptan are also approved odorants,[5] although neither is currently being utilized.

LPG is prepared by refining petroleum or "wet" natural gas, and is almost entirely derived from fossil fuel sources, being manufactured during the refining of petroleum (crude oil), or extracted from petroleum or natural gas streams as they emerge from the ground. It was first produced in 1910 by Dr. Walter Snelling, and the first commercial products appeared in 1912. It currently provides about 3% of all energy consumed, and burns relatively cleanly with no soot and very few sulfur emissions.

As it is a gas, it does not pose ground or water pollution hazards, but it can cause air pollution. LPG has a typical specific calorific value of 46.1 MJ/kg compared with 42.5 MJ/kg for fuel oil and 43.5 MJ/kg for premium grade petrol (gasoline).[6] However, its energy density per volume unit of 26 MJ/L is lower than either that of petrol or fuel oil, as its relative density is lower (about 0.5–0.58, compared to 0.71–0.77 for gasoline).

As its boiling point is below room temperature, LPG will evaporate quickly at normal temperatures and pressures and is usually supplied in pressurised steel vessels. They are typically filled to 80–85% of their capacity to allow for thermal expansion of the contained liquid. The ratio between the volumes of the vaporized gas and the liquefied gas varies depending on composition, pressure, and temperature, but is typically around 250:1.

The pressure at which LPG becomes liquid, called its vapour pressure, likewise varies depending on composition and temperature; for example, it is approximately 220 kilopascals (32 psi) for pure butane at 20 °C (68 °F), and approximately 2,200 kilopascals (320 psi) for pure propane at 55 °C (131 °F). LPG is heavier than air, unlike natural gas, and thus will flow along floors and tend to settle in low spots, such as basements. There are two main dangers from this. The first is a possible explosion if the mixture of LPG and air is within the explosive limits and there is an ignition source. The second is suffocation due to LPG displacing air, causing a decrease in oxygen concentration.

Large amounts of LPG can be stored in bulk cylinders and can be buried underground.

Biodiesel as a Fuel in Automobile;

Biodiesel and conventional diesel vehicles are one in the same. Although light-, medium-, and heavy-duty diesel vehicles are not technically "alternative fuel" vehicles, many are capable of running on biodiesel. Biodiesel, which is most often used as a blend with regular diesel fuel, can be used in many diesel vehicles without any engine modification. The most common biodiesel blend is B20, which is 20% biodiesel and 80% conventional diesel. B5 (5% biodiesel, 95% diesel) is also commonly used in fleets.

Before using biodiesel, be sure to check your engine warranty to ensure that higher-level blends

(all OEMs accept the use of B5 and many accept the use of B20) of this alternative fuel don't void or affect it. High-level biodiesel blends (blends over B20) can have a solvency effect in engines and fuel systems that previously used petroleum diesel which may result in degraded seals and clogged fuel filters.

Biodiesel improves fuel lubricity and raises the cetane number of the fuel. Diesel engines depend on the lubricity of the fuel to keep moving parts from wearing prematurely. Federal regulations have gradually reduced allowable fuel sulfur to only 15 parts per million, which has often resulted in lowered aromatics content in diesel fuel. One advantage of biodiesel is that it can impart adequate lubricity to diesel fuels at blend levels as low as 1%.

Hybrid electric vehicle;

A hybrid electric vehicle (HEV) is a type of hybrid vehicle and electric vehicle which combines a conventional internal combustion engine (ICE) propulsion system with an electric propulsion system. The presence of the electric powertrain is intended to achieve either better fuel economy than a conventional vehicle or better performance. There are a variety of HEV types, and the degree to which they function as EVs varies as well. The most common form of HEV is the hybrid electric car, although hybrid electric trucks (pickups and tractors) and buses also exist.

Modern HEVs make use of efficiency-improving technologies such as regenerative braking, which converts the vehicle's kinetic energy into electric energy to charge the battery, rather than wasting it as heat energy as conventional brakes do. Some varieties of HEVs use their internal combustion engine to generate electricity by spinning an electrical generator (this combination is known as a motor-generator), to either recharge their batteries or to directly power the electric drive motors

Many HEVs reduce idle emissions by shutting down the ICE at idle and restarting it when needed; this is known as a start-stop system. A hybrid-electric produces less emissions from its ICE than a comparably sized gasoline car, since an HEV's gasoline engine is usually smaller than a comparably sized pure gasoline-burning vehicle (natural gas and propane fuels produce lower emissions) and if not used to directly drive the car, can be geared to run at maximum

efficiency, further improving fuel economy.

In 1901 Ferdinand Porsche developed the Lohner-Porsche Mixte Hybrid, the first gasoline-electric hybrid automobile in the world. The hybrid-electric vehicle did not become widely available until the release of the Toyota Prius in Japan in 1997, followed by the Honda Insight in 1999. While initially perceived as unnecessary due to the low cost of gasoline, worldwide increases in the price of petroleum caused many automakers to release hybrids in the late 2000s; they are now perceived as a core segment of the automotive market of the future.

About 9 million hybrid electric vehicles have been sold worldwide by October 2014, led by Toyota Motor Company (TMC) with more than 7 million Lexus and Toyota hybrids sold as of September 2014, followed by Honda Motor Co., Ltd. with cumulative global sales of more than 1.35 million hybrids as of June 2014, Ford Motor Corporation with over 375 thousand hybrids sold in the United States through September 2014, and the Hyundai Group with cumulative global sales of 200 thousand hybrids as of March 2014, including both Hyundai Motors and Kia Motors hybrid models.

Worldwide sales of hybrid vehicles produced by TMC reached 1 million units in May 2007; 2 million in August 2009; and passed the 5 million mark in March 2013. As of December 2013, worldwide hybrid sales are led by the Toyota Prius lift back, with cumulative sales of 3.17 million units, and available in almost 80 countries and regions.

The Prius nameplate has sold 4.2 million hybrids and plug-in hybrids up to December 2013. The United States is the world's largest hybrid market with over 3 million hybrid automobiles and SUVs sold through October 2013, followed by Japan with more than 2.6 million hybrids sold through September 2013. The Prius is the top-selling hybrid car in the U.S. market, passing the 1 million milestones in April 2011. Cumulative sales of the Prius in Japan reached the 1 million mark in August 2011.

Fuel Cell;

A Fuel Cell is an electrochemical device that combines hydrogen and oxygen to produce electricity, with water and heat as its by-product. Since conversion of the fuel to energy takes

place via an electrochemical process, not combustion. It is a clean, quiet and highly efficient process- two to three times more efficient than fuel burning.

It operates similarly to a battery, but it does not run down nor does it require recharging. As long as fuel is supplied, a Fuel Cell will produce both energy and heat. A Fuel Cell consists of two catalyst-coated electrodes surrounding an electrolyte. One electrode is an anode and the other is a cathode. The process begins when Hydrogen molecules enter the anode. The catalyst coating separates hydrogen's negatively charged electrons from the positively charged protons. The electrolyte allows the protons to pass through to the cathode, but not the electrons.

Instead the electrons are directed through an external circuit which creates electrical current. While the electrons pass through the external circuit, oxygen molecules pass through the cathode. There the oxygen and the protons combine with the electrons after they have passed through the external circuit. When the oxygen and the protons combine with the electrons it produces water and heat. Individual fuel cells can then be placed in a series to form a fuel cell stack. The stack can be used in a system to power a vehicle or to provide stationary power to a building.

